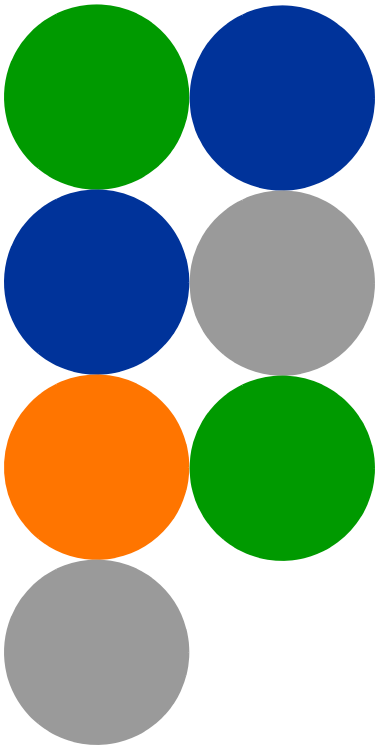

AlvariSTAR

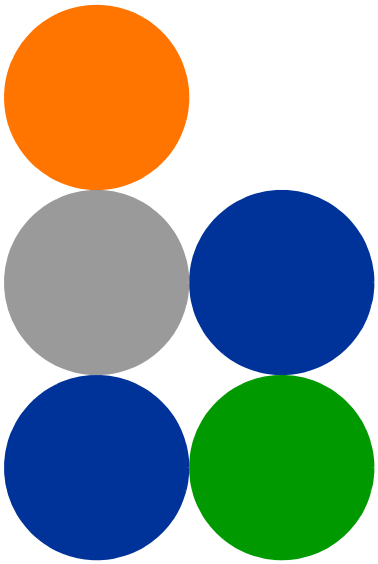

User Manual

SW Version 5.0
January 2011
P/N 215979

Document History

Topic	Description	Date Issued
Version 4.0 is regarded as the first publication.		December 2008
Single platform for NMS and Local CRAFT Utility	The manual covers both AlvariSTAR and AlvariCRAFT. Unless otherwise stated, The features are applicable to both applications.	Version 4.1, March 2009
Password Policy	New feature enabling to set a policy for all passwords.	Version 4.1, March 2009
Watchdog	External application for monitoring the NMS server, LDAP and database servers	Version 4.1, March 2009
Context Menus	New approach in accessing most of the functions via right click menus instead of buttons.	Version 4.5, September 2009
Dynamic Column Selection	Ability to select which columns are displayed in tables and to pack columns in order to fit into the available space.	Version 4.5, September 2009
Filters	Enhanced Filter Criteria Manager now allows aggregating multiple selection criteria within the same filter and using negated selection criteria.	Version 4.5, September 2009
File Manager	New manager for handling files stored in the database.	Version 4.5, September 2009
View Filters	Quickly switch between various types of equipment that are displayed in the Equipment Manager and the various types of files that are displayed in the File Manager.	Version 4.5, September 2009
Summaries	Real time summary counts at the bottom of the Equipment Manager and File Manager.	Version 4.5, September 2009
Task Creation	New wizard transforms task creation into a 3 step process.	Version 4.5, September 2009
Remote Access	Web Portal for launching any application in StarSuite and ability to access the AlvariSTAR server via the Java Web Start software framework.	Version 4.5, September 2009
The Equipment Manager	Updated	Version 4.5, October 2009
The Unified (All Network Elements) View	Column structure updates	Version 4.7, June 2010

Topic	Description	Date Issued
The Equipment Editor	Column structure updates	Version 4.7, June 2010
Discovery Settings Manager	Restructured	Version 4.7, June 2010
NBI Notifications Global Settings	New feature	Version 4.7, June 2010
Discovery Task	Renamed Range Discovery Task. Added SNMP versions: v1, v2c, v3.	Version 4.7, June 2010
External Entities Mapping	New feature	Version 4.7, June 2010
User Domain Manager	New feature	Version 4.7, June 2010
Configuration Management	New chapter	Version 4.7, June 2010
Appendix C	New appendix describing how to connect the NMS to an external LDAP server	Version 4.7, June 2010
Appendix D	New appendix describing how to use Google Earth to view the network's topography	Version 4.7, June 2010
Appendix E	New appendix describing SNMP version compatibility for each supported device	Version 4.7, June 2010
Management Functions Section 1.3.5	Updated: Added CPE Types Selector and Map Refresh Rate (previously File Generation Parameters) to Administration. New Administration functions: Export Site Coordinates, Import Site Coordinates. Security Management: Updated - added the functions of External Entities Mapping and User Domain Manager introduced in Version 4.7.	Version 4.8, October 2010
Using Filters Section 1.5.5.1	New feature - Edit Filter	Version 4.8, October 2010
Toggle Counter Section 3.3.1.5	New feature	Version 4.8, October 2010
Task Rerun Section 5.2.9	New feature	Version 4.8, October 2010

Topic	Description	Date Issued
Equipment Manager Section 2.1	The Unified View: Added capture, removed Standby Status, added Operational Status. Modified description of management functions New, Cut Through, Open Alarms, Unmanage, Backup Configuration, Export. Network Element Discovery: New section. The Network Element Editor: Updated name (was Equipment Editor), modified section.	Version 4.8, October 2010
Configuration Management chapter	Removed (available Configuration Management functions depend on installed Device Driver and are described in the relevant Device Driver manual).	Version 4.8, October 2010
Administration chapter	Added: ■ CPE Types Selector (moved from Configuration Management) ■ Map Refresh Rate (previously File Generation Parameters, moved from Configuration Management. ■ Export Site Coordinates (new function) ■ Import Site Coordinates (new function)	Version 4.8, October 2010
Local CRAFT Utility	Updated note in Equipment Manager	Version 4.8, March 2011
Updated Figures	The Main Window, Equipment Manager, Discovery Settings Manager, Active Events, Events History, Event Filter Manager, Event Template Manager, Script Command Manager, Event Forwarding NBI Manager, Task Manager, File Manager, Contact Manager, Audit Log Manager, User Manager, User Profile Manager, User Session Monitor	Version 4.8, March 2011
Event Forwarding NBI Manager	Added note-this is a licensed feature	Version 4.8, March 2011
CPE Types Selector	Removed	Version 5.0, November 2011
Severity Filter Section 3.3.1.3	New	Version 5.0, November 2011
Show Cleared Events Section 3.3.1.4	New	Version 5.0, November 2011
Configuration Management	New. Moved Template Manager general section from relevant Device Driver Manual.	Version 5.0, November 2011

Topic	Description	Date Issued
Task Manager Section 5.2	Revised and improved. Added Performance Collection (SNMP Based) and Multiple Configuration (Template Based) tasks which were previously in specific Device Driver Manuals.	Version 5.0, November 2011
Management Functions Section 1.3.5	Updated	Version 5.0, November 2011
The Web Portal	Removed from manual (was section B.2)	Version 5.0, November 2011
Report Generator Section 5.6	New feature, availability depends in installed Device Drivers	Version 5.0, November 2011

Legal Rights

© Copyright 2012 Alvarion Ltd. All rights reserved.

The material contained herein is proprietary, privileged, and confidential and owned by Alvarion or its third party licensors. No disclosure thereof shall be made to third parties without the express written permission of Alvarion Ltd.

Alvarion Ltd. reserves the right to alter the equipment specifications and descriptions in this publication without prior notice. No part of this publication shall be deemed to be part of any contract or warranty unless specifically incorporated by reference into such contract or warranty.

Trade Names

Alvarion®, BreezeCOM®, WALKair®, WALKnet®, BreezeNET®, BreezeACCESS®, BreezeMAX®, BreezeLITE®, 4Motion® and/or other products and/or services referenced here in are either registered trademarks, trademarks or service marks of Alvarion Ltd.

All other names are or may be the trademarks of their respective owners.

"WiMAX Forum" is a registered trademark of the WiMAX Forum. "WiMAX", the WiMAX Forum logo, "WiMAX Forum Certified", and the WiMAX Forum Certified logo are trademarks of the WiMAX Forum.

Statement of Conditions

The information contained in this manual is subject to change without notice. Alvarion Ltd. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual or equipment supplied with it.

Warranties and Disclaimers

All Alvarion Ltd. ("Alvarion") products purchased from Alvarion or through any of Alvarion's authorized resellers are subject to the following warranty and product liability terms and conditions.

Exclusive Warranty

(a) Alvarion warrants that the Product hardware it supplies and the tangible media on which any software is installed, under normal use and conditions, will be free from significant defects in materials and workmanship for a period of fourteen (14) months from the date of shipment of a given Product to Purchaser (the "Warranty Period"). Alvarion will, at its sole option and as Purchaser's sole remedy, repair or replace any defective Product in accordance with Alvarion' standard R&R procedure.

(b) With respect to the Firmware, Alvarion warrants the correct functionality according to the attached documentation, for a period of fourteen (14) month from invoice date (the "Warranty Period"). During the Warranty Period, Alvarion may release to its Customers firmware updates, which include additional performance improvements and/or bug fixes, upon availability (the "Warranty"). Bug fixes, temporary patches and/or workarounds may be supplied as Firmware updates.

Additional hardware, if required, to install or use Firmware updates must be purchased by the Customer. Alvarion will be obligated to support solely the two (2) most recent Software major releases.

ALVARION SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY PURCHASER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR IMPROPER TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING OR OTHER HAZARD.

Disclaimer

(a) The Software is sold on an "AS IS" basis. Alvarion, its affiliates or its licensors MAKE NO WARRANTIES, WHATSOEVER, WHETHER EXPRESS OR IMPLIED, WITH RESPECT TO THE SOFTWARE AND THE ACCOMPANYING DOCUMENTATION. ALVARION SPECIFICALLY DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT WITH RESPECT TO THE SOFTWARE. UNITS OF PRODUCT (INCLUDING ALL THE SOFTWARE) DELIVERED TO PURCHASER HEREUNDER ARE NOT FAULT-TOLERANT AND ARE NOT DESIGNED, MANUFACTURED OR INTENDED FOR USE OR RESALE IN APPLICATIONS WHERE THE FAILURE, MALFUNCTION OR INACCURACY OF PRODUCTS CARRIES A RISK OF DEATH OR BODILY INJURY OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE ("HIGH RISK ACTIVITIES"). HIGH RISK ACTIVITIES MAY INCLUDE, BUT ARE NOT LIMITED TO, USE AS PART OF ON-LINE CONTROL SYSTEMS IN HAZARDOUS ENVIRONMENTS REQUIRING FAIL-SAFE PERFORMANCE, SUCH AS IN THE OPERATION OF NUCLEAR FACILITIES, AIRCRAFT NAVIGATION OR COMMUNICATION SYSTEMS, AIR TRAFFIC CONTROL, LIFE SUPPORT MACHINES, WEAPONS SYSTEMS OR OTHER APPLICATIONS REPRESENTING A SIMILAR DEGREE OF POTENTIAL HAZARD. ALVARION SPECIFICALLY DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR HIGH RISK ACTIVITIES.

(b) PURCHASER'S SOLE REMEDY FOR BREACH OF THE EXPRESS WARRANTIES ABOVE SHALL BE REPLACEMENT OR REFUND OF THE PURCHASE PRICE AS SPECIFIED ABOVE, AT ALVARION'S OPTION. TO THE FULLEST EXTENT ALLOWED BY LAW, THE WARRANTIES AND REMEDIES SET FORTH IN THIS AGREEMENT ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING BUT NOT LIMITED TO WARRANTIES, TERMS OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, SATISFACTORY QUALITY, CORRESPONDENCE WITH DESCRIPTION, NON-INFRINGEMENT, AND ACCURACY OF INFORMATION GENERATED. ALL OF WHICH ARE EXPRESSLY DISCLAIMED. ALVARION' WARRANTIES HEREIN RUN ONLY TO PURCHASER, AND ARE NOT EXTENDED TO ANY THIRD PARTIES. ALVARION NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS.

Limitation of Liability

(a) ALVARION SHALL NOT BE LIABLE TO THE PURCHASER OR TO ANY THIRD PARTY, FOR ANY LOSS OF PROFITS, LOSS OF USE, INTERRUPTION OF BUSINESS OR FOR ANY INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES OF ANY KIND, WHETHER ARISING UNDER BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE AND WHETHER BASED ON THIS AGREEMENT OR OTHERWISE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

(b) TO THE EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL THE LIABILITY FOR DAMAGES HEREUNDER OF ALVARION OR ITS EMPLOYEES OR AGENTS EXCEED THE PURCHASE PRICE PAID FOR THE PRODUCT BY PURCHASER, NOR SHALL THE AGGREGATE LIABILITY FOR DAMAGES TO ALL PARTIES REGARDING ANY PRODUCT EXCEED THE PURCHASE PRICE PAID FOR THAT PRODUCT BY THAT PARTY (EXCEPT IN THE CASE OF A BREACH OF A PARTY'S CONFIDENTIALITY OBLIGATIONS).

Important Notice

This user manual is delivered subject to the following conditions and restrictions:

- This manual contains proprietary information belonging to Alvarion Ltd. Such information is supplied solely for the purpose of assisting properly authorized users of the respective Alvarion products.
- No part of its contents may be used for any other purpose, disclosed to any person or firm or reproduced by any means, electronic and mechanical, without the express prior written permission of Alvarion Ltd.
- The text and graphics are for the purpose of illustration and reference only. The specifications on which they are based are subject to change without notice.
- The software described in this document is furnished under a license. The software may be used or copied only in accordance with the terms of that license.
- Information in this document is subject to change without notice. Corporate and individual names and data used in examples herein are fictitious unless otherwise noted.
- Alvarion Ltd. reserves the right to alter the equipment specifications and descriptions in this publication without prior notice. No part of this publication shall be deemed to be part of any contract or warranty unless specifically incorporated by reference into such contract or warranty.
- The information contained herein is merely descriptive in nature, and does not constitute an offer for the sale of the product described herein.
- Any changes or modifications of equipment, including opening of the equipment not expressly approved by Alvarion Ltd. will void equipment warranty and any repair thereafter shall be charged for. It could also void the user's authority to operate the equipment.

About AlvariSTAR

AlvariSTAR is a comprehensive, Carrier-Class Network Management System (NMS) for Broadband Wireless Access products-based networks. AlvariSTAR is designed for today's most advanced service provider Network Operation Centers (NOCs), providing the network OA&M staff and managers with all the network surveillance, monitoring and configuration capabilities required in order to effectively manage the network while keeping the resources and expenses at a minimum.

AlvariSTAR provides the following network management functionality:

- Equipment Management, allowing viewing of devices according to various search criteria, access to devices' dependent features, such as device configuration managers and maps, access to the Configuration Backup Task for creating backup files for a selected device, exporting general information of selected devices to a Commas Separated Value (CSV) file, and other tasks according to the managed device family.
- Single and Multiple Device Management, allowing comprehensive configuration and management of devices.
- Location Management, allowing definition and organization of hierarchical locations and associating them with maps and other attributes.
- Discovery Settings, allowing management of device discovery for identifying and adding existing devices to the managed devices database.
- Active Events, providing alerts and real-time updates of defined alarms.
- Event History Management, providing the ability to query for alarms in specific time intervals.
- Event Template Management, allowing customization and management of event templates according to specific preferences and needs.
- Event Forwarding to other Network Management Systems.
- Topology, providing Geographical hierarchical topology views for selected objects.

- Task Management, allowing definition and scheduling of system-wide background tasks, including:
  - » Network Discovery, allowing to scan the network for new devices
  - » Database Aging, allowing automation of database management tasks.
  - » Range Discovery, allowing to scan a predefined range of IPs for new and modified devices.
  - » Additional product line dependent tasks according to the installed Device Driver(s)
- File Management, enabling to restore, import, and export configuration backup files.
- Contact Management, allowing definition of contact persons and attributes to be associated with selected devices.
- License, allowing to add and view the information about valid licenses for managing devices.
- Security Management, allowing management of users, user groups, functional permissions and passwords.
- Audit Logs, allowing viewing of logged events.
- User Session Monitor, displays information on the currently logged in users and enables sending messages to a logged in user.

Certain additional features are applicable only for certain product lines. For information about these features refer to the applicable *Device Driver Manual*.

Embedded with the entire knowledge-base of WiMAX network operations, the management system is a unique state-of-the-art power multiplier in the hands of the service provider that enables the provisioning of satisfied customers. AlvariSTAR dramatically extends the abilities of the service provider to provide a rich portfolio of services and to support rapid customer base expansion.

INFORMATION

This manual describes the general features of the management system. To manage specific product families, refer also to the applicable *Device Driver Manual*.

About AlvariCRAFT

AlvariCRAFT is a PC or Laptop based Graphical application based on the same user interface available for AlvariSTAR. AlvariCRAFT is designed for field technician use, enabling simple and intuitive Graphical Local Craft Terminal (LCT) for managing and configuring a single device type in the field.

This utility simplifies the installation and maintenance of small size deployments by easily enabling the change of settings or firmware upgrade for one modular Base Station or Micro Base Station at a time, including the managed device's components and associated SUs (if applicable).

The AlvariCRAFT utility includes all the functions of AlvariSTAR that are applicable to the management of a single device.

About This Manual

This manual describes the AlvariSTAR management system (referred to as Network Management System) and the AlvariCRAFT Local CRAFT Utility. The manual describes the full functionality of the Carrier-class management system and presents screen captures of the AlvariSTAR application. Unless otherwise stated, the descriptions apply to both applications.

Limitations on AlvariCRAFT due to the single device restriction are noted in a Note specific to the application, as follows:

This feature is not applicable to the Local CRAFT Utility.

Craft

This User Manual comprises the following chapters:

- Chapter 1- Introduction - provides an overview of the AlvariSTAR and AlvariCRAFT systems and their functionality.
- Chapter 2 - Managed Network - describes how to access the management functions for managing the system: Equipment Manager, Location Manager, and Discovery Settings.
- Chapter 3.1 - Fault Management - describes the tools for managing events generated in the system: Active Events, Event History, Event Filter Manager, Event Template Manager, Script Command Manager and Event Forwarding NBI Manager.
- Chapter 4 - Configuration Management - describes how to modify the configuration of selected devices through equipment configuration templates.
- Chapter 5 - Administration - describes the administrative utilities: Task Manager, File Manager, Contacts Manager and License Manager.
- Chapter 6 - Security Management - describes the utilities for managing the user permissions and access rights for AlvariSTAR and AlvariCRAFT users: Audit Log Manager, User Manager, User Profile Manager, and User Session Monitor.
- Appendix A - Watchdog - describes the Watchdog application used for monitoring the NMS, database and LDAP servers.
- Appendix B - Remote Access - Describes the WebStart functionality.

- Appendix C - Connecting to an External LDAP Server - Describe how to connect AlvariSTAR to an LDAP server.
- Appendix D - Google Earth Management - Describes how you can visualize the network's topography in Google Earth.
- Appendix E - SNMP Compatibility - Describes SNMP version compatibility for each supported device.

Contents

Chapter 1 - Introduction 1

1.1 Starting AlvariSTAR 2

1.1.1 Post Installation Checklist 2
1.1.2 Quick Start 3
1.1.3 Starting the Client 4
1.1.4 Logging In 4
1.1.5 Logging Out or Shutdown 5
1.1.6 Changing the Password 6
1.1.7 Suspended Accounts 7
1.1.8 Application Server 7

1.2 Starting AlvariCRAFT 7

1.3 The Main Window 9

1.3.1 Main Menu 9
1.3.2 Open Managers 10
1.3.3 Page Control Bar 10
1.3.4 Navigation Pane 11
1.3.5 Management Functions 11
1.3.6 Hiding and Displaying the Navigation Pane 14
1.3.7 Status Bar 14

1.4 The About Window 15

1.5 Conventions and Common Operations 17

1.5.1 Conventions 17
1.5.2 Control Buttons 17
1.5.3 Context Menus 18
1.5.4 Working with Tables 18
1.5.5 Manipulating the Displayed Information 19

Chapter 2 - Managed Network 23

2.1 Equipment Manager 24

2.1.1 Introduction to the Equipment Manager 24
2.1.2 The Unified (All Network Elements) View 25

2.1.3 Network Element Discovery 29
2.1.4 The Network Element Editor 32
2.2 Location Manager 38
2.2.1 Searching for a Location 40
2.2.2 Location Editor 40
2.2.3 Coordinate Types 42
2.2.4 Location Map 43
2.3 Discovery Settings Manager 45
2.3.1 Network Settings Window 46
Chapter 3 - Fault Management 50
3.1 Introduction 51
3.2 Active Events 52
3.3 Event History 54
3.3.1 Managing Alarms 56
3.4 Event Filter Manager 72
3.4.1 Creating Event Filters 73
3.4.2 Editing Event Filters 79
3.4.3 Deleting Event Filters 80
3.4.4 Archiving Alarms 80
3.5 Event Template Manager 81
3.5.1 Creating or Editing Event Templates 82
3.5.2 Deleting Event Templates 92
3.6 Script Command Manager 93
3.6.1 Creating or Editing Commands 93
3.6.2 Deleting Commands 95
3.7 Event Forwarding NBI Manager 96
3.7.1 Creating or Editing Event Forwarding NBI Interfaces 97
3.7.2 Deleting Event Forwarding NBI Interfaces 99
3.7.3 Creating Event Forwarding NBI Interface Policies 99
3.7.4 NBI Notifications Global Settings 107
Chapter 4 - Configuration Management 109
4.1 Template Manager 110
4.1.1 The Template Manager Window 110

4.1.2 The Template Editor 113
Chapter 5 - Administration 114
5.1 Introduction 115
5.2 Task Manager 116
5.2.1 The Task Manager Window 116
5.2.2 The Task Wizard 119
5.2.3 The Task Editor 121
5.2.4 The Selector Window 123
5.2.5 The Task Scheduler 124
5.2.6 The Runtime Results Window 126
5.2.7 The Task Report Window 127
5.2.8 The Task Results Window 128
5.2.9 Task Rerun 130
5.2.10 Network Discovery Task 130
5.2.11 Database Aging Tasks 132
5.2.12 Discovery Task 133
5.2.13 LDAP Backup/File Aging Task 136
5.2.14 The Performance Collection (SNMP Based) Task 137
5.2.15 Multiple Configuration (Template Based) Task 142
5.3 File Manager 145
5.4 Contact Manager 146
5.4.1 Associating Devices with a Contact 146
5.4.2 Creating or Modifying a Contact 147
5.5 License Manager 149
5.5.1 The License Manager 149
5.5.2 Adding Licenses 151
5.5.3 Activating Existing Licenses 151
5.5.4 Rescue License 151
5.5.5 Displaying Licensing Information 151
5.6 Report Manager 153
5.7 Map Refresh Rate 154
5.8 Export Site Coordinates 155
5.9 Import Site Coordinates 156

Chapter 6 - Security Management 157
6.1 Overview 158
6.2 Audit Log Manager 159
6.3 User Manager 164
6.3.1 The User Manager Window 164
6.3.2 Adding or Modifying a User 165
6.4 User Profile Manager 171
6.5 User Session Monitor 177
6.6 Password Policy 179
6.7 External Entities Mapping 182
6.8 User Domain Manager 185
Appendix A - Watchdog 188
A.1 The Watchdog Application 189
Appendix B - Remote Access 191
B.1 WebStart 192
Appendix C - Connecting to an External LDAP Server 193
C.1 The LDAP Server Configuration File 194
C.2 Open LDAP Configuration 195
C.3 Active Directory Configuration 196
Appendix D - Google Earth Management 197
D.1 Connecting Google Earth to the NMS 198
D.2 Viewing the Network Elements in Google Earth 199
Appendix E - SNMP Compatibility 201
E.1 SNMP Version Compatibility 202

Chapter 1 - Introduction

In This Chapter:

- "Starting AlvariSTAR" on page 2
- "Starting AlvariCRAFT" on page 7
- "The About Window" on page 15
- "The Main Window" on page 9
- "Conventions and Common Operations" on page 17

1.1 Starting AlvariSTAR

This section describes the necessary steps to start the AlvariSTAR management system. For a description of the AlvariCRAFT utility, go to Section 1.2.

The management system enforces security at the client level. To log in to the application, you must have a valid user ID and password.

Before you can run this application your system must have running Application, and Database Server. Typical installations implement the Application Server so it runs in the background, even after you log out of the client. See the *Installation Manual* for information about installing and configuring these required server processes (called *services* in Windows, *daemons* in Solaris).

1.1.1 Post Installation Checklist

Before starting the client application, verify the following:

1.1.1.1 License

The default demo license is valid for 90 days and includes licenses for two management system clients and a certain amount of managed devices. It does not support licensed features.

To obtain a permanent license, contact your product reseller. To load and activate licenses, see "License Manager" - Section 5.5.

1.1.1.2 Device Configuration

To discover and properly manage devices, certain parameters must first be properly configured in the managed devices. For details refer to the relevant *Device Driver Manual*.

1.1.1.3 SW Upgrade Files

Software Upgrade files for the managed devices need to be stored on the Application Server in the management system firmware repository folder located under <management system>\filesystem\firmware\<product-line>. The product line name is device dependant (refer to the relevant Device Driver User Manual)

INFORMATION

The firmware repository folder is created automatically for certain device drivers. For other device drivers it should be created manually.
Use forward slashes in UNIX systems.

1.1.1.4 SNMP Ports

Verify that the SNMP ports (161, 162) are not used by any other application running on the computer. If Windows or any other SNMP Server is installed, open the Windows Service Manager, stop the SNMP Services and disable it to ensure that it will not start automatically the next time you restart the computer.

1.1.1.5 Security Enforcement

The Administrator should define users, user groups, passwords and functional permissions (refer to Chapter 6).

1.1.2 Quick Start

The following is an overview that covers the basic steps for getting started with the management process. Refer to the respective chapter in this manual or, when applicable, in the relevant Device Driver Manual) for an in-depth explanation of each step.

1. Design the equipment location hierarchy. Define locations and sub-locations and associate them with maps if applicable. (Refer to Section 2.2.)
2. Define security policy and assign permissions to users/user profiles. (Refer to Chapter 6).
3. Open the Discovery Settings Application. Enter the necessary IP address ranges, locations and SNMP parameters. Define all other applicable parameters and initiate discovery. (Refer to Section 2.3 for information on using the Discovery Settings application and Section 5.2.10 for information on running the Network Discovery task for equipment discovery.)
4. After devices are discovered and stored in the database, you can fully use the application to manage the system:
   - Use the Equipment Manager to view devices in the database according to various search criteria. From the Equipment Manager you can access the devices' dependent Configuration and Multiple Configuration managers and topology maps. (Refer to the relevant Device Driver Manual.)
   - Use additional managers that may be applicable only for certain product lines to manage different features and parameters that are product line dependent.
   - Use the Location Manager to design and manage hierarchical locations and associate them with maps. (Refer to Section 2.2.)
   - Use the Contact Manager to define contact persons and attributes to be associated with selected devices. (Refer to Section 5.4.)
   - Use the Task Manager to define and schedule general system-wide tasks and various additional tasks according to the managed product line. (Refer to Section 5.2 and the relevant Device Driver Manual).
   - Use the Files Manager to restore, import, and export configuration backup files generated via the Configuration Backup task (Refer to the relevant Device Driver Manual).
   - Use the Database Aging Task to manage alarm records. (Refer to Section 5.2.11.)
   - Use the License feature to view information on licensed vs. discovered devices, enabling you to estimate when you need to update your license. (Refer to Section 5.5.)

- Use the User Session Monitor feature to identify other currently active users and communicate with them. (Refer to Section 6.5.)
- Use the Audit Log Manager to view logged events. (Refer to Section 6.2.)
- Use Active Events to view alarms and other events in real time. (Refer to Section 3.2.)
- Use the Event History to query the database for events and alarms in specific time intervals. (Refer to Section 3.3.)
- Use the Event Forwarding NBI Manager to interface with other Network Management Systems. (Refer to Section 3.7.)
- Use the Script Command Manager to create script commands that can be triggered by template-matched alarms.

5 Modify the threshold number of rows stored in the alarm table if necessary. (Refer to "Database Aging Tasks" - Section 5.2.11.) By default 50000 rows are displayed and the Database Aging task is scheduled to run every hour.

1.1.3 Starting the Client

To start the application:

From the Windows Start menu, select *<Management System name>* "Management System"> *Start Client*. After the client application is started, the Login prompt window will be displayed.

1.1.4 Logging In

To log in, type a valid user name and password at the login prompt, as follows:

Default User Name	Default Passwords
admin	admin
manager	manager
observer	observer

By default, you have five attempts to enter the correct password before the system aborts the login.

Figure 1-1: Login Prompt

1.1.5 Logging Out or Shutdown

Logging out keeps the application running but disable access to the client, preventing unauthorized persons from using it. You may log in again without the need to restart the client.

The Exit feature, however, shuts down the client application, while the Application Server continues to run.

To log out of the system

1. From the Main Menu at the top of the window select System> Logout. A confirmation message is displayed.
2. Click **OK** to confirm.
3. Only the Main Menu of the client is displayed. Only the System and Help menus are available.

To log in again after logging out

From the Main Menu at the top of the window select System > Login. The Login prompt window will be displayed, allowing you (or another authorised user) to log in.

To shut down the client:

1. From the main menu select *System* > *Exit,* or, use the X icon displayed on the right upper corner of the main window, or use the *Alt+F4* shortcut. A confirmation message is displayed.
2. Click **OK** to confirm.

1.1.6 Changing the Password

By default, there are no password constraints. By using Change Password, the current logged-in users can change only their own password.

To change the password:

1. From the main menu, select *System* > *Change Password*. The Change Password dialog is displayed.
2. Enter the old password.
3. Enter the new password (8-32 characters). Confirm it.
4. Click **OK** to save the new password.

Figure 1-2: Change Password Dialog

Passwords constraints are set from the Security Management > Password Policy menu

The password policy also determines when the user receives a password expiration warning.

1.1.7 Suspended Accounts

Users with a suspended account cannot access the system. An account can be suspended by the administrator, or is blocked according to the Login Policy settings set in the Password Policy window. The Login Attempts parameter sets the number of unsuccessful login attempts before the user is locked out (default: five attempts). The account can be re-activated by the system administrator.

Only the system administrator can activate suspended and blocked accounts. The default admin user is never blocked.

To activate an account:

1. Open the User Manager window.
2. Select the suspended user and click **Edit**.
3. Select **Security Info** and change it to Active.
4. Click **OK** to apply the changes.

1.1.8 Application Server

The application server, which typically runs on a dedicated host, enables the system to process incoming alarms and communicate with equipment and network devices. If the client application cannot connect to an application server, a warning message appears and the client is not launched.

1.2 Starting AlvariCRAFT

To log in to the application, you must have a valid user ID and password.

To open AlvariCRAFT:

1. Double-click on the AlvariCRAFT icon or open it from the windows Start menu (Programs>AlvariCRAFT>Start Craft). The Network Interface Chooser opens.

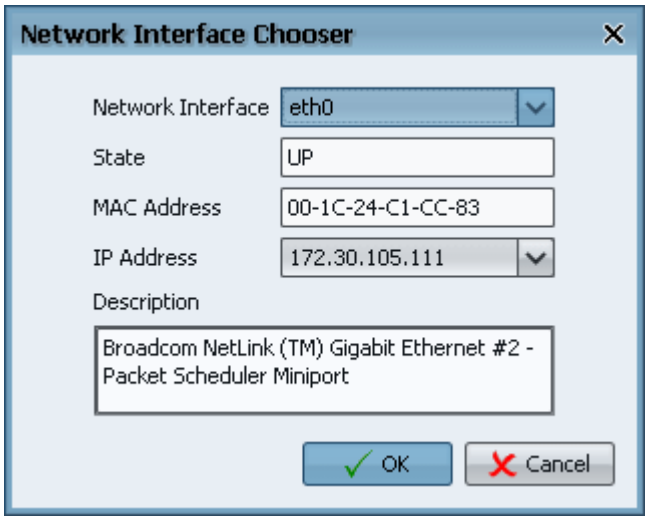

Figure 1-3: Network Interface Chooser

The Network Interface Chooser enables to select the IP address of the computer on which the Local CRAFT Utility is installed. The Network Interface Chooser includes the following fields:

Field	Description
Network Interface	A list of the available network interface cards (NIC) installed.
State	The state of the selected network interface. Only network interfaces that are UP are displayed.
MAC Address	The MAC Address of the selected NIC. For the local loopback NIC, no MAC address is displayed.
IP Address	The IP address associated with the selected NIC.
Description	A read-only description of the selected NIC.

2 In the Network Interface Chooser, select a network interface from the list.

3 Click OK. The Main window opens.

1.3 The Main Window

After logging on, the main window is displayed, providing access to all functions.

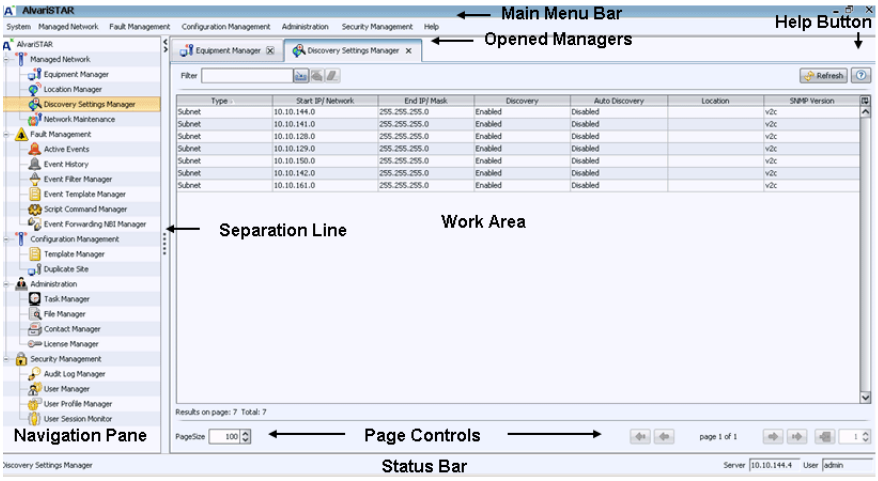

Figure 1-4: The Main Window

1.3.1 Main Menu

The main menu contains all menus and their options, which provide access to the management system functions. It mirrors all the functions available in the Navigation Pane (see Section 1.3.4). In addition, it includes some functions that are not available in the Navigation Pane (see more details in Section 1.3.5).

In addition, the Main Menu includes the following menus and options:

Menu	Description
Help	Provides the following options: ■ About: Enables viewing details about installed system components (see Section 1.4). ■ Help Contents: Opens the WebHelp contents window.
System	Provides the following options: ■ Login: Enables logging in to the client application. Applicable after logging out (refer to Section 1.1.5) and in the management system, also after time-out. ■ Logout: Enables logging out of the client application without closing it. The application is still running and you may login again (refer to Section 1.1.5). ■ Change Password: Opens the Change Password window enabling to change the user's password (refer to Section 1.1.6) ■ Exit: Enables shutting down the client application.

1.3.2 Open Managers

The Open Managers section displays all the currently open managers.

Click on an open manager name to switch to the window of this manager.

Click on the X sign of an open manager to close it.

1.3.3 Page Control Bar

The Page Control Bar is displayed at all times only for certain windows at the bottom of the window. It contains quick access icons for some common operations.

Figure 1-5: Page Control Bar

When the number of results in the manager exceeds the number defined in the *Page Size* box, the results are divided into several pages. Use the following controls to browse the various pages:

Icon	Description
	Help - Opens the Online Help Navigator.
	First/Previous - Cycles back to the first or previous page.
	Next/Last - Cycles forward to the next or last page.
	Go to Page - Specify the page number in the box to the right
	Page Size - define the number of results to display in each page

1.3.4 Navigation Pane

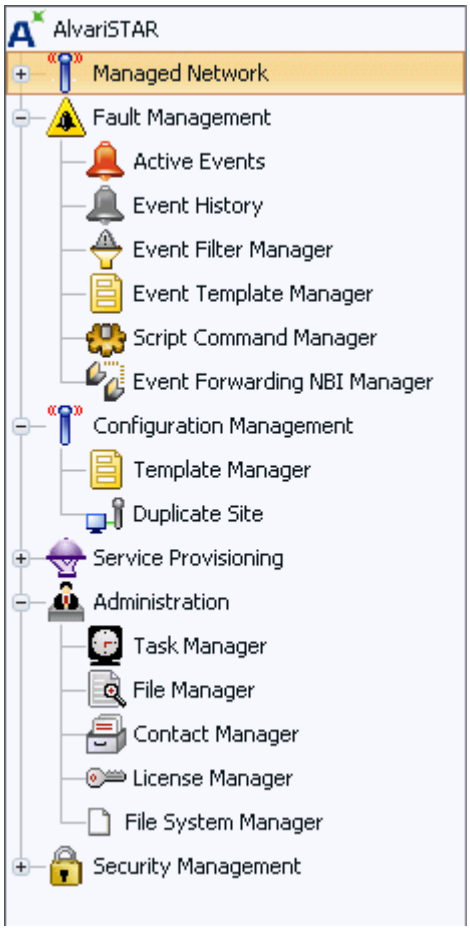

Figure 1-6: Navigation Pane

Click on menu headings to expand that menu node (double click on the menu heading or single-click on the **+** sign to its right), then click on the appropriate item in that node to display the associated page.

1.3.5 Management Functions

The Navigation Pane and Main Menu provide access to all the management functions. The Navigation Pane and Main Menu options are described below:

INFORMATION

Certain menus/menu options may be applicable only for certain product lines. The descriptions below are only for menus/menu options that are common to all product lines. Refer to the relevant Device Driver Manual for details on additional menus/menu options that are dependent on the installed device driver(s) and the managed product line.

Node	Description
Managed Network	Provides the following options: ■ Equipment Manager - Opens the Equipment Manager window, enabling to view equipment in the network and access the Network Element Editor. Refer to Section 2.1 and the relevant *Device Driver Manual*. ■ Location Manager - Opens the Location Manager window, enabling to define equipment locations and to associate maps and other features with locations. Refer to Section 2.2. ■ Discovery Settings (not applicable to the Local CRAFT Utility)- Opens the Discovery Settings window, enabling to manage IP address ranges or sub-nets and global SNMP Read and Write community pairs. Refer to Section 2.3. ■ Additional options may be available according to the installed Device Driver(s). For information on these options refer to the relevant *Device Driver Manual*.
Fault Management	The Fault Management allows you to manage alarms that occur in the network. It displays information about each alarm and lets you acknowledge received alarms. It also provides tools that help you diagnose and correct alarms. The Fault Manager is divided into the following sub-menus: ■ Active Events - Displays real time updates of new events and alarms entering the system. Refer to Section 3.2. ■ Event History - Queries for alarms and events in the database, according to specified time intervals. Refer to Section 3.3. ■ Event Filter Manager - Allows to create, edit and delete filters to the Active Events/Event History windows. Refer to Section 3.4. ■ Event Template Manager - Allows to create, modify and delete event templates. Refer to Section 3.5. ■ Script Command Manager - Allows to create, edit and delete script commands. Refer to Section 3.6. ■ Event Forwarding NBI Manager (not applicable to the Local CRAFT Utility) - Allows to connect to other management systems and to forward traps related to this system. Refer to Section 3.7.
Service Provisioning	Available only if Service Provisioning is supported by the installed Device Driver. For information on these options refer to the relevant *Device Driver Manual*.

Node	Description
Configuration Management	Available only if Template Based Multiple Configuration is supported by any of the installed Device Drivers: ■ Template Manager - enables managing equipment configuration templates that can be used for modifying configuration of selected devices using the template-based Multiple Configuration task. Refer to Section 4.1 and to the relevant *Device Driver Manual.*
Administration	Provides the following sub-menus: ■ Task Manager - Enables to define, manage, schedule, run/abort system-wide operations, such as Network Discovery (not applicable to the Local CRAFT Utility), Database Aging, and product line dependent tasks, etc. Refer to Section 5.2 and to the relevant *Device Driver Manual.* ■ File Manager - Opens the File Manager window, enabling to manage configuration backup and other types of files. Functionality depends on the managed product line. Refer to Section 5.3 and to the relevant *Device Driver Manual.* ■ Contact Manager - Opens the Contact Manager window, enabling to organize and manage your contacts. Refer to Section 5.4 ■ License Manager (not applicable to the Local CRAFT Utility) - Enables viewing information about valid licenses and summary details on the currently managed device types, included in the license. Refer to Section 5.5. ■ Report Manager - available only if supported by any of the installed Device Drivers, enables generating different reports for all or selected relevant entities. The following functions are available only from the Main Menu: ■ Map Refresh Rate - enables to generate a file containing information about the network elements' locations in Keyhole Markup Language (.kml) format. This file is compatible with Google Earth, allowing it to display the network's topography. ■ Export Site Coordinates - enables generating a backup file that contains the location details defined in the Network Element Editor for each device that does not support GPS. ■ Import Site Coordinates - enables importing a previously generated backup file that contains the location details for devices that do not support GPS.

Node	Description
Security Management	Provides the following sub-menus: ■ Audit Log Manager - Enables to view recorded events and export the logged data to an external Comma Separated Value (CSV) file. Refer to Section 6.2. ■ User Manager - Enables to create and manage users, and associate information to them such as passwords, profile membership and contact information. Refer to Section 6.3 ■ User Profile Manager (not applicable to the Local CRAFT Utility) - Enables to create user profiles, edit them or delete profiles. Refer to Section 6.4 ■ User Session Monitor (not applicable to the Local CRAFT Utility) - Enables to view information on the currently logged in users and to send messages to a logged in user. Refer to Section 6.5. ■ Password Policy (available only from the Main Menu) - enables to set general policies for user passwords. ■ External Entities Mapping (available only from the Main Menu) - enables to map existing LDAP entities to specific user profiles (if an external LDAP server is used for user account management). ■ User Domain Manager (available only from the Main Menu) - enables to allocate location visibility domains to each user that is not an administrator (administrators are always able to see all network elements in every location).

1.3.6 Hiding and Displaying the Navigation Pane

By default, both the Navigation Pane and Work Area are displayed. When hovering the mouse over the separation bar between the Navigation Pane and Work Area, the mouse pointer becomes a double-headed arrow (↔). You can change the size of the Navigation Pane by dragging this arrow left/right.

You can hide the Navigation Pane to increase the size of the Work Area or hide the Work area to increase the size of the Navigation Pane by clicking on the arrowheads ( ) located on the separation bar until reaching the required display.

With the Navigation Pane hidden or maximized, if clicking the arrowhead does not restore the display of both panes, manually drag the separation bar to restore the display.

1.3.7 Status Bar

The Status Bar is displayed at the bottom of the main window, and contains the following information:

■ Current logged user.

- The IP address of the application server or the selected interface of the Local CRAFT Utility machine.
- The name of the currently open manager.

A progress bar is displayed every time a window is refreshed or a new window is selected.



Figure 1-7: Status Bar

1.4 The About Window

The *About* window displays a list of all products installed and their software version.

To open the *About* window, select *Help* > *About* in the Main Menu.

Figure 1-8: About Window

The version numbers of the management system and the installed product line device driver(s) are in the format a.b.c.d, where a.b increases for major releases, c increases for minor releases and d is an internal control number.

1.5 Conventions and Common Operations

The following conventions and common operations appear throughout this manual, unless otherwise specified.

1.5.1 Conventions

The phrase "Select *Managed Network* > *Equipment Manager* from the Main Menu bar or the Navigation Pane" means you should do one of the following:

- Click on the *Managed Network* menu in the Main Menu bar to expand it, then click on *Equipment Manager*.
- Click on the *Managed Network* node in the Navigation Pane to expand it (if it is not already expanded), then click on *Equipment Manager*.

1.5.2 Control Buttons

A control button causes an immediate action. To activate a control button, click on it. Certain control buttons only appear in selected windows. Others are common to most windows. Equivalent functions to some control buttons are available from the toolbar and main menu.

Button	Description
Apply	Applies changes made in the window. Clicking the Apply button maintains the window opened for the following transaction or response delivery.
OK	Applies changes made in the window and closes the window.
Cancel	Closes the active window without taking any further action. Any modifications made prior to clicking Cancel are ignored.
Refresh	Refreshes the window and displays the most updated information.
Save	Saves changes made in the dialog box.
Help	Displays the online help window.
Browse	The Browse button appears whenever the command's completion may need additional step. Clicking this button displays another window that lets you select an entry for an adjacent field.
Clear	Clears adjacent fields. It appears next to a field with a Browse button at the other end.
Retrieve 	Displays all appropriate matches according to the selected filter. It can also be used to refresh the display.

Some of the control buttons, such as *Edit*, *Open*, *Import* and *Export* may appear grayed out for users without write permission.

1.5.3 Context Menus

When handling tables in the work area, most of the functions are accessible via right click menus. The contents of these menus are context sensitive. Common functions include:

- New - Adds a new entry to the table
- Delete - Removes an entry from the table
- Edit - Changes the parameters of a particular entry

1.5.4 Working with Tables

All tables and lists allow resizing and rearranging the column display sequence. In some pages, tables are used for displaying information and configuring and managing multiple entities of the same type.

Color conventions:

- Grayed-out cells are read-only.
- In rows with modified parameter(s) all the details are colored blue.
- The new lines added are green
- The lines marked for deletion are red.

To modify the configuration of an existing entity:

1. Double-click on the applicable cell
   - » In a text-cell, edit the content.
   - » In some cells a drop-down menu opens, enabling selection of the required option.
2. Click on any other cell to apply the change to the selected cell. At this stage the change only applies to the display.
3. Click **Apply** to apply the change to the device.

1.5.4.1 Dynamic Column Selection

Some of the tables in the work area can be tuned to display only specific columns. Tables that support Dynamic Column Selection have a small button located in the top right corner as shown in Figure 1-9. Clicking this button displays a list of all the columns that are available in the table. Check the columns that you wish to display and deselect the columns that you want to hide. The following additional options are also available:

- Horizontal Scroll - Displays/Hides the table's horizontal scrollbar
- Pack All Columns - When the table exceeds the width of the available work area, this option attempts to fit it into the available space by reducing the columns' widths.
- Pack Selected Column - Resizes the currently selected column to its minimum width that still fits all its content.

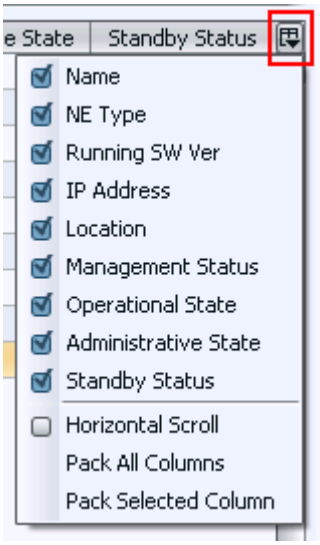

Figure 1-9: Dynamic Column Selection

Alternatively, you can select which columns to display/hide by right clicking the table's header and, from the list that displays, checking the corresponding column names.

1.5.4.2 Sorting Tables

Click on any of the column headings to sort tables. Click again on a column heading to toggle between ascending and descending sort order.

1.5.4.3 Resizing and Rearranging Columns

To resize a column, position the cursor on the border line between two columns headings. The cursor changes into a double-headed arrow. Drag the cursor to the left or to the right to increase or decrease the size of a column. To rearrange column sequence, click a column header and drag it to the new desired position.

1.5.5 Manipulating the Displayed Information

1.5.5.1 Using Filters

Some of the tables support the filtering feature. Filters allow you to set up the table so that it displays only rows that are relevant for your purposes. If a table supports filters, the Filter control displays above it.

Figure 1-10: The Filter Control

The following controls are available:

Button	Name	Description
	Select Filter	Opens the Filter Criteria Manager which allows you to define, edit and apply your filters.
	Edit Filter	Applicable only if a Filter is selected. Allows editing the selected Filter. May not be available for certain Filters.
	Remove Filter	Removes the currently selected filter.

1.5.5.1.1 Filter Criteria Manager

Clicking the Select Filter button opens the Filter Criteria Manager (see Figure 1-11). The Filter Criteria Manager contains a table that lists all the available filters. Use the right-click menu to manage and select your filters.

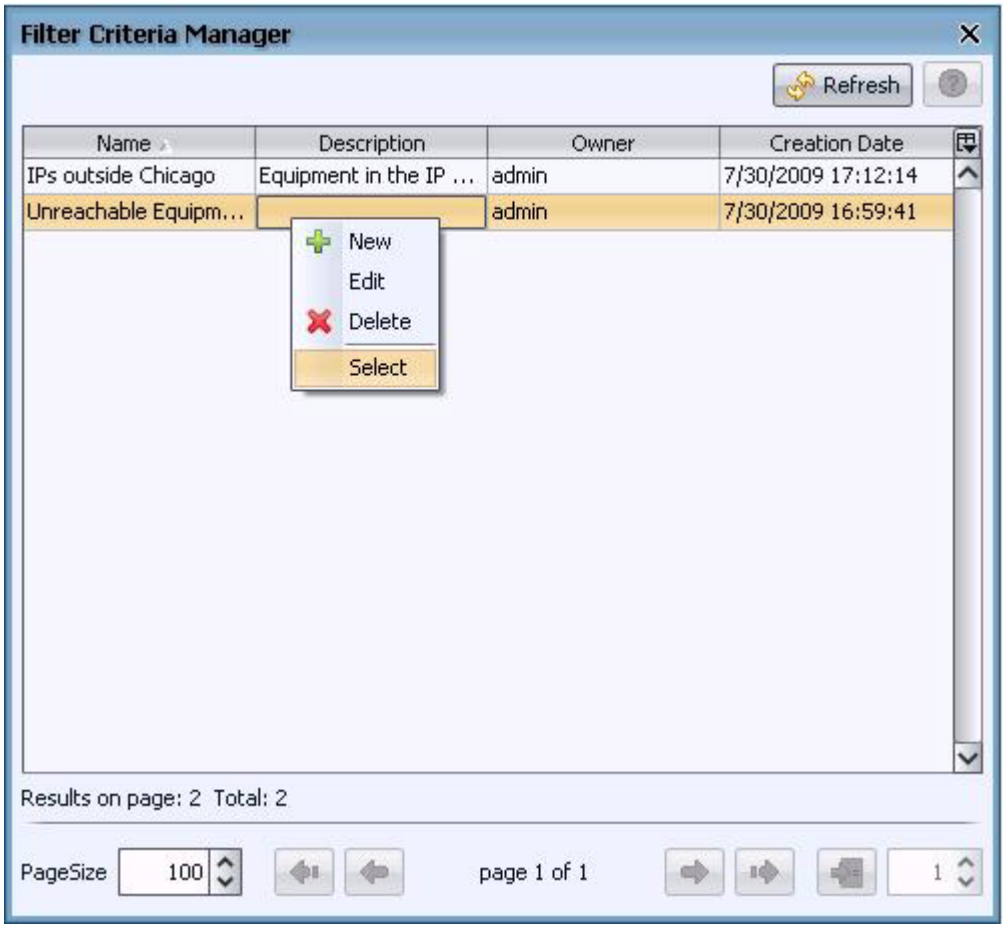

Figure 1-11: Filter Criteria Manager

1.5.5.1.2 Filter Criteria

You define new filters or edit existing filters from the Filter Criteria window (see Figure 1-12). This window is displayed whenever you select the New or Edit option from the right-click menu inside the Filter Criteria Manager.

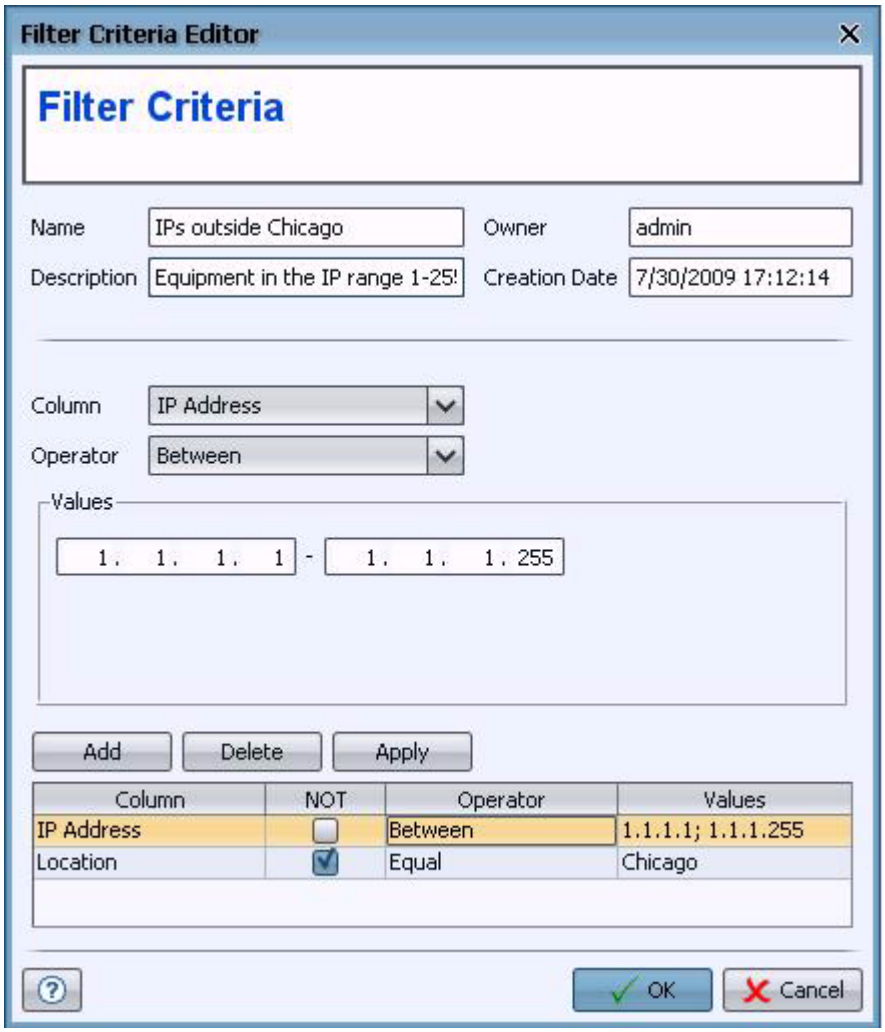

Figure 1-12: Filter Criteria

You define a selection criterion by specifying the values which are relevant for the entries in a particular column. Then, press the Add button to include your criterion into the filter criteria list. If you want to use multiple selection criteria, use the above procedure to add additional entries to the list. All criteria in the list are aggregated by applying the logical AND operator between them. This means that only entries which fulfill each and every criterion in the list will be displayed when the filter is applied.

Once a selection criterion is added to the list, you can negate it by checking the NOT checkbox. This is useful when it is easier to define entries that are to be excluded from the selection than those which are to be included.

1.5.5.2 Limiting the Results Set

You can define the maximum number of results to be displayed in a list by entering a number in the *Page Size* box or by using the up and down arrows to the right of the number field. If the results set exceeds the defined number, it will be divided into several pages. Click **Refresh** to refresh the displayed list. Refer to Section 1.3.3 for details on navigating among pages.

Chapter 2 - Managed Network

In This Chapter:

- "Equipment Manager" on page 24
- "Location Manager" on page 38
- "Discovery Settings Manager" on page 45 - not applicable to the Local CRAFT Utility

INFORMATION

This manual *does not cover* some topics, which are device driver dependant. Refer to the applicable *Device Manager Manual* for information about the following features (if applicable):

- GPS Chain manager
- Network Maintenance

2.1 Equipment Manager

This section includes:

- Introduction to the Equipment Manager
- The Unified (All Network Elements) View
- The Network Element Editor

2.1.1 Introduction to the Equipment Manager

The Equipment Manager provides functionality and access to windows that enables you to manage equipment in your network. Using the Equipment Manager in conjunction with the right-click menu you can:

- View devices that exist in the database according to various selection criteria.
- View general information on the displayed devices
- Add and Delete devices to/from the database
- Edit the general properties of devices
- Open the Configure window to configure a selected device
- Apply licenses to selected equipment (not applicable to the Local CRAFT Utility)
- Open a Telnet session for a selected device (if supported by the specific device type)
- Open the Backup Configuration Task to backup the configuration of selected devices (if applicable)
- Export the general information of selected devices to a Commas Separated Value (CSV) file.
- Open a map display associated with a selected device, if applicable.
- Perform additional operations according to the product line and type of managed devices.

To open the Equipment Manager:

Select *Managed Network > Equipment Manager* from the Navigation Pane or menu bar. The Equipment Manager window is displayed.

INFORMATION

Equipment Manager applications running on different NMS clients bound to the same server are notified of the changes made by other clients. The equipment list will be automatically updated whenever another client on the network modifies (adds, deletes or edits) equipment data.

The Equipment Manager can be configured to display only specific types of network elements. This allows you to quickly switch between the various lines of products that you need to manage, according to the installed Device Driver(s). For this purpose, from the *View* drop menu at the top of the work area, select the products type that you would like to be visible. The structure and functionality of the Equipment Manager depend on the selected type of managed equipment. Refer to the relevant Device Driver Manual for details on how to use the Equipment Manager with the applicable devices.

2.1.2 The Unified (All Network Elements) View

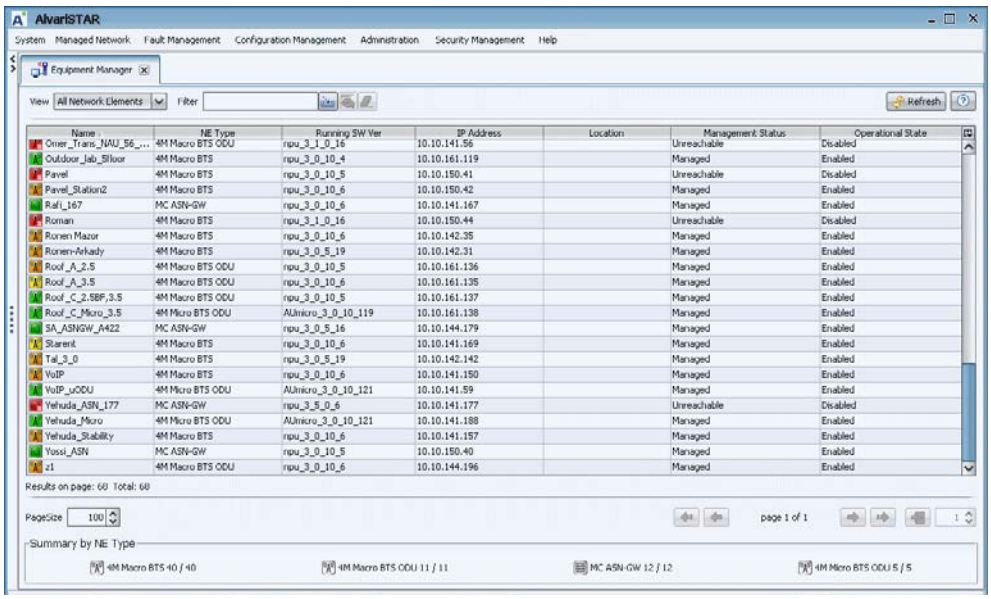

Figure 2-1: Equipment Manager Window (All Network Elements View)

Selecting the *All Network Elements* option will display all the BTS units in the database, as well as a summary count at the bottom of the work area. There are two types of summaries you can switch between by right clicking:

- Summary by NE Type - Lists counts for all types of BTS units.
- Summary by State - Lists counts for units that are in the Unmanageable, Unreachable, Unlicensed, Unknown, Unmanaged and Managed states.

The summaries are displayed in a ratio format. The first figure indicates the filtered number of devices, while the second indicates the total number of devices. For instance, if applying a filter excludes 2 devices from a total of 5, the ratio displayed will be 3/5. If no filters are applied, both figures will indicate the total number of devices. In our previous example, this would mean a ratio of 5/5.

The BTS equipment table for All Network Elements includes all the BTS objects that exist in the database of the management system. This includes devices that were discovered by the management system (using either Network Discovery Task or the Range Discovery Task) and devices that were added manually to the database (see **New** option below). The background color of the device's icon is in accordance with the device's alarm status (the highest severity open alarms).

You can use the Filter option for viewing only devices that meet one or several selection criteria.

The information displayed for each device (refreshed every 15 seconds) includes:

Parameter	Description
Name	The BTS Name configured in the device. Applicable only for devices that are Up or that were reached previously.
NE Type	The device's type.
Running SW Ver	The currently running SW version. Applicable only for devices that are Up or that were reached previously.
IP Address	The IP address of the device. Applicable only for devices that are Up or that were reached previously.
Location	The location of the device as defined in the database of the management system, either automatically during discovery (based on settings of discovery parameters) or manually using the Network Element Editor.

Parameter	Description
Management Status	The management state of the device: ■ Managed - The equipment is answering to keep-alive/polling and synchronization. ■ Down - Available only for CPEs. Equipment is reported as down. ■ Unreachable - A device that the management system is aware of (exists in the database) but cannot be reached currently. ■ Unknown - This is typically a temporary status for a device that is available in the database but has never been reached in the past and its current status is unknown. After a short time its status should change to one of the other options. ■ Unlicensed - If the number of devices of a certain type in the database has reached the number of licenses for managing the specific device type, additional devices of this type added to the database will be presented as unlicensed. These devices cannot be managed by the system. The License button in the Equipment Manager will be available upon selecting unlicensed object(s), allowing to install additional licenses. ■ Unmanageable - Equipment is reachable but cannot be managed from various reasons: wrong SW version, synch errors, no route, manual unmanage, etc. ■ Unmanaged - Operator does not want to manage an equipment, although it is discovered.
Operational Status	This column indicates a device's operational status: ■ Disabled - The Management State is other than Managed, or the Management State is Managed and the device is totally inoperable and unable to provide service to the user(s). ■ Enabled - The Management State is Managed and the device is partially or fully operable and available for use.

The available management options depend on the selected device type(s). Select one or several entries and right-click to view the available management options. The following options are available for all device types:

Option	Description
New	Initiate a discovery process for a new network element. Click to open the Network Element Discovery window to define the necessary parameters. For more details, see "Network Element Discovery" on page 29. NOTE: The New option is available when right-clicking anywhere in the work area, without the need to select any existing entry.

Option	Description
Configure	Opens the Device Manager for the selected device. Not available if two or more devices are selected or if the Operational State of the selected device is other than Enabled. NOTE: You can also open the Device Manager by double-clicking on the selected device.
Edit	Opens the Network Element Editor for the selected equipment object(s), allowing to edit general parameters. For multiple selected devices you can edit only the Location and Contact parameters. For a single device you can edit also some general SNMP parameters. For more details, see "The Network Element Editor" on page 32.
Delete	Deletes the selected equipment object(s) from the database. The application prompts you for confirmation. You can always rediscover deleted equipment.
License	Activated only when unlicensed equipment is selected. If the number of devices of a certain type in the database has reached the number of available licenses for managing the specific device type, additional devices of this type will be presented as unlicensed. These devices cannot be managed by the system. Select the License option to open the License Manager, enabling to view the current status of available licenses and add licenses if necessary.
Cut Through	Opens a Telnet session to the selected device. Not available if two or more devices are selected or if the Operational State of the selected device is other than Enabled.
Open Map	Opens the location map, displaying the selected map for the applicable location. Available only when a location is assigned to the selected device. Not available if two or more devices are selected.
Open Alarms	Not available if two or more devices are selected or if the Management State is Unmanaged. Opens the Open Alarms window, displaying the details of currently active events,
Unmanage	Not available if two or more devices are selected or if the Management Status is Unmanaged. Manually switch a device's management status to Unmanaged
Manage	Attempt to revert a manually unmanaged device to its normal management status.
Backup Configuration	Not available if two or more devices are selected or if the Operational State is other than Enabled. Opens a Configuration Backup Task for the selected device, where you can add additional devices to the task. Refer to the Configuration Backup Task section in the relevant Device Driver Manual.

Option	Description
Export	Exports the general information of the selected device(s) to an external Comma Separated Value (CSV) file. Opens the Exports Equipment dialog box in which you can browse to the desired location, enter a file name, and click **Export**. The information displayed for the selected device(s) in the Equipment Manager is exported.

Additional management options are available for a single device, according to the specific product line of the selected entry. For details refer to the Equipment Manager section in the relevant Device Driver Manual.

Craft

The Equipment Manager in the Local CRAFT Utility enables managing a single BTS. To manage a new device, add it to the equipment list, select it, right-click and select the License option to move the license to the new device.After performing the necessary changes, click Retrieve to update the display.

2.1.3 Network Element Discovery

To initiate discovery of a single device, right-click anywhere in the work area and select the New option to open the Network Element Discovery window:

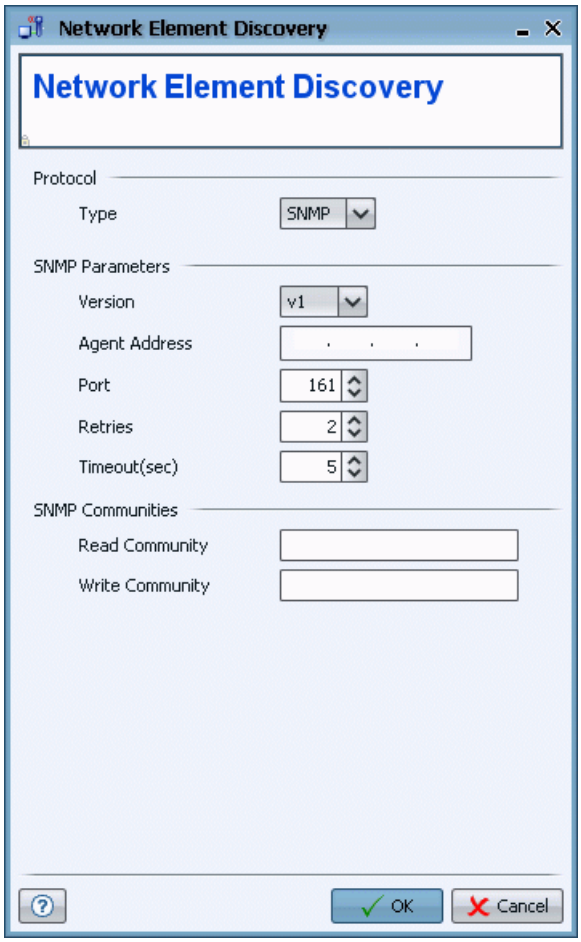

Figure 2-2: Network Element Discovery Window

The Network Element Discovery window for all device types includes the following parameters:

Parameter	Description
Protocol	
Type	The protocol used for managing the device. In the current release only the SNMP option is available.
SNMP Parameters	

Parameter	Description
Version	Indicates the SNMP protocol version used for communicating with the device. The available options are: ■ v1 ■ v2c ■ v3 For a complete list of all compatible SNMP versions for each device, see Appendix E.
Agent Address	The device's IP Address.
Port	The port number used by the device to communicate with the NMS. The default is 161, which is the port used by all currently manageable devices.
Retries	The maximum number of retries for SNMP communication with the Device. The default is 2 retries.
Timeout(s)	The maximum time in seconds that the requesting process waits for a response from the Device before attempting a retransmission (or aborting if the maximum number of retries has been reached). The default is 5 seconds.
SNMP Communities (only for SNMP Versions v1 and v2)	
Read community	The Read community string (password) for SNMP get operations. This string is used by the SNMP agent to allow/disallow SNMP read access. The default Read community string in the manageable devices is *public*.
Write community	The Write community string (password) for SNMP set operations. This string is used by the SNMP agent to allow/disallow SNMP write access. The Write community can also be used for read (get) operations. The default Write community string in the manageable devices is *private*.
SNMPv3 Credentials (only for SNMP Version v3)	
Username	Username used for authentication
Security Level	Configures the authentication and privacy settings. The available options are: ■ NoAuth_NoPriv - Both authentication and privacy are disabled ■ Auth_NoPriv - Authentication is enabled and privacy is disabled ■ Auth_Priv - Both authentication and privacy are enabled
Authentication Algorithm	Selects the hashing algorithm applied to the authentication password. The available options are: ■ MD5 - Uses the Message-Digest algorithm 5 ■ SHA - Uses the Secure Hash Algorithm

Parameter	Description
Authentication Password	Password used for authentication.
Privacy Algorithm	Encryption standard used for data transmission. The available options are: ■ AES - Uses the Advanced Encryption Standard ■ DES - Uses the Data Encryption Standard
Privacy Password	Encryption key used by the privacy algorithm

After configuring all necessary parameters, click on the **OK** button to initiate a single device discovery process using the defines parameters. If a device that does not exist in the database, with the right properties and belonging to a device family that can be managed by the NMS is found, and the NMS is authorized to manage it, it will be added to database and to the devices displayed in the Equipment Manager window (according to the selected **View** option).

2.1.4 The Network Element Editor

The Network Element Editor enables editing NMS Reference (Location and Contact), SNMP parameters and other parameters associated with the location of a selected device. For multiple devices, it only enables editing the NMS Reference (Location and Contact) parameters.

To open the Network Element Editor, right-click on the selected device(s) and select the Edit option.

The Network Element Editor for multiple devices includes the Location and Contact Common Attributes:

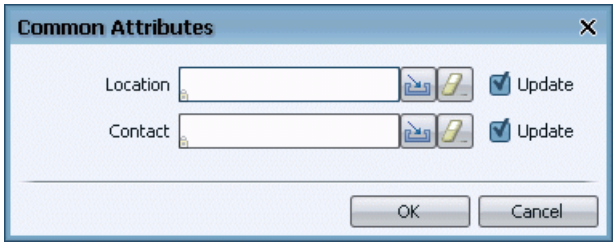

Figure 2-3: Common Attributes (Network Element Editor for Multiple Devices) Window

For details on the Location and Contact parameters refer to the following section.

The Network Element Editor for a single device includes two tabs:

- General Tab
- SNMP Parameters Tab

2.1.4.1 General Tab

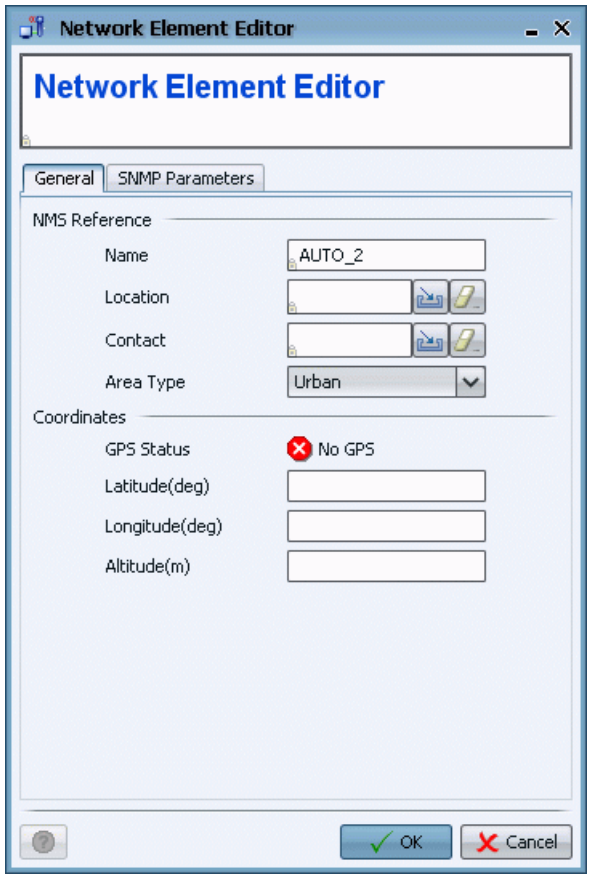

Figure 2-4: Network Element Editor for a Single Device - General Tab

The General tab includes the following parameters:

Parameter	Description
NMS Reference	
Name	Read-only. This field displays the network element's name as defined in the managed device.
Location	The location associated with the device in the database of the management system (optional). Click on the Browse icon to open the Select Location window and select a location. Click the Eraser icon to clear the Location field.
Contact	The contact associated with the device in the database of the management system (optional). Click on the Browse icon to open the Select Contact window and select a contact. Click the Eraser icon to clear the Contact field.

Parameter	Description
Area Type	The type of environment the network element is located in. This feature is useful for estimating and displaying the sector coverage in Google Earth (see Appendix D for more information). The available options are: ■ Urban ■ Suburban ■ Rural
Coordinates (useful for displaying the device in Google Earth (see Appendix D for more information).	
GPS Status	Indicates the GPS status for network elements which support GPS cards.
Latitude	Applicable only if GPS Status is Disabled. Use this field to manually enter the network element's latitude coordinate to be used by Google Earth. Use positive values for Northern latitudes and negative values for Southern latitudes.
Longitude	Applicable only if GPS Status is Disabled. Use this field to manually enter the network element's longitude coordinate to be used by Google Earth. Use positive values for Eastern longitudes and negative values for Western longitudes.
Altitude	Applicable only if GPS Status is Disabled. Use this field to manually enter the network element's altitude in meters to be used by Google Earth.

2.1.4.2 SNMP Parameters Tab

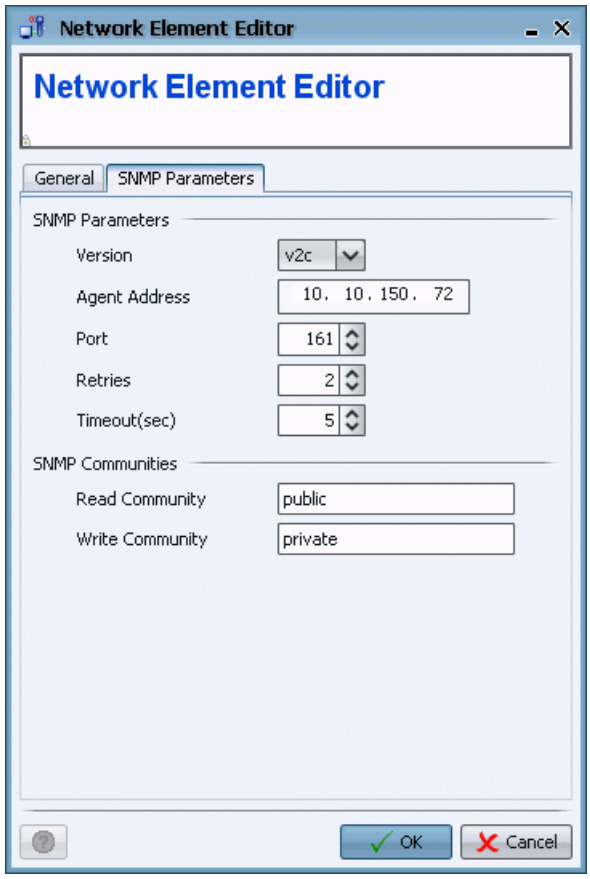

Figure 2-5: Network Element Editor for a Single Device - SNMP Parameters Tab

The SNMP Parameters tab includes the following parameters:

Parameter	Description
SNMP Parameters	
Version	Indicates the SNMP protocol version used for communicating with the device. The available options are: ■ v1 ■ v2c ■ v3 For a complete list of all compatible SNMP versions for each device, see Appendix E.
Agent Address	The device's IP Address. Not configurable when editing the properties of an existing object.

Parameter	Description
Port	The port number used by the device to communicate with the NMS. Not configurable when editing the properties of an existing object.
Retries	The maximum number of retries for SNMP/TFTP communication with the Device. The range is from 0 to 255. The default is 2 retries.
Timeout(s)	The maximum time in seconds that the requesting process waits for a response from the Device before attempting a retransmission (or aborting if the maximum number of retries has been reached). The available range is 1 to 3600 seconds. The default is 15 seconds.
SNMP Communities (only for SNMP Versions v1 and v2)	
Read community	The Read community string (password) for SNMP get operations. This string is used by the SNMP agent to allow/disallow SNMP read access. The default Read community string in the manageable devices is *public*.
Write community	The Write community string (password) for SNMP set operations. This string is used by the SNMP agent to allow/disallow SNMP write access. The Write community can also be used for read (get) operations. The default Write community string in the manageable devices is *private*.
SNMPv3 Credentials (only for SNMP Version v3)	
Username	Username used for authentication
Security Level	Configures the authentication and privacy settings. The available options are: ■ NoAuth_NoPriv - Both authentication and privacy are disabled ■ Auth_NoPriv - Authentication is enabled and privacy is disabled ■ Auth_Priv - Both authentication and privacy are enabled
Authentication Algorithm	Selects the hashing algorithm applied to the authentication password. The available options are: ■ MD5 - Uses the Message-Digest algorithm 5 ■ SHA - Uses the Secure Hash Algorithm
Authentication Password	Password used for authentication.
Privacy Algorithm	Encryption standard used for data transmission. The available options are: ■ AES - Uses the Advanced Encryption Standard ■ DES - Uses the Data Encryption Standard

Parameter	Description
Privacy Password	Encryption key used by the privacy algorithm

2.2 Location Manager

The Location Manager enables to specify information regarding the physical location of managed equipment, to facilitate quick detection of managed objects and to help drill down quickly when using maps to view specific equipment components.

You can specify equipment locations within the Location Manager. Note that a location can have a "Parent" Location, meaning that it belongs to a subset of another location. For example, if network objects are on the third floor of a facility, you can designate both the building and the specific floor as locations; the building would be the parent of the floor. You may define multiple levels for locations. In the current example, the city in which the building is located can be defined as the parent location of the building, and so on.

To associate a single device with a location or several devices with a single location, open the Network Element Editor for the device(s), click the **Browse** button next to the Location field to open the Select Location window and select a location. For further details, refer to Section 2.2.2.

To use the Location Manager:

1 Select *Managed Network > Location Manager* from the *main* menu or the Navigation Pane. The Location Manager window is displayed.

2 Select one or more locations from the list.

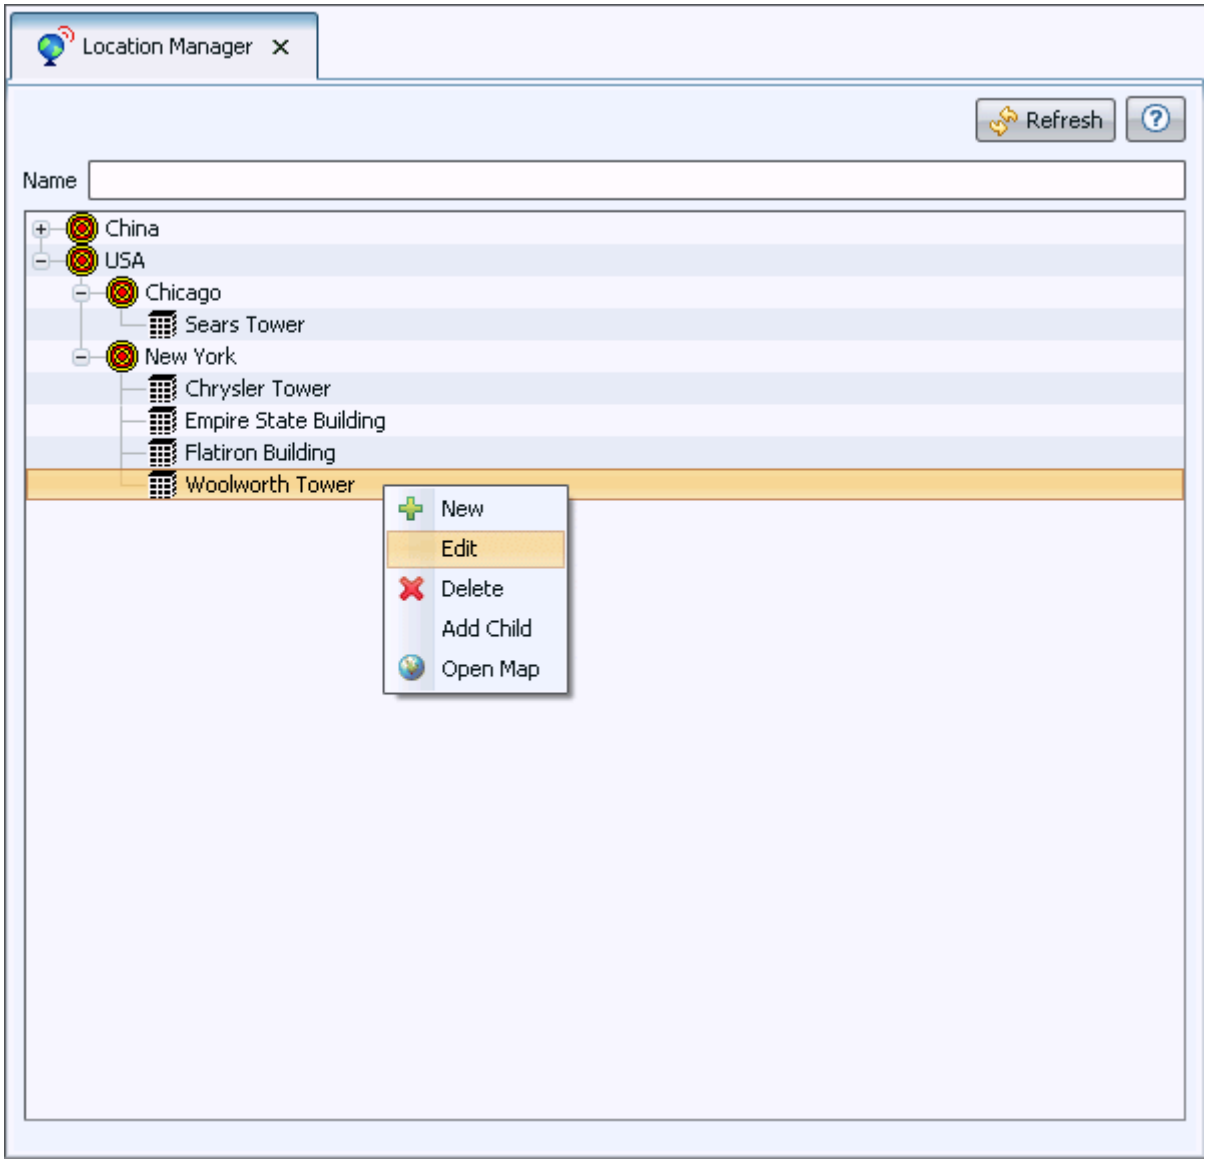

Figure 2-6: Location Manager

3 Use the following commands from the right click menu for various actions in the Location Manager:

Menu item	Action
New	Opens the Location Editor, through which you can define a new location. Refer to Section 2.2.2, for more information
Edit	Opens a Location Editor for a selected location, enabling you to modify the definition of the Location. See Section 2.2.2 for more information.

Menu item	Action
Delete	Enables to delete the selected location(s). When deleting a parent location, the application also deletes its associated child locations. A location associated with equipment cannot be deleted.
Add Child	Opens the Location Editor, through which you can define a new child location that will be subordinate to the selected location. When creating a child location, the name of the parent location field is displayed in the Parent field.
Open Map	Opens the Location Map, displaying the selected location. See Section 2.2.4 for more information.

2.2.1 Searching for a Location

To search for a specific location, enter the full name of the location (for example: California) or part of the name (Ca) in the *Name* field. Only locations matching that specification appear. Note that the filter is case-sensitive and the results are displayed immediately.

2.2.2 Location Editor

The Location Editor enables to create a new location or modify details of an existing location.

To create/modify a location:

1 In the Location Manager, right-click inside the work area and select **New** to create a new location, or, to edit an existing location, right click a location from the list and select **Edit** or double-click on the selected location. The Location Editor is displayed.

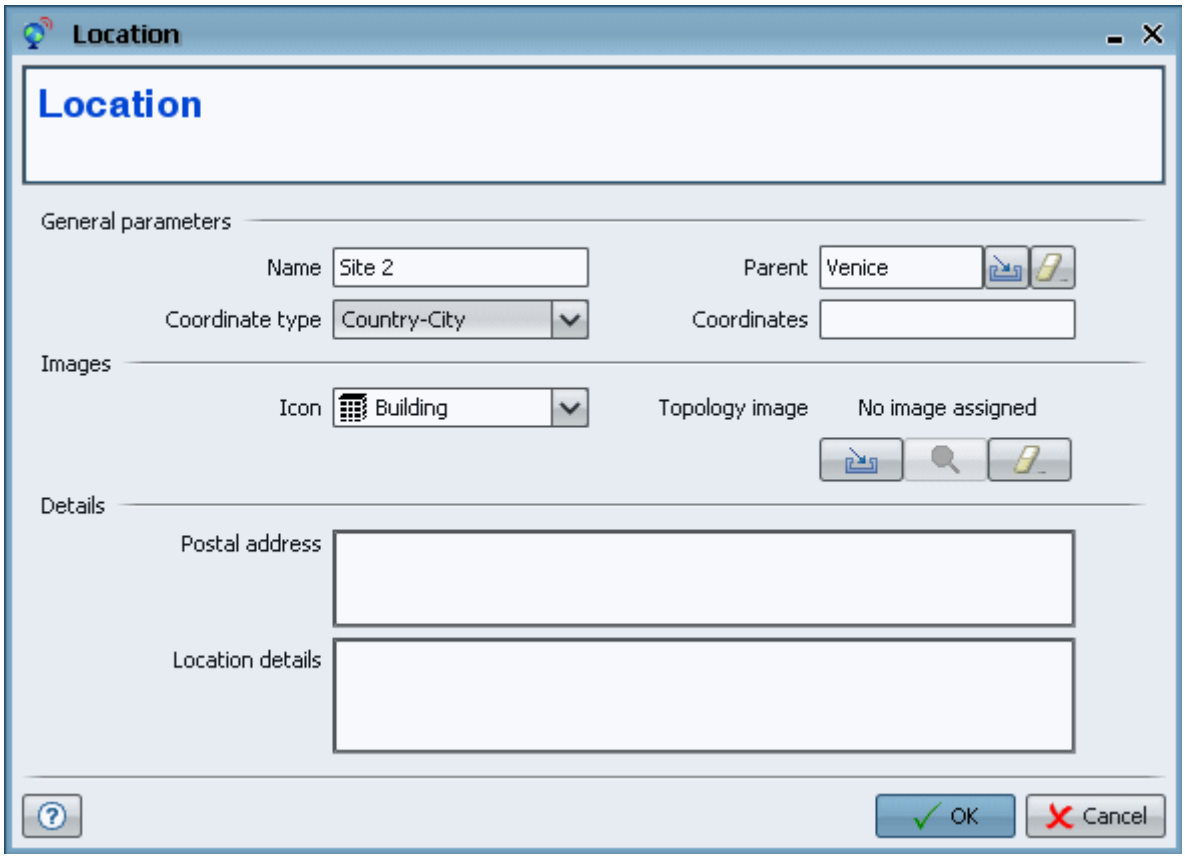

Figure 2-7: Location Editor

2 Type in or modify the Location Editor fields as required:

Parameter	Description
General parameters	
Name	Enter a unique name for the Location, up to 32 printable characters. This is the name that will be used for searching.
Parent	The parent of this location (the location to which this location is subordinate). Click the **Browser** button to open the *Select Location* window through which you can select a Parent Location. Click the **Eraser** icon to clear the Parent Location field.
Coordinate Type	Specifies the way coordinates are designated; see Section 2.2.3 for more information. Valid types are: Country-City, Latitude-Longitude, Area Code-prefix, Vertical-Horizontal.

Parameter	Description
Coordinates	The coordinates of the location, using the Coordinate Type specified above. Up to 80 printable characters. Note that Coordinates do not relocate icons in geographic topology maps; dragging icons does.
Images	
Icon	Select an icon from the drop-down list to associate it with the location. Available icons are: Building, Location.
Topology Image	Click the **Browse** button to open the *Select Location* window through which you can select a map and associate it with the location. Click the **Eraser** icon to clear the field. Click the **Preview** button to view the associated map. Depending on whether or not an image is assigned, the label changes from "No image assigned" to "Image assigned".
Details	
Postal Address	An optional field for entering the address of the location. A string of up to 80 characters.
Location Details	An optional field for entering a description of the location. A string of up to 80 characters.

3 Click **Apply**.

2.2.3 Coordinate Types

You can define locations using a variety of coordinate types, enabling accurate definition of locations. The following are the default coordinate types:

Parameter	Description
Country-City	Country and city access codes. Example: 049-071
Latitude-Longitude	Latitude and longitude. Example: 38.57N, 121.47W
Area Code-Prefix	Area code and prefix. Example: 916-939
Vertical-Horizontal	Vertical / horizontal coordinates, developed by Bell Systems.

INFORMATION

Coordinates type and coordinates values are not used for displaying the location in geographic topology. They are available for informational purposes only.

2.2.4 Location Map

The Location Map viewer displays a topology view of network devices and their relationships. Clicking on the **Open Map** button opens the Location Map viewer for the selected location, displaying its sub-locations and the equipment associated with it. Associating a map with a location is optional; if no map is associated with the location, the Location Map viewer will be empty. Each location can either share a map with any other location or it can be associated with its own map.

Craft In the Local CRAFT Utility, the Map displays only the licensed equipment and their associated SUs (where applicable).

2.2.4.1 Defining Locations, Sub Locations and Maps

Primary (first level) locations have no parent locations. However, you can define sub-locations (second level) whose "parents" are the primary locations. You may continue and define third, fourth and fifth levels, where the parent location for level N is a location in level N-1.

For each location you can also define a Geographical Map.

To define locations, sub locations, and/or maps:

1 **Locations**: From the Location Manager, click **New** to open the Location Editor.

Sub Locations: Select a location and click **Add Child** to open the Location Editor with the selection location as the default parent location. Alternatively, click **New** to open the Location Editor and select an existing node as the parent in the Parent field.

2 Define the Location Name.

INFORMATION

For first level locations, the parent location field must be empty. For additional locations, a parent location must be defined.

3 If you want to associate the location with a map, select the required map in the Topology Image field.

INFORMATION

The required maps must be available (as *.jpg, *.gif, *.bmp, or *.png files) in the client station. The file size is limited to 512 kb.

4 You can optionally define the Location Type, Icon and other details available in the Location Editor.

5 You can associate equipment with locations. See Section 2.2.

2.2.4.2 Location Map Viewer Options

The Location Map viewer includes the following controls:

Parameter	Description
Up one level	Opens the next higher level of the topology map in the same window. Disabled with in first level locations.
Display BreezeMAX SU	Check to display the associated SUs on the map. Only SUs associated with the relevant location are displayed. If the serving Base Station(s) are associated with the same location, each of the displayed SU will be connected to the serving device.
Save	Saves the changes made to the map.
Cancel	Closes the Location Map viewer without saving.

The Location Map viewer provides a pop-up menu with the following options when right-clicking on an equipment/location icon:

Parameter	Description
Drill down	Opens the next lower level of the topology map in the same window. Available only when right-clicking a location in the map, provided there is a sub-location.
Configure	Available only for equipment with an Up state. Opens the Configuration window, enabling to configure the selected device. You can also double-click on the device icon on the map. Refer to the applicable *Device Manager Manual*.
Cut Through	Available only for equipment. Opens a Telnet session to the device. Applicable only for devices that support this feature. (SUs do not support Telnet.)
Open Alarms	Available only for equipment. Opens the Active Events window, enabling to view the alarms (if any) associated with the selected device.

The background color of the device icon on the map is in accordance with the alarm status of the device (the highest severity open alarms). For more information, refer to "Alarm Severities" - Section 3.3.1.2.

Place a cursor on an icon to view its general details.

2.3 Discovery Settings Manager

Craft Not applicable to the Local CRAFT Utility.

The Discovery Settings application enables to define the IP ranges/sub-nets in which devices are expected to be discovered, and global SNMP Read and Write community pairs. This defines the scope of your network and only devices within this scope will be discovered. Up to 65535 IPs are supported.

To open the Discovery Settings Manager Application:

Select *Managed Network > Discovery Settings Manager* from the main menu or the Navigation Pane.The *Discovery Settings Manager* displays the currently defined IP address ranges/sub-nets (up to 65535 IPs) and other applicable information and enables to add, edit, or remove a range.

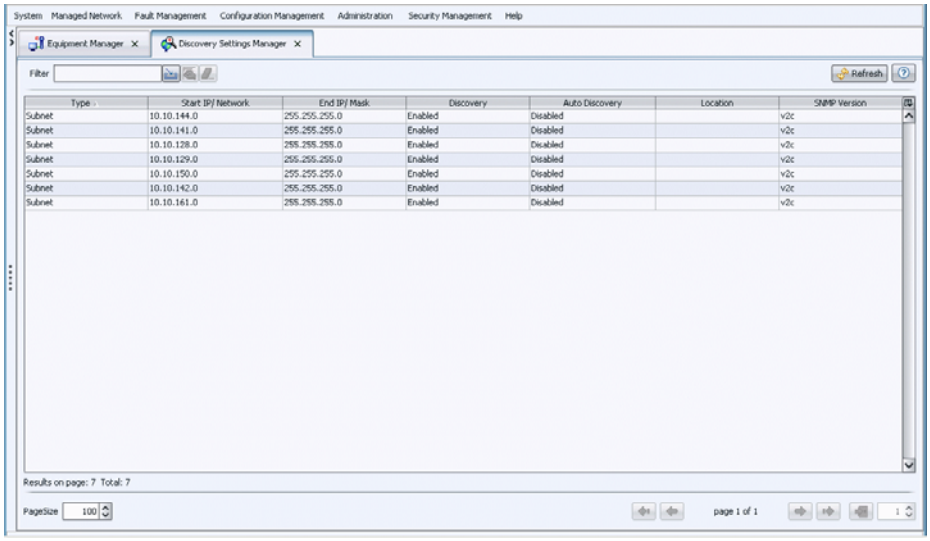

Figure 2-8: Discovery Settings Manager

Use the right click menu to perform the following available actions:

Button	Action
New	Click to add a new entry to the table. This is done via the Network Settings Window. Up to 65535 IPs are supported.
Edit	Click to edit an entry from the table. This is done via the Network Settings Window.

Button	Action
Delete	Click to delete the selected Network IP Address Range entry.
Import	Click to import an existing file (.xml or .nar) of IP address ranges settings. Browse to the location of the file and click **Open**.
Export	Click to export the current IP Address Ranges table to an external file (.xml). Browse to the location where the file is to be saved and click **Save**.

2.3.1 Network Settings Window

New or existing address ranges are edited inside the Network Settings window

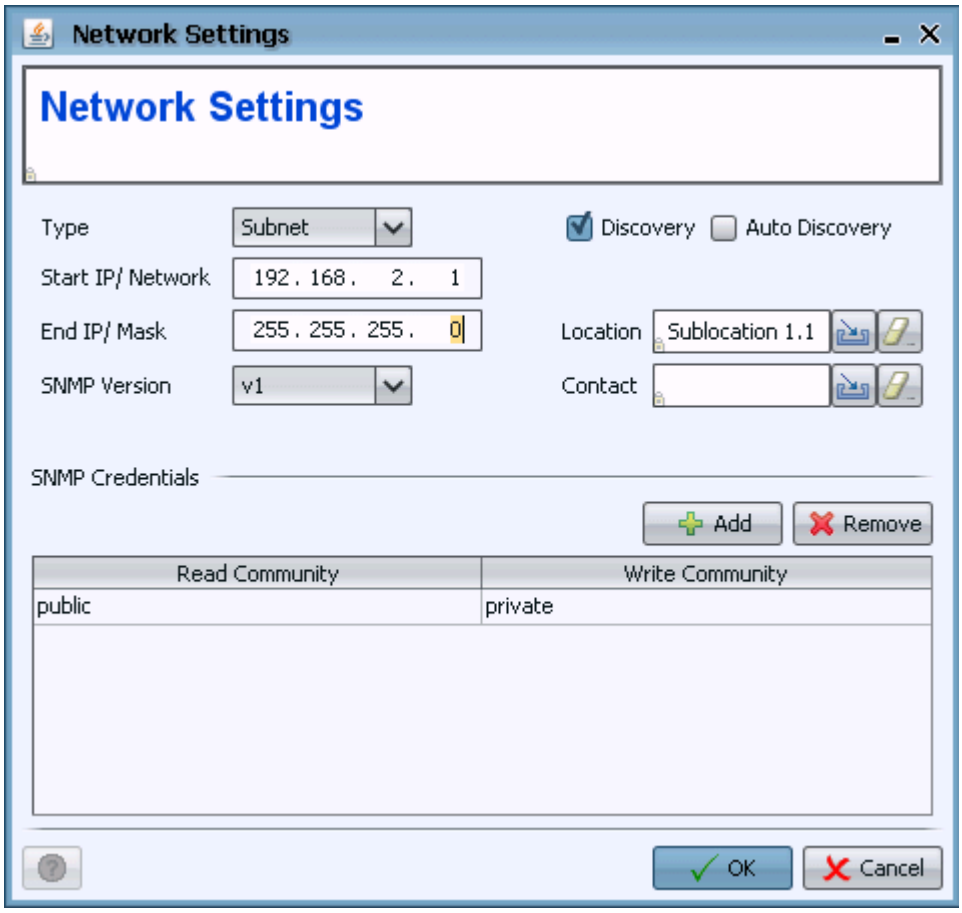

Figure 2-9: The Network Settings Window

The following information is displayed for each range:

Parameter	Description
Type	The type of range definition: IP Range or Subnet. Select from the drop-down menu whether to define the range using IP Range (the first and last address in the range) or Subnet (Network and Mask).
Start IP/Network	The first IP address in an IP Range or the Subnet address in a Subnet range type.
End IP/Mask	The last IP address in an IP Range or the Subnet Mask in a Subnet range type. To minimize unnecessary traffic load in the network, avoid defining IP address ranges that include too many "gaps", e.g., non existing addresses.
Discovery	Check to enable periodical discovery, according to parameters defined in the Task Manager. When unchecked, discovery is disabled.
Auto Discovery	Indicates whether Auto Discovery for the range is enabled or disabled. When enabled, Discovery will be initiated whenever a trap is received from a device in the range.
Location	The location defined for devices in the range. If a location is not defined, the range will be used as the default location.
Contact	The contact defined for devices in the range.
SNMP Version	The SNMP protocol version used for communication by the discovered devices. This can be either: ■ v1 ■ v2c ■ v3 For a complete list of all compatible SNMP versions for each device see Appendix E.

Parameter	Description
SNMP Credentials	Use the Add and Remove buttons to populate the SNMP Credentials. The type of credentials differ, depending on the SNMP version. For SNMP v1 and v2c, fill in the read/write community table: ■ Read Community - SNMP Read community to be used by discovery when accessing devices in the range. If unique communities are not defined, the defined global Read communities will be used one after the other. ■ Write Community - The unique SNMP Write community to be used when accessing discovered devices in the range. If unique communities are not defined, the global Write community paired with the global Read community that was used to discover devices in the range will be used when accessing these devices. For SNMP v3, the following credentials apply: ■ Username - Username used for authentication ■ Security Level - Authentication and privacy settings » NoAuth_NoPriv - Both authentication and privacy are disabled » Auth_NoPriv - Authentication is enabled and privacy is disabled » Auth_Priv - Both authentication and privacy are enabled ■ Authentication Algorithm - Hashing algorithm applied to the authentication password » MD5 - Message-Digest algorithm 5 » SHA - Secure Hash Algorithm ■ Authentication Password - Password used for authentication ■ Privacy Algorithm - Encryption standard used for data transmission » AES - Uses the Advanced Encryption Standard » DES - Uses the Data Encryption Standard ■ Privacy Password - Encryption key used by the privacy algorithm

INFORMATION

- Whenever possible, use unique SNMP community pairs for defined ranges rather than global community pairs.The key for deciding which Write community to use is the IP range. Unique community definitions enable to use the same Read community with several different Write communities in different ranges, as well as to use the same Write community with several different Read communities in different ranges. When using global community pairs, the Read community is the key for deciding which Write community to use, meaning that the Read community should not be used in more than one pair.
- The Discovery process is based on the defined Read community. All future device management actions will use the defined Write community. If a wrong Write community was defined, the device will be discovered and displayed, but its status will be "Unknown" and it will not be possible to manage it. The same is true for cases where the Write community in the device was changed (not via the management system) after being discovered. In this case, the range must be updated with the correct Write community, the device(s) must be deleted from the database, and the Discovery process for the range should be re-initiated.
- When using global community pairs, the Read community is the key for deciding which Write community to use. Each Read community should not be used more than once.

Chapter 3 - Fault Management

In This Chapter:

- "Introduction" on page 51
- "Active Events" on page 52
- "Event History" on page 54
- "Event Filter Manager" on page 72
- "Event Template Manager" on page 81
- "Script Command Manager" on page 93
- "Event Forwarding NBI Manager" on page 96 - not applicable to the Local CRAFT Utility

3.1 Introduction

The Fault Management module provides network operators with the full fault management capabilities required for rapid problem solving to ensure that the network is up and running.

The Fault Management module comprises efficient tools for managing alarms generated in the system. Information about each alarm is readily displayed, helping operators diagnose and correct system failures. The Fault Management tools allow you to acknowledge received alarms, clear, or forward them. You can apply filters to display specific alarms or to display specific information about each alarm according to your needs.

You can connect to other management systems and forward traps, apply templates to automate the processing of alarms, and trigger external scripts.

The following Fault Management tools are available:

- Active Events - Displays real time updates of new alarms entering the system, color coded according to severity and allows to manage each alarm.
- Event History - Enables to query the database for all events and alarms that occurred in the system in specific time intervals, color coded according to severity.
- Event Filter Manager - Allows to create, edit and delete filters which are used to display events in Active Events and Event History windows.
- Event Template Manager - Allows to create, edit and delete templates to automate the processing of alarms.
- Script Command Manager- Allows to associate template-matched alarms with external scripts.
- Event Forwarding NBI Manager - Provides an interface where you can connect to other management systems and effectively forward traps.

3.2 Active Events

The Active Events window displays real time updates of new alarms entering the system, color coded according to severity. It allows you to manage and diagnose alarms.

By default, only events that are categorized as alarms are displayed, and cleared alarms are removed from the Active Events display and can only be viewed from the Event History window. These can be either:

- Manually cleared alarms
- Alarms cleared by the automatic correlation rules
- Alarms associated to a device that can no longer be managed by the system
- Multiple occurrences of the same alarm (only one is visible in Active Events)

To change the default settings, see "Event Template Manager," Section 3.5.

To open Active Events:

Select *Fault Management > Active Events* from the main menu or from the Navigation Pane. The Active Events window is displayed.

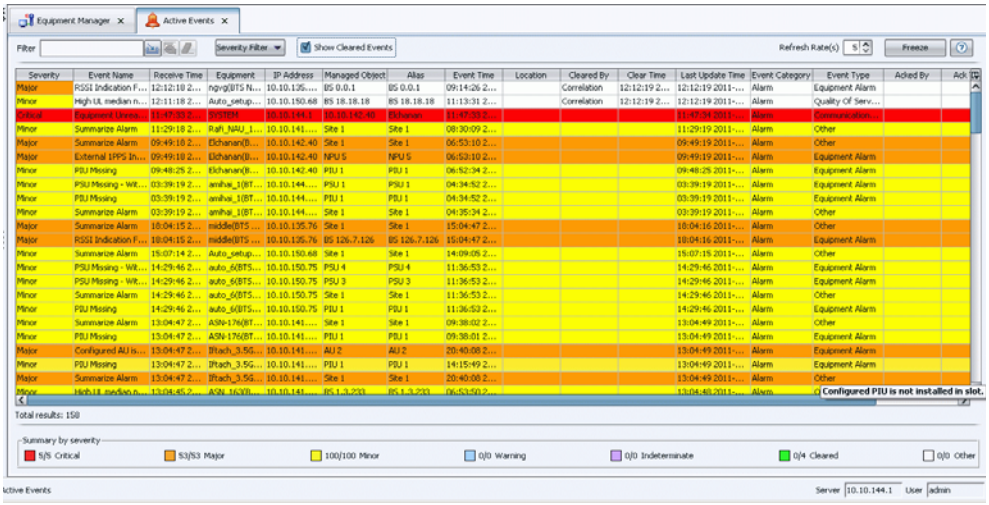

Figure 3-1: Active Events Window

When Active Events is launched, it opens in Listening mode. The display is updated whenever an alarm is received or cleared.

To freeze the display such that the display of incoming alarms is suppressed, click on the **Freeze** button. When in Freeze mode, the button label changes to Unfreeze, enabling to return to the default state of displaying incoming alarms on the fly.

The Active Events window is divided into the following main areas:

- *Filter* - allows you to filter out displayed alarms according to a custom filter or according to severity. The displayed alarms change according to your selection. Refer to Section 3.4 for information on the filtering options.
- *Alarm Table* - displays general information about each alarm (see Section 3.3.1.1). You can customize the information displayed in the table to provide a more efficient view.
- *Counters* - displays the distribution of the alarms, color coded according to their severity, and a count of the number of active alarms meeting the filter criteria out of the total number of active alarms. The format is x/y, where x is the number of active alarms meeting the filter criteria per severity and y is the total number of active alarms per severity.

Section 3.3.1 provides details on managing alarms in Active Events and Event History. The following information is available:

- "Alarm Table," Section 3.3.1.1
- "Alarm Severities," Section 3.3.1.2
- "Editing Event Filters," Section 3.4.2
- "Alarm Operations," Section 3.3.1.7

3.3 Event History

The Event History window displays a list of all events and alarms occurred in the system, color-coded according to severity.

To open the Event History:

Select *Fault Management > Event History* from the main menu or from the Navigation Pane. The Event History window is displayed:

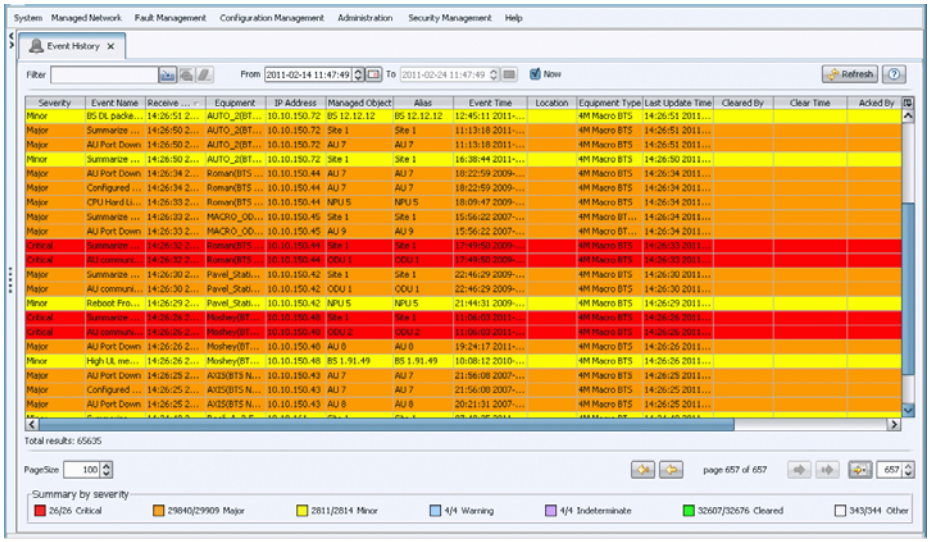

Figure 3-2: Event History Window

To display newly received alarms or to updated the display of cleared alarms, click on the **Refresh** button.

The Event History window is divided into the following main areas:

- *Counters* - displays the list of severities, color coded according to pre-defined settings, and a count of active alarms distributed according to severity. The format is x/y, where x is the number of active alarms meeting the filter criteria per severity and y is the total number of active alarms per severity.
- *Alarm Table* - displays general information about each event or alarm (see Section 3.3.1.1). You can customize the information displayed in the table to provide a more efficient view. You can also define the maximum number of alarms displayed in the table (see Section 3.3.1.1.1).
- *Filter* - allows you to filter out displayed alarms according to a custom filter or for a range of dates that the event occurred. By default the alarms are displayed for 10 days, but the range can be changed. Click on the calendar icon to change the date and use the up/down arrows to change the time from and until when to display events. The default time displayed is the real time of the system. If Now is checked, alarms will be displayed from the time selected until the present time.

- Page Size - allows you to limit the number of displayed alarms.
- *Page x of y* - a read only display of the number of the page displayed. You can browse through the multiple screen displays using the right/left arrows.

Section 3.3.1 provides details on managing alarms in Active Events and Event History. The following information is available:

- "Alarm Table," Section 3.3.1.1
- "Alarm Severities," Section 3.3.1.2
- "Toggle Counter," Section 3.3.1.5 (applicable only for Active Events)
- "Event Details Window," Section 3.3.1.6
- "Alarm Operations," Section 3.3.1.7

3.3.1 Managing Alarms

The following paragraphs describe how to manage alarms using Active Events and Event History:

- "Alarm Table," Section 3.3.1.1
- "Alarm Severities," Section 3.3.1.2
- "Severity Filter," Section 3.3.1.3
- "Show Cleared Events," Section 3.3.1.4
- "Toggle Counter," Section 3.3.1.5
- "Event Details Window," Section 3.3.1.6
- "Alarm Operations," Section 3.3.1.7

3.3.1.1 Alarm Table

The Alarms Table presents general information about each alarm occurred in the system. You can change the order of the columns by dragging the columns title to the desired location. The following describes the available attributes (columns) in alphabetic order.

Parameter	Description
Acked By	The user who acknowledged the alarm.
Ack Time	The date and time the alarm was acknowledged.
Alias	A user defined name for the equipment.
Cleared By	The user who cleared the alarm.
Clear Time	The date and time that the alarm was cleared.
Location	The location of the equipment at the source of the alarm.
Equipment	The name of the equipment at the source of the alarm.
Equipment Type	The type of equipment at the source of the alarm.
Event Category	The category classification of the event. The event categories are: Alarm, State Change, System Event, Config Change
Event Name	The name of the alarm. For SNMP traps, the name is the trap OID. If the name is blank when received by the application, the alarm takes the name of the event template used for processing.
Event Time	The time and date the event occurred.
Event Type	The classification type of the alarm. Event types vary according to the event category.
Last Update Time	The date and time the network element last updated the alarm.

Parameter	Description
Managed Object	The name of the equipment associated with the alarm. If the object name is unknown, NotFound appears. An identification of a component of the network element for which the alarm occurred. For example a port on a router would be a managed object instance.
IP Address	The IP address of the mediation agent reporting this alarm.
Receive Time	The time the alarm was received by a mediation agent.
Severity	The severity of the alarm. Refer to Section 3.3.1.2

Event Category	Event Type
Alarm	All
	Other
	Communications Alarm
	Quality of Service Alarm
	Processing Error Alarm
	Equipment Alarm
	Environmental Alarm
	Integrity Violation
	Operational Violation
	Physical Violation
	Security Violation
	Time Domain Violation
State Change	All
	State Or Status Change
System Event	All
	System Event
	Software Download
	Backup Configuration File
	Maintenance
	Telnet Session

Event Category	Event Type
Config Change	All
	Config Change
	Entity Added
	Entity Changed
	Entity Removed

3.3.1.1.1 Limiting the Number of Events from the Database

You can change the maximum number of events recorded in the database by changing the value of the *Max Row Count field* in the Database Aging Task Editor (Section 5.2.11). If the number of alarms exceeds 150% from the maximum number of alarms, older alarms will be deleted. If your Secondary Storage is set up as CSV, they will be saved to the following folder:

```
<Management_System>/filesystem/archive
```

3.3.1.1.2 Customizing Views in Active Events / Event History

You can make changes to a view by adjusting columns in the Alarm Table

The following are the available options for customizing the view:

- Sort columns - Click on the column header of the column according to which you want to sort the table. An icon appears on the header, indicating sorting in ascending/descending order. Only the following columns can be sorted: Severity, Event Name, Received Time, Equipment, IP Address, Managed Object, Alias, and Location.

INFORMATION

Column sorting is not available in Active Events.

- Move Columns - Click the column header of the column you want to move and drag it to its new location.
- Resize Columns - Click the right margin of the column header you want to resize and drag to resize the column. The column margin is located between the column headers.

You can also Configure which alarms will appear in the Alarm Table, using the Event Filter Manager (see Section 3.4).

3.3.1.2 Alarm Severities

The management system is delivered with a set of default alarm severity definitions, each with its own default color.

The default severity definitions are:

Parameter	Description
Critical	A service-halting condition occurs, requiring immediate corrective action. The equipment is completely out of service and you must restore its capability.
Major	A service-affecting condition has developed and corrective action is required. There is severe degradation in the equipment's capability and you must restore its full capability.
Minor	A non-service-affecting fault condition exists and corrective action should be taken in order to prevent a more serious fault. The detected alarm condition is not currently degrading the capacity of the equipment.
Warning	A potential or impending service-affecting fault could occur, and no significant effects have yet been felt. Action should be taken to further diagnose and correct the problem to prevent it from becoming a more serious service-affecting fault. The detected alarm condition does not currently pose a problem, but may degrade the capacity of the equipment if you do not take corrective action.
Indeterminate	Indicates an alarm for which the perceived severity is uncertain, due to any cause.
Cleared	The problem is corrected, and the correlated alarm is cleared from the Alarm Table.
Other	All other types of events/alarms.

The Severity of alarms received from managed devices is according to the severity level defined in the device for each specific alarm.

3.3.1.3 Severity Filter

The Severity Filter drop-down list in the Active Events manager enables selection of severity levels to be displayed. Only alarms whose severity level matches one or more of the selected severities will be displayed.

By default all severity levels except Cleared are selected. If Cleared will be selected, the relevant event will be displayed for a short time after its occurrence.

3.3.1.4 Show Cleared Events

If this option is selected, cleared events will continue to be displayed for a short time, with the original severity but with a white background indicating that it was cleared, and clearing action details (Cleared By, Clear Time).

3.3.1.5 Toggle Counter

Toggle Alarms are a group of alarms that are associated to the same Network Element, have the same attributes but not the same event time and are raised and cleared repeatedly before the AlvariSTAR server is able to clear and remove the alarm from the Active Events list.

The attributes used for matching a Toggle Alarm are:

- equipmentId
- eventOID
- eventCategory
- moType
- moInstance
- managedObject
- eventType
- probableCause

In order to avoid flooding the Active Events table with toggling alarms, these alarms will be suppressed and an attribute named Toggle Counter that cumulates the number of toggle occurrences, is used in the Active Events table. If a Toggle Alarm already exists in the Active Alarms table, only an update will be performed, incrementing the Toggle Counter attribute and changing the alarm severity and timestamp to the severity and timestamp of the last Toggle Alarm. The Toggle Counter is displayed in parenthesis next to the event's Severity in the Active Events table.

All instances of the toggling alarms can be found on the Event History in case required for further analysis.

3.3.1.6 Event Details Window

The Event Tables in Active Events/Event History provide a simplified display, summarizing each alarm. The Event Details window, however, presents all the information associated with a selected alarm.

To open the Event Detail Information window:

From the Active Events/Event History window, select an alarm from the table, right-click and select **Event Details** from the *Alarm* pop up menu, or double-click on the alarm.

An example of the Event Details window is displayed below:

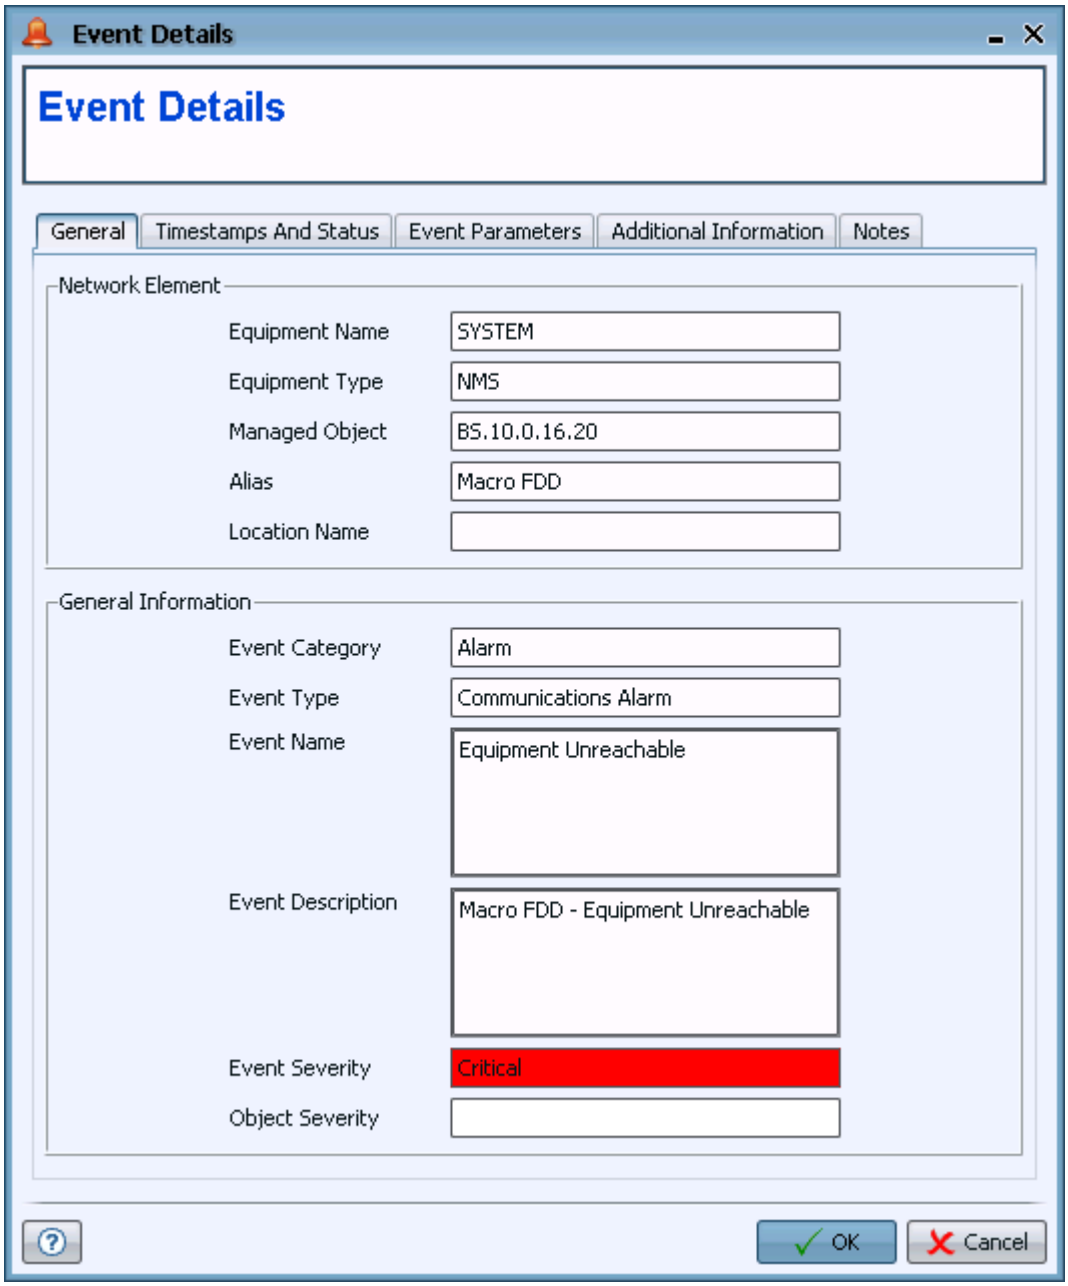

Figure 3-3: Event Details Window

The Event Details window consists of the following tabs:

- "General Tab," Section 3.3.1.6.1
- "Timestamps and Status Tab," Section 3.3.1.6.2
- "Event Parameters Tab," Section 3.3.1.6.3
- "Additional Information Tab," Section 3.3.1.6.4
- "Notes Tab," Section 3.3.1.6.5

3.3.1.6.1 General Tab

The General tab displays the following alarm attributes:

Parameter	Description
Network Element	
Equipment Name	The name of the equipment.
Equipment Type	The type of equipment: Base Station, Micro Base Station, SU, NPU, AU.
Managed Object	The name of the equipment associated with the alarm. If the object name is unknown, NotFound appears.
Alias	A user defined name for the equipment
Location Name	The physical location of the equipment.
General Information	
Event Category	The category classification of the event. The event categories are: Alarm, State Change, System Event, Config Change
Event Type	The classification type of the alarm. Event types vary according to the event category.
Event Name	The name of the alarm. For SNMP traps, the name is the trap OID. If the name is blank when received by the application, the alarm takes the name of the event template used for processing.
Event Description	An optional text description of the alarm as defined in the related event template.
Event Severity	The severity of the alarm.
Object Severity	The alarm severity of the object associated with the alarm.

3.3.1.6.2 Timestamps and Status Tab

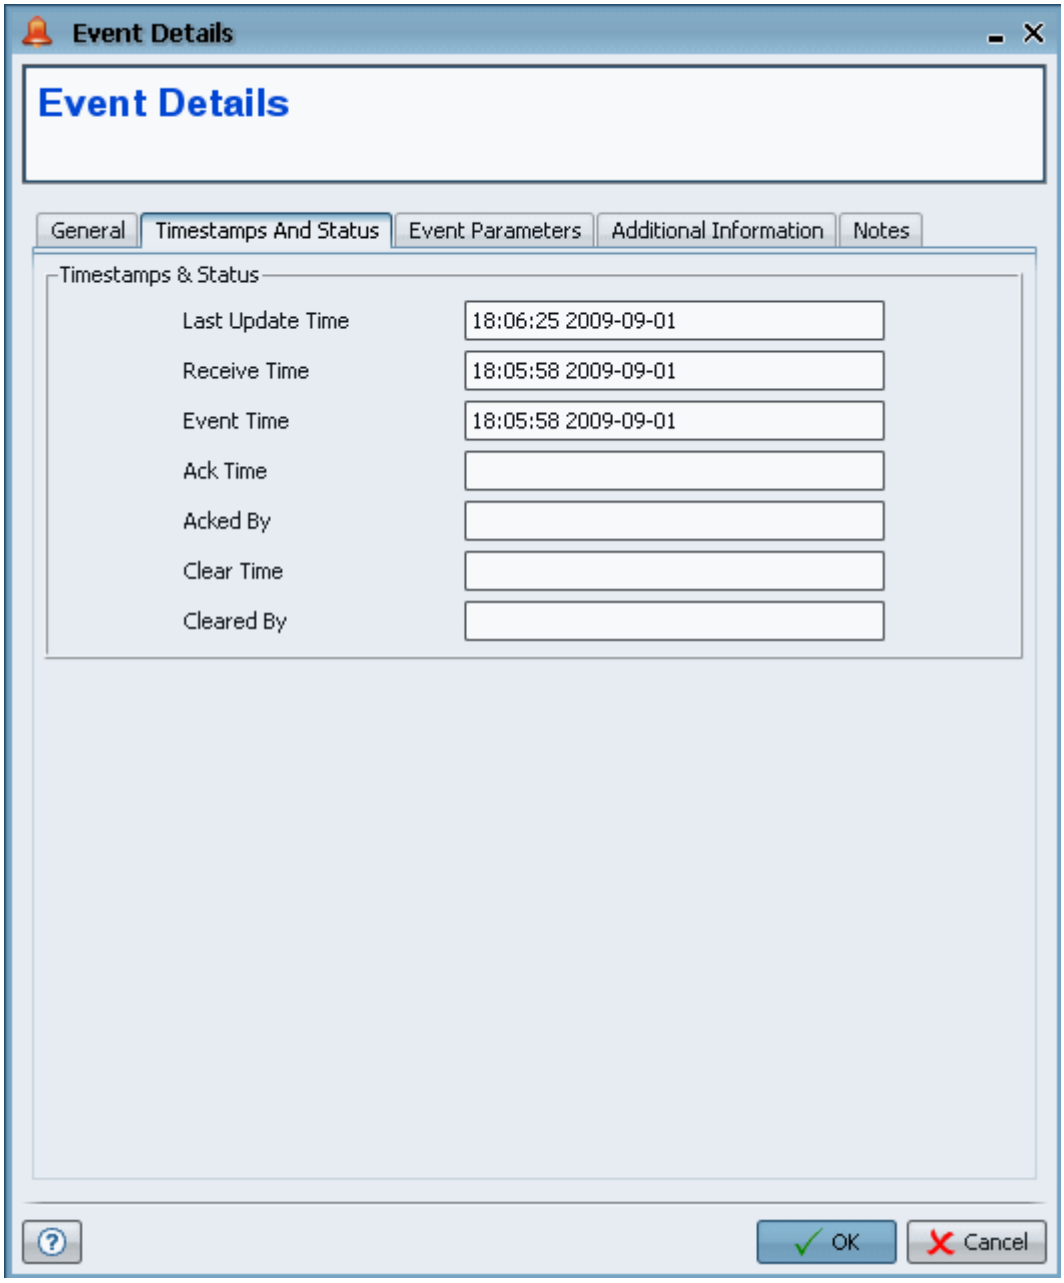

Figure 3-4: Event Details Window - Timestamps and Status Tab

The Timestamps and Status tab displays the following alarm attributes:

Parameter	Description
Last Update Time	The date and time the Alarm Table was last updated.
Receive Time	The time a mediation agent received the alarm.

Parameter	Description
Event Time	The time that the event actually occurred.
Ack Time	The date and time the alarm was acknowledged.
Acked By	The user who acknowledged the alarm.
Clear Time	The date and time that the alarm was cleared.
Cleared By	The user who cleared the alarm.

3.3.1.6.3 Event Parameters Tab

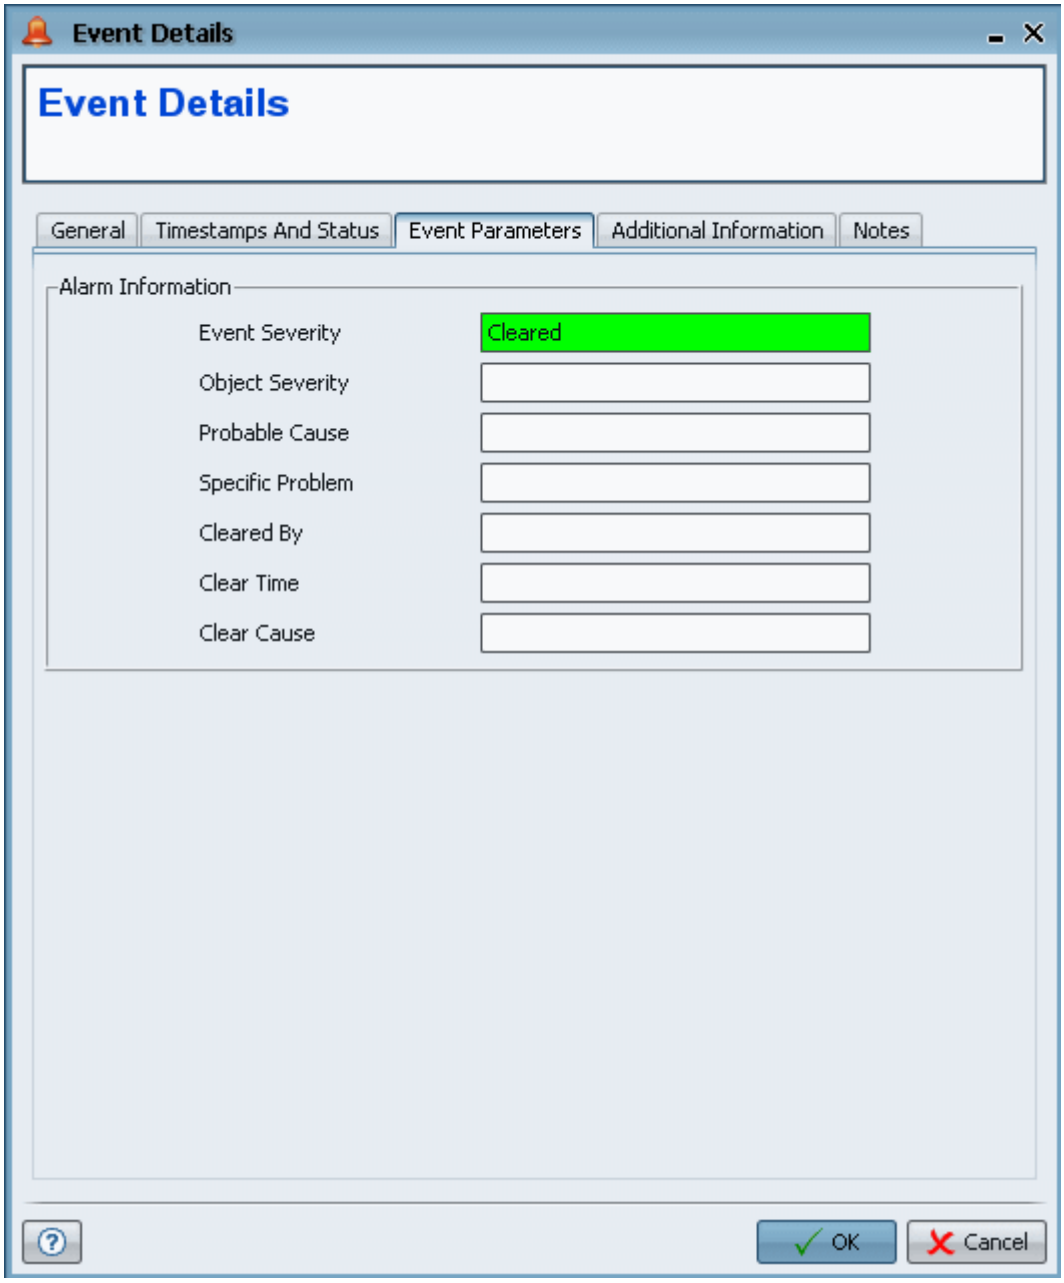

Figure 3-5: Event Details Window - Event Parameters Tab

The Event Parameters tab displays the following alarm attributes:

Parameter	Description
Event Severity	The severity of the alarm.
Object Severity	The alarm severity of the object associated with the alarm.

Parameter	Description
Probable Cause	The probable cause of the alarm.
Specific Problem	The specific problem that caused the alarm.
Cleared By	The user who cleared the alarm.
Clear Time	The date and time that the alarm was cleared.
Clear Cause	The reason the alarm was cleared.

3.3.1.6.4 Additional Information Tab

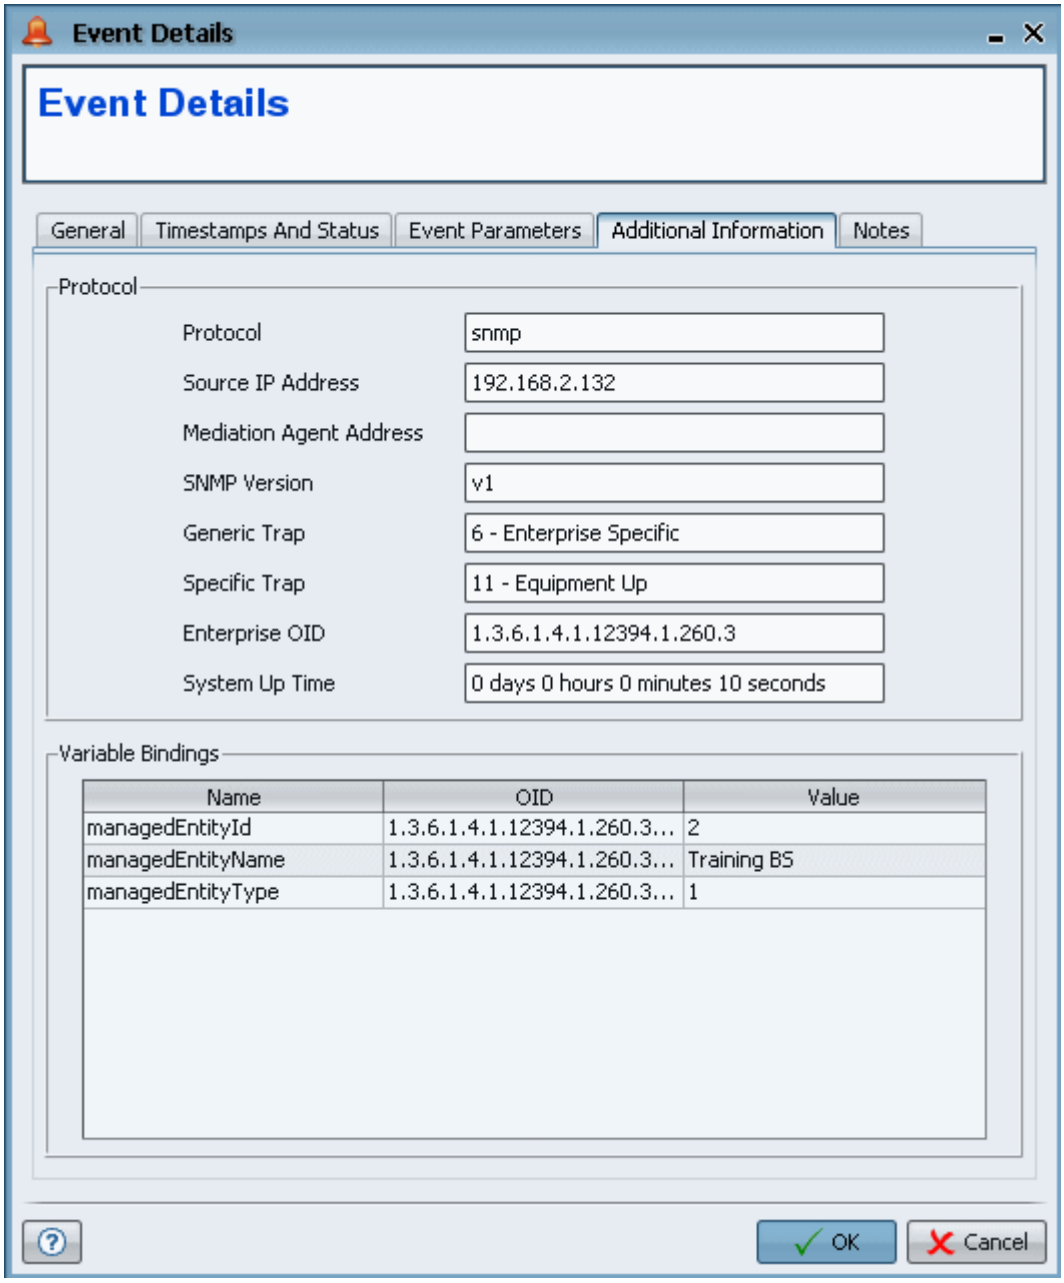

Figure 3-6: Event Details Window - Additional Information Tab

The Additional Information tab displays the following alarm attributes:

Parameter	Description
Protocol	
Protocol	The protocol used for the alarm. The current version supports SNMP only.

Parameter	Description
Source IP Address	The IP address of the object or device that sent the alarm. For Q3, the source is the TNS name of the device or object.
Mediation Agent Address	The IP address of the mediation agent that received the trap.
SNMP Version	The SNMP version number
Generic Trap	The generic trap code. For Q3, it indicates an enterprise specific trap. Possible values: 0,1,2,3,4,6
Specific Trap	The specific trap code as defined in the MIB, used only if Generic trap is 6.
Enterprise OID	The SNMP Object Identification number. For SNMP v1, the OID is the enterprise value from the SNMP PDU. For SNMP v2c, the OID is the SNMP trap OID. For Q3, the OID is the Q3 Alarm Enterprise OID—1.3.6.1.4.1.231.7.1.3.1.1.5.204.
System Up Time	Seconds elapsed since the object or device last rebooted. For Q3, it is seconds elapsed since the Q3 Listener/Parser last rebooted.
Variable Bindings - Displays a list of the variable bindings for the selected alarm	
Name	The name of the variable as it appears in the MIB.
OID	The variable's Object Identification.
Value	The value for the variable set in the MIB.

3.3.1.6.5 Notes Tab

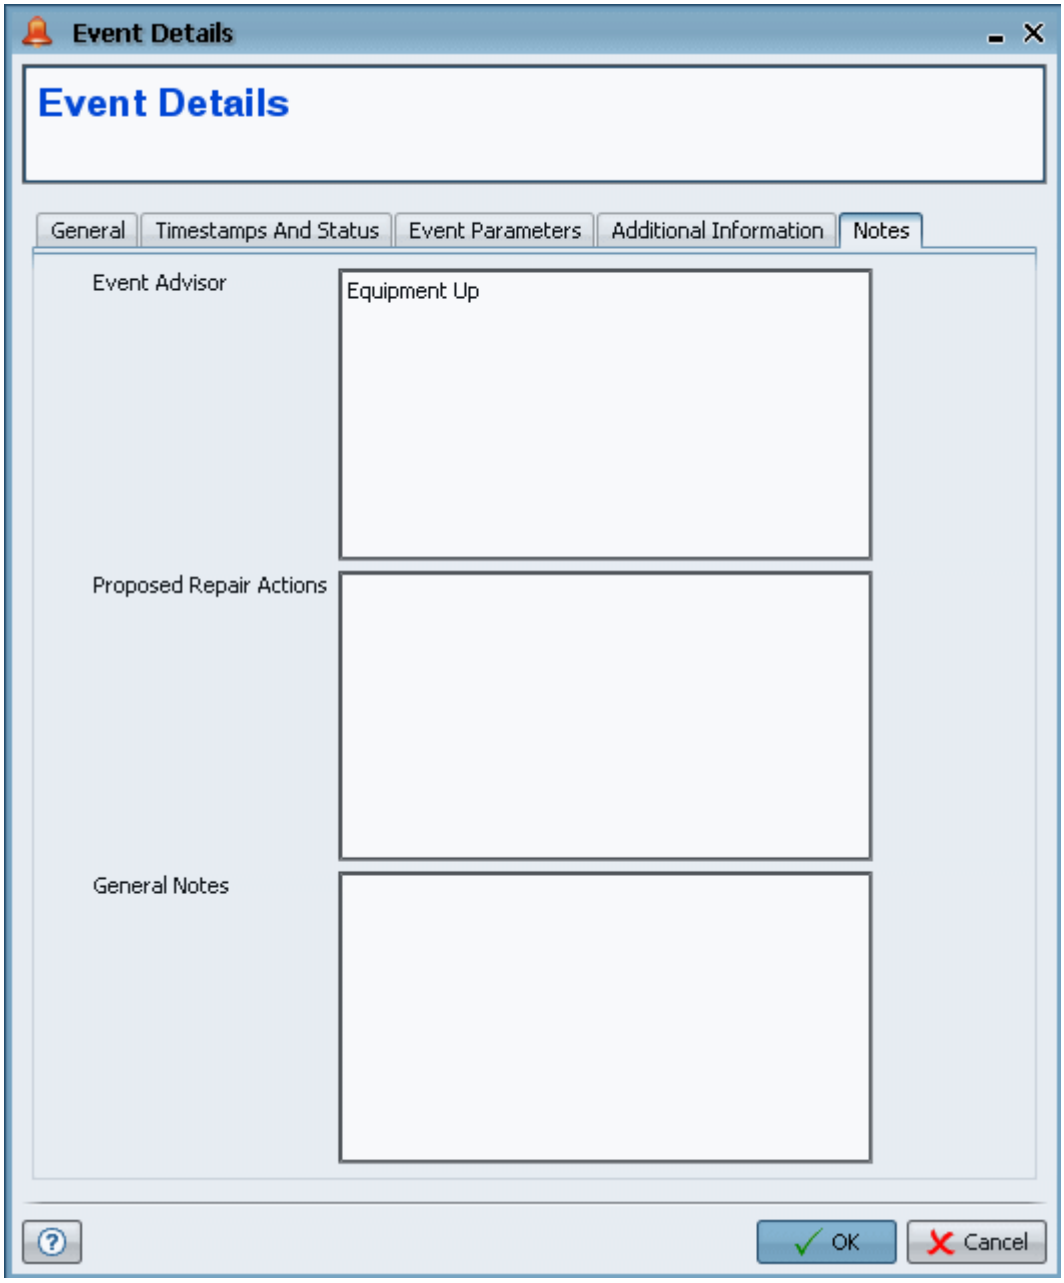

Figure 3-7: Event Details Window - Notes Tab

The Notes tab displays the following information about the alarm:

Parameter	Description
Event Advisor	Displays a text description of the alarm and sometimes proposes a remedy. For example, "The device has received an improperly authorized protocol message. The message has been discarded." The default message displayed in the Advisor page comes from the trap's MIB, but the message can be edited in the Event Template Editor Advisor page (see Section 3.5.1.3.1). The Advisor message is the default message for any e-mails sent about the alarm.
Proposed Repair Actions	The proposed remedy for the Alarm. The remedy comes from the trap's MIB.
General Notes	Enables the operator to provide additional information about the selected alarm, such as steps already taken to correct the problem. The note is stored with the alarm.

3.3.1.7 Alarm Operations

The system provides many alarm management features allowing you to diagnose, troubleshoot, process, and clear alarms.

All general alarm operations are available via the context menu.

To manage alarms:

Select an alarm from the table and right-click on it to display the context menu.The following are the displayed items:

Action	Description
Acknowledge Alarm	Acknowledges the selected *open* alarm(s). The current date and time appear in the *Ack Time* field, and the name of the currently logged-on user appears in the *Ack By* field. Available for events that were set in the Event Template Manager to require acknowledgement and for alarms. This status can be changed, using an event template. See Section 3.5.1 for additional information.
Unacknowledge Alarm	Unacknowledges previously acknowledged selected alarm(s), and clears the entries in the *Ack By* and *Ack Time* fields. Available for the current user if the alarm was previously acknowledged by the current user.

Action	Description
Clear Alarm	Clears only *open* selected alarm(s). Alarms' status changes from *open* to *cleared*. The status of the alarm changes from *open* to *cleared*, but the alarm remains in the table. Available if the Event type of a selected entity is Alarm and is not acknowledged automatically by correlation mechanism.
Event Details	Displays detailed information about the selected alarm. See Section 3.3.1.6 for additional information.
Event Advisor	Displays a text description of the alarm and sometimes proposes a remedy.
Clearing Event	Opens the Event Details window of the event that cleared the alarm.
Equipment Details	Opens the Configuration Manager for the selected equipment.
Cut Through	Opens a Telnet session to the device. Applicable only for devices that support this feature.
Topology Map	Displays the Location Map centered on the equipment associated with the selected alarm. Available only when the device has a location associated with it.
Export	Exports the selected alarm(s) and creates a comma delimited text file that can be imported into other programs (for example, a spreadsheet).
Print Preview	Displays a preview of the Event History of the selected alarm(s) before printing.
Print	Prints the Event History of the selected alarm(s).

3.4 Event Filter Manager

The Event Filter Manager lets you create, edit and delete filters which are used to display events in the Active Events and Event History windows. When using pre-defined filters, specific alarm types are displayed, allowing you to control alarms more efficiently.

To open the Event Filter Manager:

1 Select *Fault Management > Event Filter Manager* from the main menu or from the Navigation Pane.

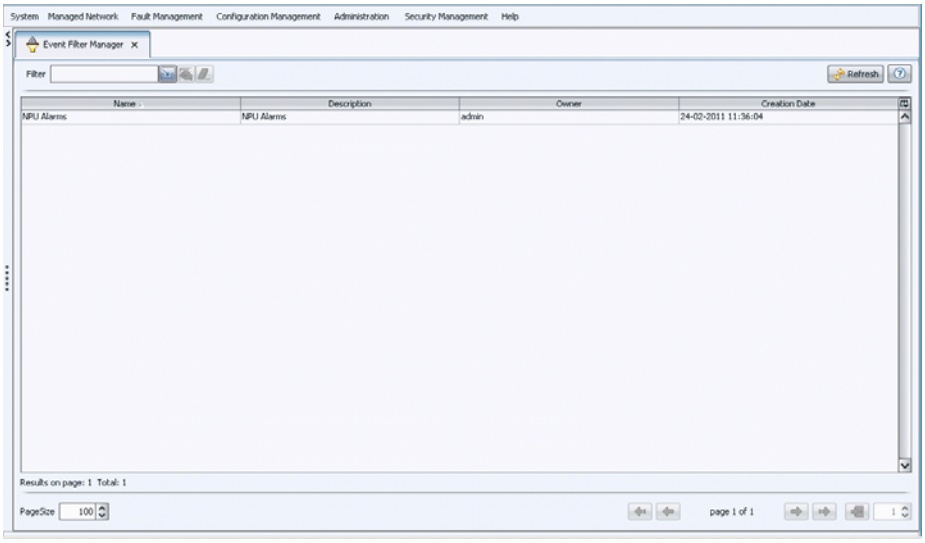

Figure 3-8: Event Filter Manager

INFORMATION

You cannot apply an event filter to the Alarm Tables in the Active Events or Event History windows from the Event Filter Manager. To apply a filter, select a Custom Filter in the Active Events or Event History windows.

For each filter, the following information is displayed:

Parameter	Description
Name	The name of the filter
Description	A description of the filter.
Owner	The user who created the filter.
Creation Date	The filter's date of creation.

2 From the Event Filter Manager you can:

» Create new event filters - see Section 3.4.1

» Modify existing event filters - see Section 3.4.2

» Delete event filters - see Section 3.4.3

3.4.1 Creating Event Filters

To create a new event filter:

1 From the Event Filter Manager window (Figure 3-8), right click and select **New** to define a new event filter. The Event Filter Editor window is displayed.

The Event Filter Editor window comprises the following main pages:

» "General Tab" on page 73

» "Simple Filter Tab" on page 75

2 Enter the relevant information in each of the pages.

3 Click **OK** to confirm your choices and save them to the database.

3.4.1.1 General Tab

In the General Tab, you can add general information on the filter.

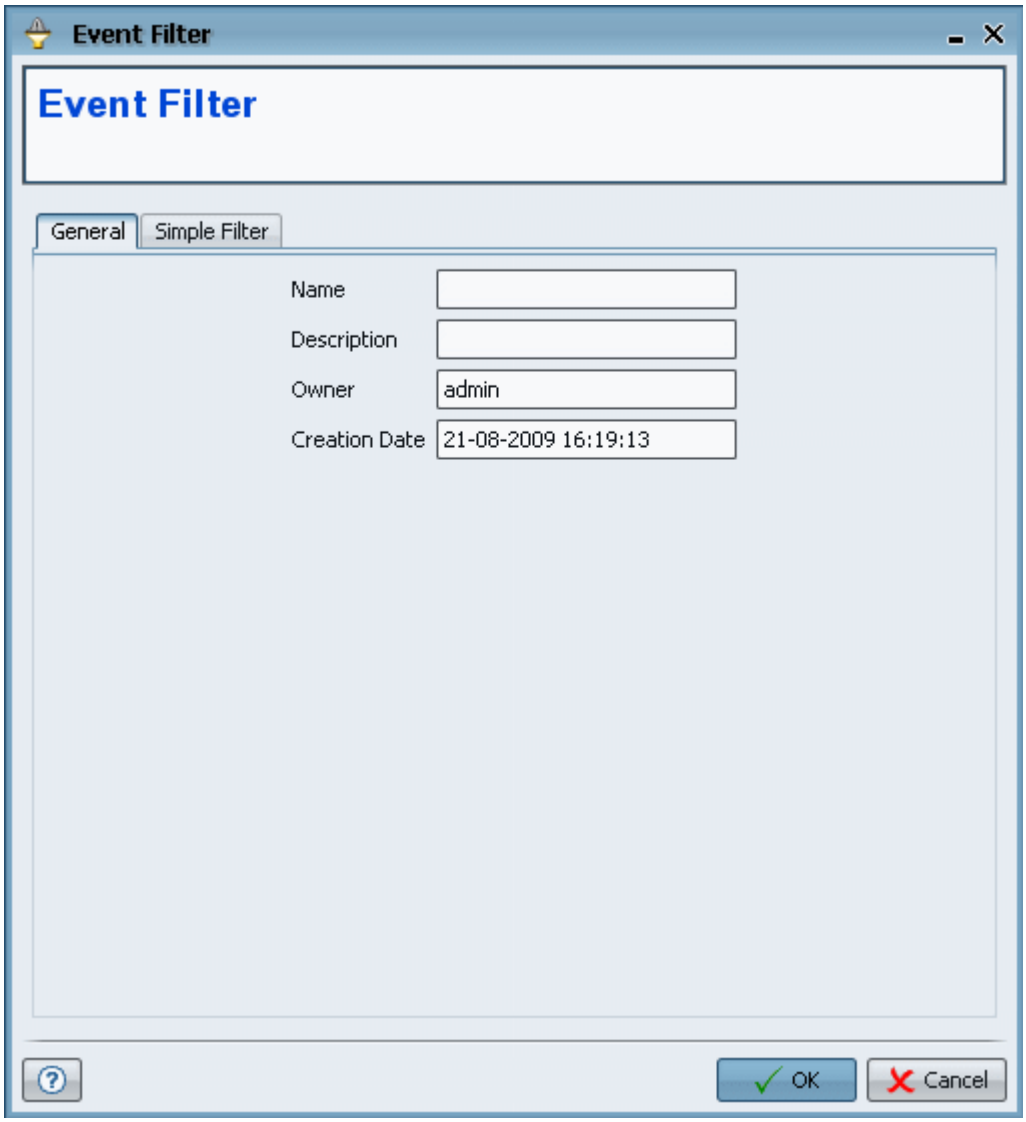

Figure 3-9: Event Filter Editor - General Page

The General Tab comprises the following fields:

Parameter	Description
General Event Template Settings	
Name	The name of the event filter.
Description	An optional description of the filter's purpose.
Owner	A read only display of the user who created the template.
Creation Date	A read only display of the creation date of the template.

3.4.1.2 Simple Filter Tab

The Simple Filter tab lets you enter custom filter criteria that are used to change the event views in Active Events and Event History windows to make the information more manageable.

To create filter criteria:

1 From the Event Filter Editor, click **Simple Filter** to define filter criteria. The Filter Page is displayed:

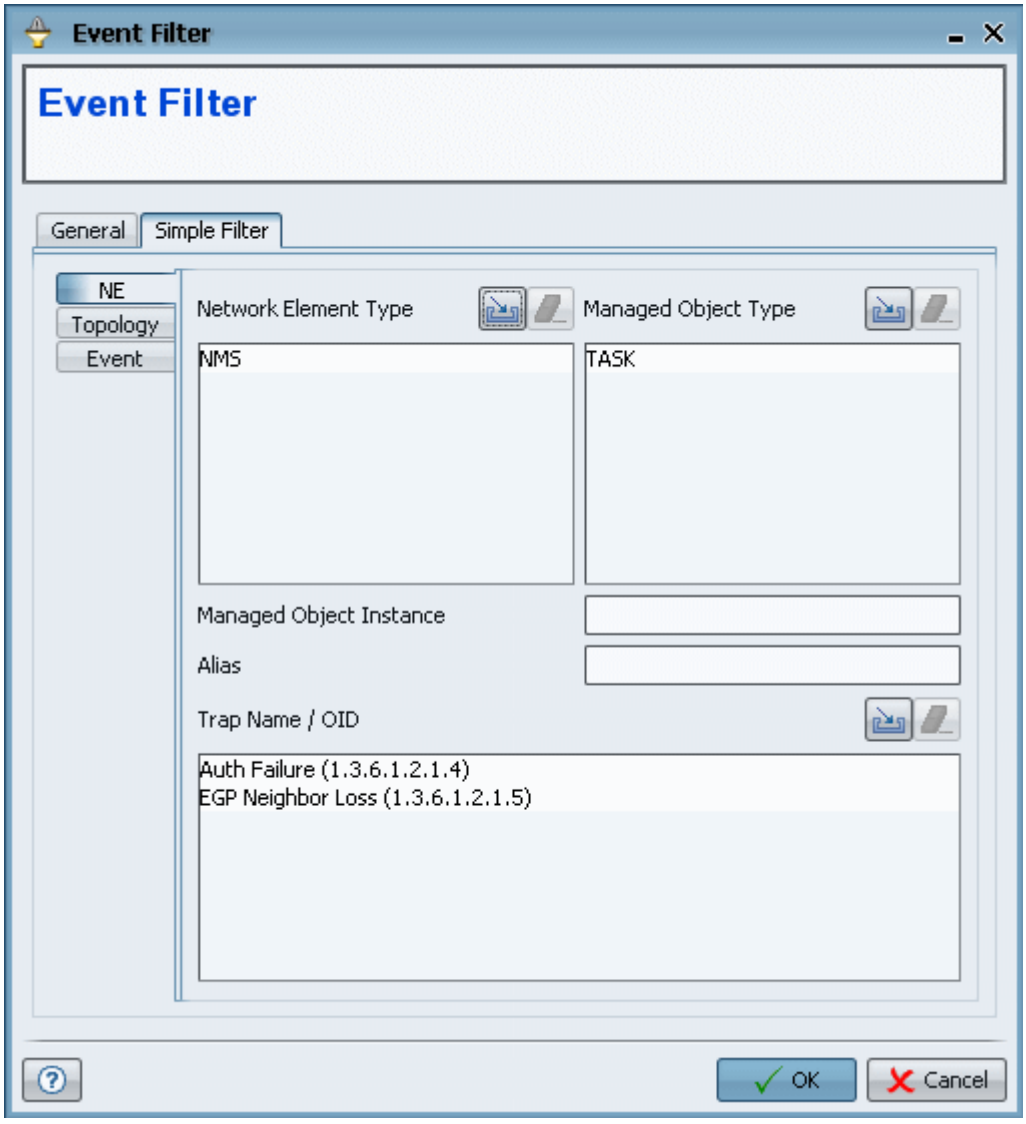

Figure 3-10: Event Filter Editor - Simple Filter Page: NE

The main Simple Filter page comprises the following pages:

- "NE Tab" on page 76
- "Topology Page" on page 76
- "Event Tab" on page 77

2 Enter the relevant information in each of the pages. When there is a select icon, click the icon to select elements from a list. Click the eraser icon to remove selected elements.

3 Click the **OK** button to confirm your choices and save them to the database

3.4.1.2.1 NE Tab

The NE page (Figure 3-10) lets you enter the following filter criteria:

Parameter	Description
Network Element Type	Select the type of the network element from which the alarm originated from.
Managed Object Type	Select the type of managed object from which the alarm originated.
Managed Object Instance	Enter a specific instance name of the object where the alarm originated.
Alias	A user defined name for the managed object.
Trap Name / OID	Select the trap name or OID Selector of the alarm. For SNMP traps, the name of the trap is OID.

3.4.1.2.2 Topology Page

The Topology Page lets you select the following filter criteria about the equipment and at a particular location:

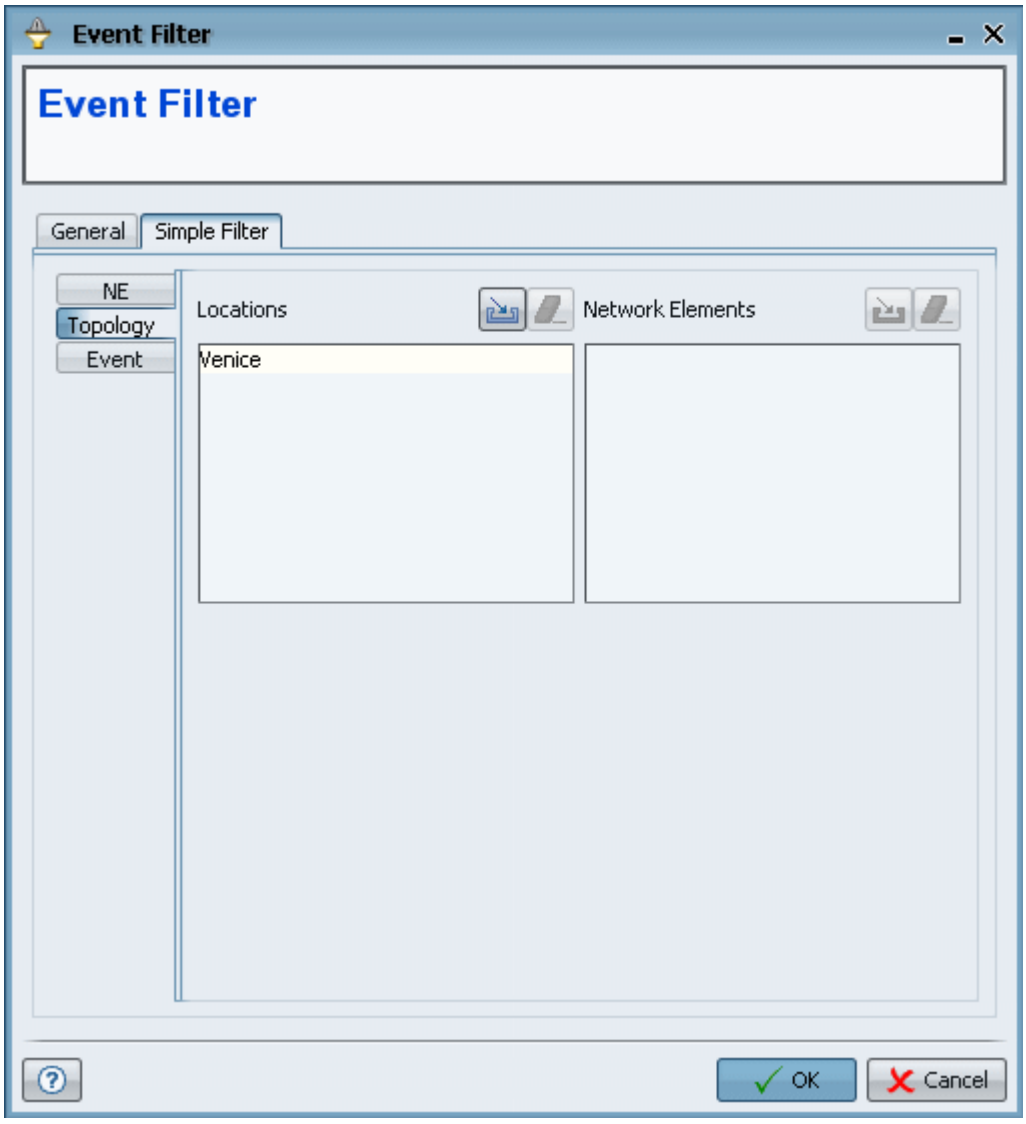

Figure 3-11: Event Filter Editor - Simple Filter Tab: Topology

Parameter	Description
Locations	Select the physical location of the equipment.
Network Elements	Select the network element from which the alarm originated. This option is available only if the user selected at least one Network Element Type which is different from "NMS" (in the NE page).

3.4.1.2.3 Event Tab

The Event page lets you select the following filter criteria:

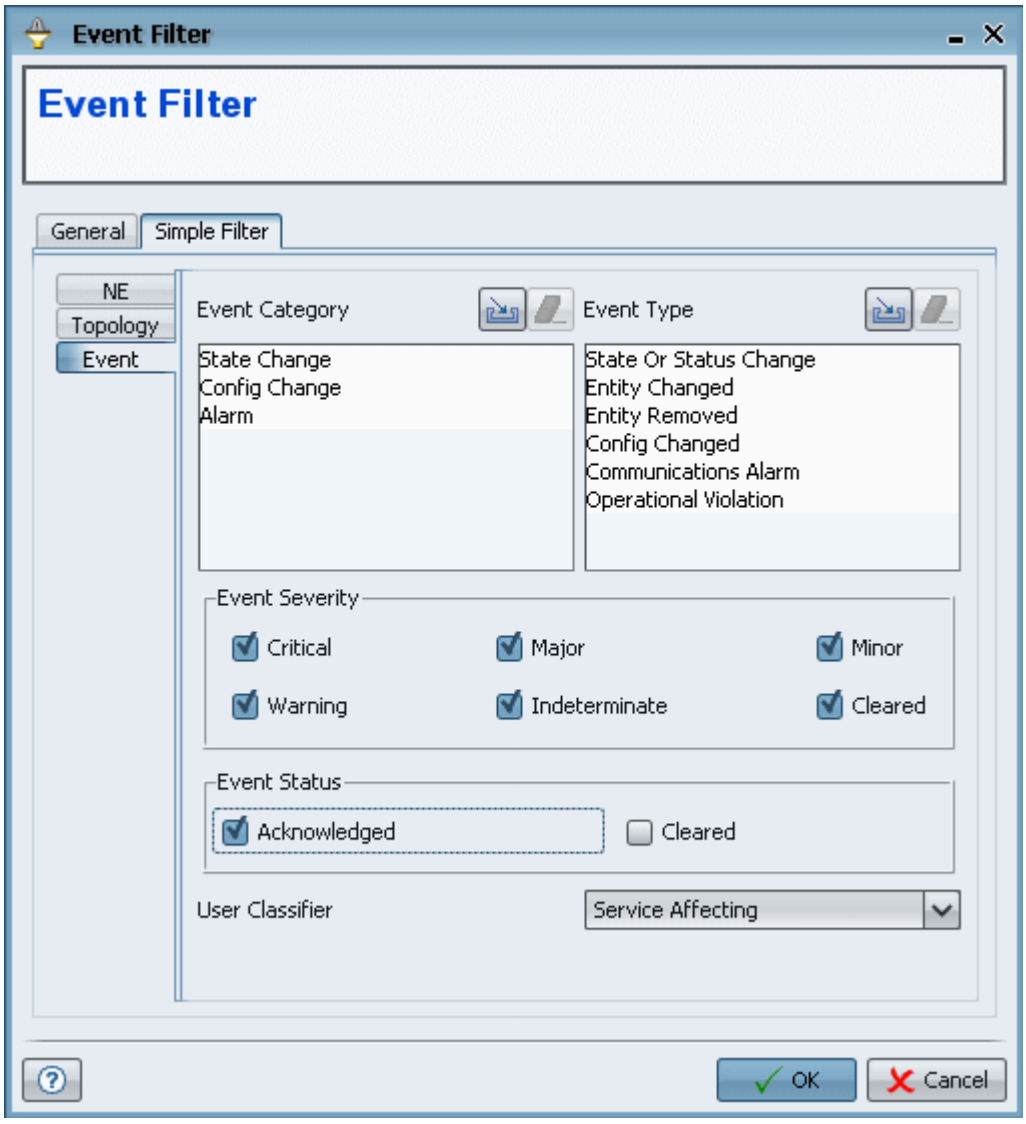

Figure 3-12: Event Filter Editor - Simple Filter Tab: Event

Parameter	Description
Event Category	Select the category classification of the event. Possible values are: All, Alarm, State Change, System Event, Config Change
Event Type	Select the classification type of the event. The possible values differ according to the event category.
Event Severity	Check the boxes for the relevant alarm severity. For more information on alarm severity see Section 3.3.1.2.
Event Status	Check *Acknowledged* to display only acknowledged alarms, *Cleared* to only display cleared alarms or both to display all alarms
User Classifier	Possible values are: None, Service Affecting

3.4.2 Editing Event Filters

To edit an existing event filter:

1 From the Event Filter Manager Window (Figure 3-8), right click an existing filter from the list and select **Edit**. The Event Filter Editor window is displayed:

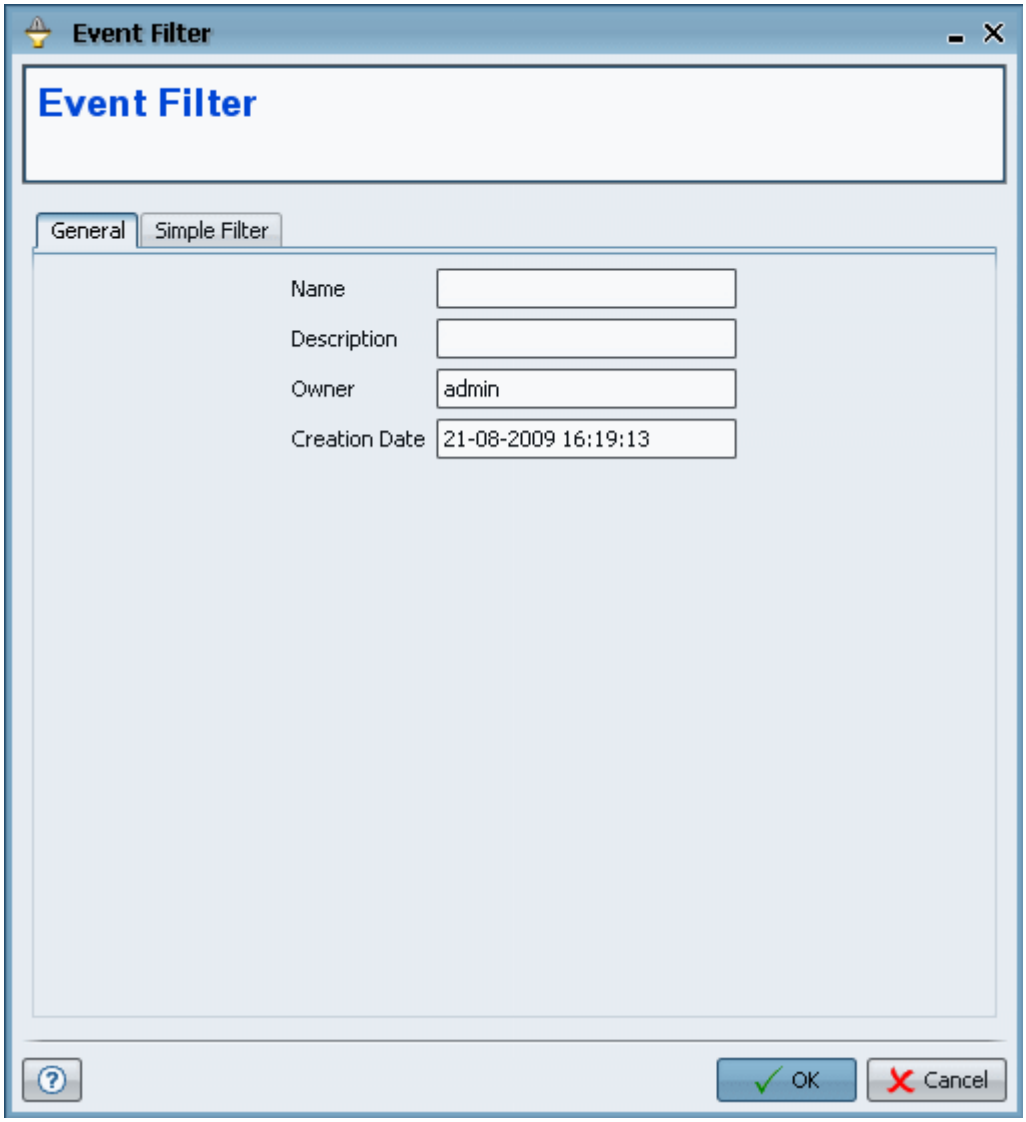

Figure 3-13: Event Filter Editor

The Editing Event Filter window comprises the following main pages:

» "General Tab" on page 73

» "Simple Filter Tab" on page 75

2 Edit the information in the fields on all the pages as required.

3 Click **OK** to confirm your choices and save them to the database.

3.4.3 Deleting Event Filters

To delete an Event Filter:

1 In the Event Filter Manager window (Figure 3-8), right click the filter to remove and select **Delete**. A confirmation message is displayed.

2 Click **Yes** to confirm the deletion.

3.4.4 Archiving Alarms

To ensure your database does not fill up with alarms, you can archive them via the Database Aging task. See Section 5.2.11 for further details.

3.5 Event Template Manager

Event Templates determine how the system processes different types of messages sent by managed network objects. These templates can even trigger external scripts (see Section 3.6). The system's messages(alarms)typically indicate a change in the operational status of the object, like a device failure or a system reset. Event templates match each incoming message with specific actions. Device drivers often install their own templates.

To open the Event Template Manager:

Select *Fault Management > Event Template Manager* from the main menu or from the Navigation Pane. The Event Template Manager window is displayed:

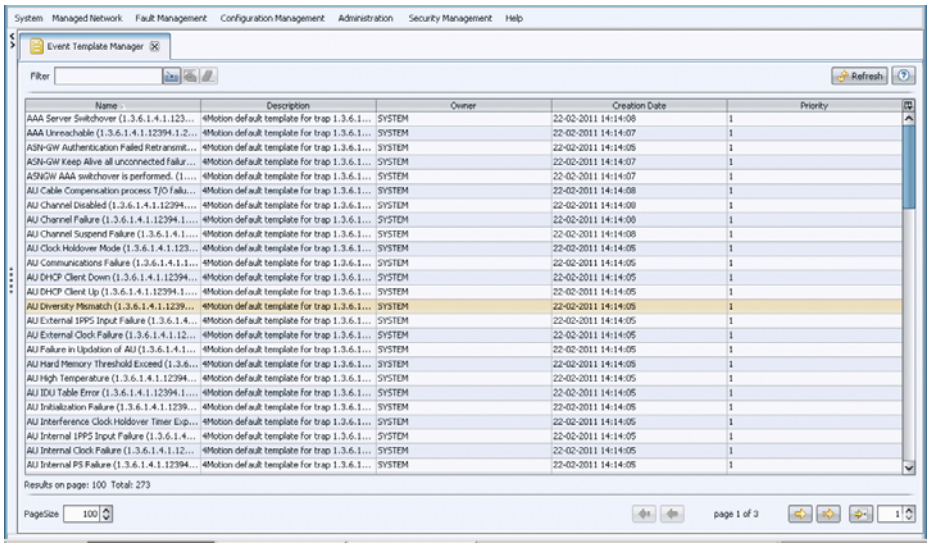

Figure 3-14: Event Template Manager

For each template, the following information is displayed:

Parameter	Description
Name	The name of the template.
Description	A description of the template.
Owner	The user who created the template.
Creation Date	The template's date of creation.
Priority	The template's priority. The range is 1~99999.

From the Event Template Manager you can:

- Create new event templates and modify existing templates - Section 3.5.1
- Delete event templates - Section 3.5.2

3.5.1 Creating or Editing Event Templates

To create or edit an event template:

1. In the Event Template Manager window (Figure 3-14), right click and select **New** to define a new event template, or select an existing template from the list and click **Edit**. The Event Template Editor window is displayed:

   The Event Template Editor window comprises the following main pages:

   - "General Tab" on page 83
   - "Filter Tab" on page 84
   - "Behavior Tab" on page 89

2. Enter the relevant information in each of the pages.
3. Click **OK** to confirm your choices and save them to the database.

3.5.1.1 General Tab

In the General tab, you can add general information on the template.

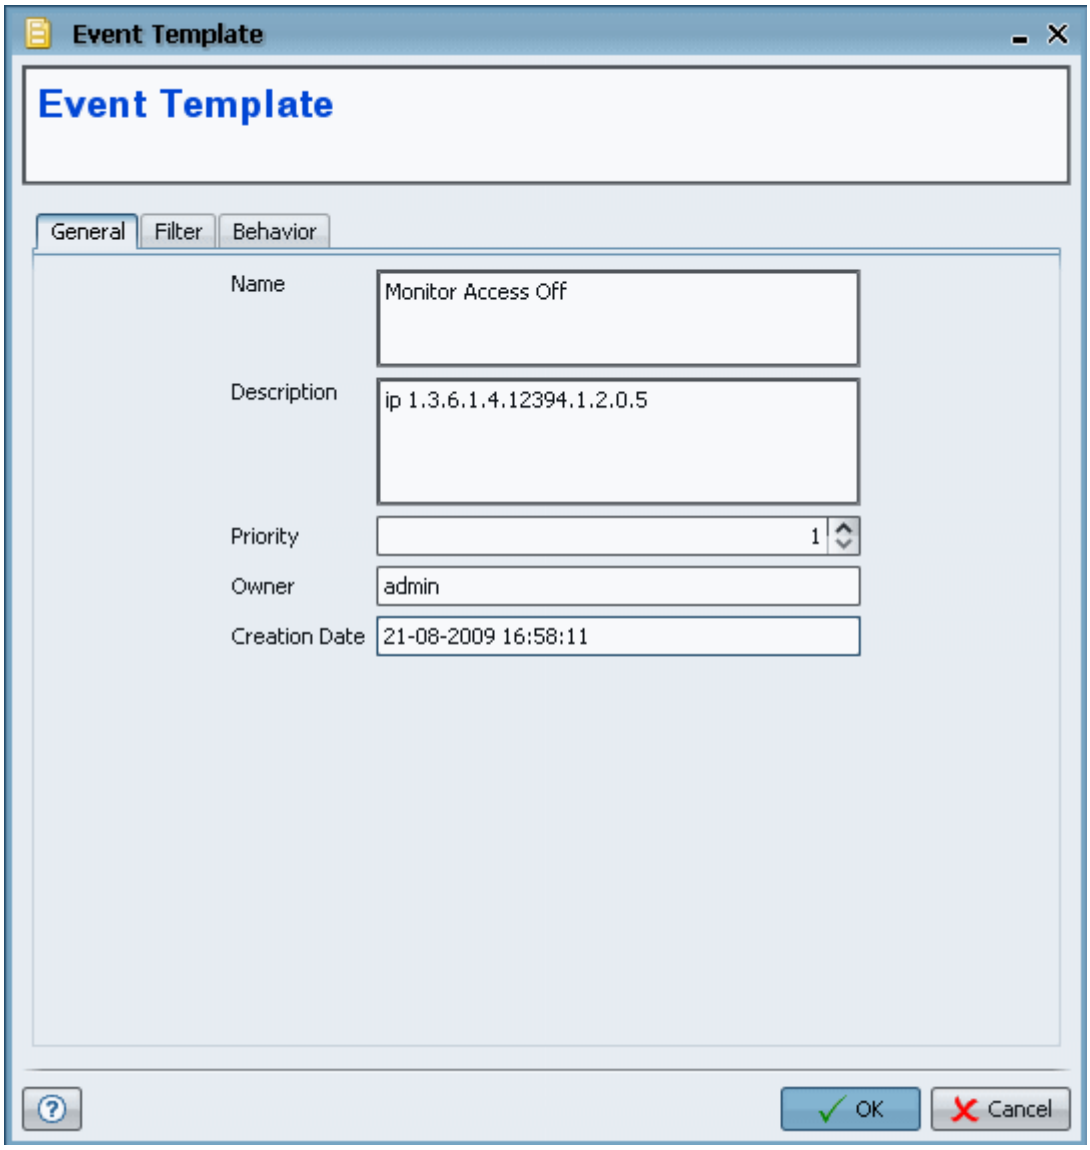

Figure 3-15: Event Template Editor - General Tab

The General tab comprises the following fields:

Parameter	Description
Name	The name of the event template.
Description	An optional description of the template's purpose.

Parameter	Description
Priority	A numerical ranking for this template. The template priority field determines which template processes an alarm if the alarm matches more than one template. The smaller the number defining a template's priority, the higher the priority the template is. The range is: 0~999999.
Owner	A read only display of the user who created the template.
Creation Date	A read only display of the creation date of the template.

3.5.1.2 Filter Tab

The Filter tab lets you edit Filter Criteria. This filter information matches, or finds, an event template for each alarm received by Fault Management. The first template that matches the received alarm controls the processing of that alarm.

Fault Management's fault processing logic uses the filtering information provided in the Event Template, along with the templates' priority, to determine which template to use for a given alarm.

INFORMATION

The smaller the number defining a template's priority, the higher the priority.

For every alarm received, Fault Management scans each template, in order of priority (high to low). Fault Management selects the first template that matches on each of the filterable fields for alarm processing.

If a template does not define a field (with either a null or empty value, or set to "All") then Fault Management does not use the field in the comparison. Empty or "All" in a filterable template field means that the field matches anything. Therefore, Fault Management uses only fields that have non-empty or non-"All" values in any comparison.

To create filter criteria:

1 From the Event Template Editor, click **Filter** to define filter criteria. The Filter tab is displayed:

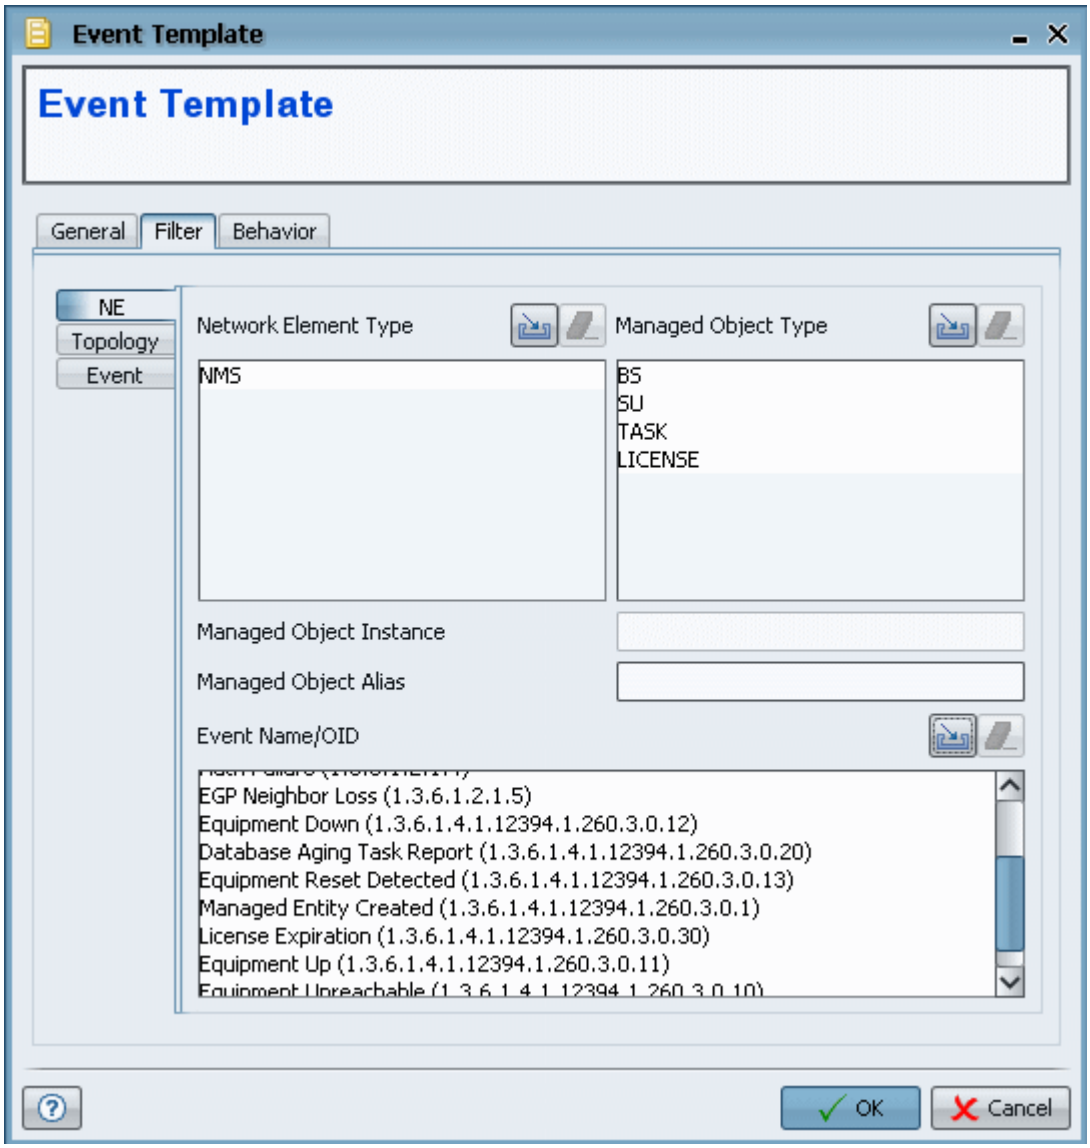

Figure 3-16: Event Template Editor - Filter Page: NE

The main Filter page comprises the following sub-tabs:

- "NE Page" on page 86
- "Topology Page" on page 86
- "Event Page" on page 87

2. Enter or edit the relevant information in each of the pages. When there is a select icon, click the icon to select elements from a list. Click the eraser icon to remove selected elements.
3. Edit the information in the fields on all the pages as required.
4. Click **OK** to confirm your choices and save them to the database.

3.5.1.2.1 NE Page

The NE page (Figure 3-16) lets you enter the following filter criteria about the network elements and managed objects from which the alarm originates:

Parameter	Description
Network Element Type	Select the type of the network element from which the alarm originates.
Managed Object Type	Select the type of managed object from which the alarm originates.
Managed Object Instance	Enter a specific instance name of the object where the alarm originated.
Managed Object Alias	A user defined name for the managed object
Event Name	Select the name of the alarm.

3.5.1.2.2 Topology Page

The Topology Page lets you select the following filter criteria about the equipment at a specific location:

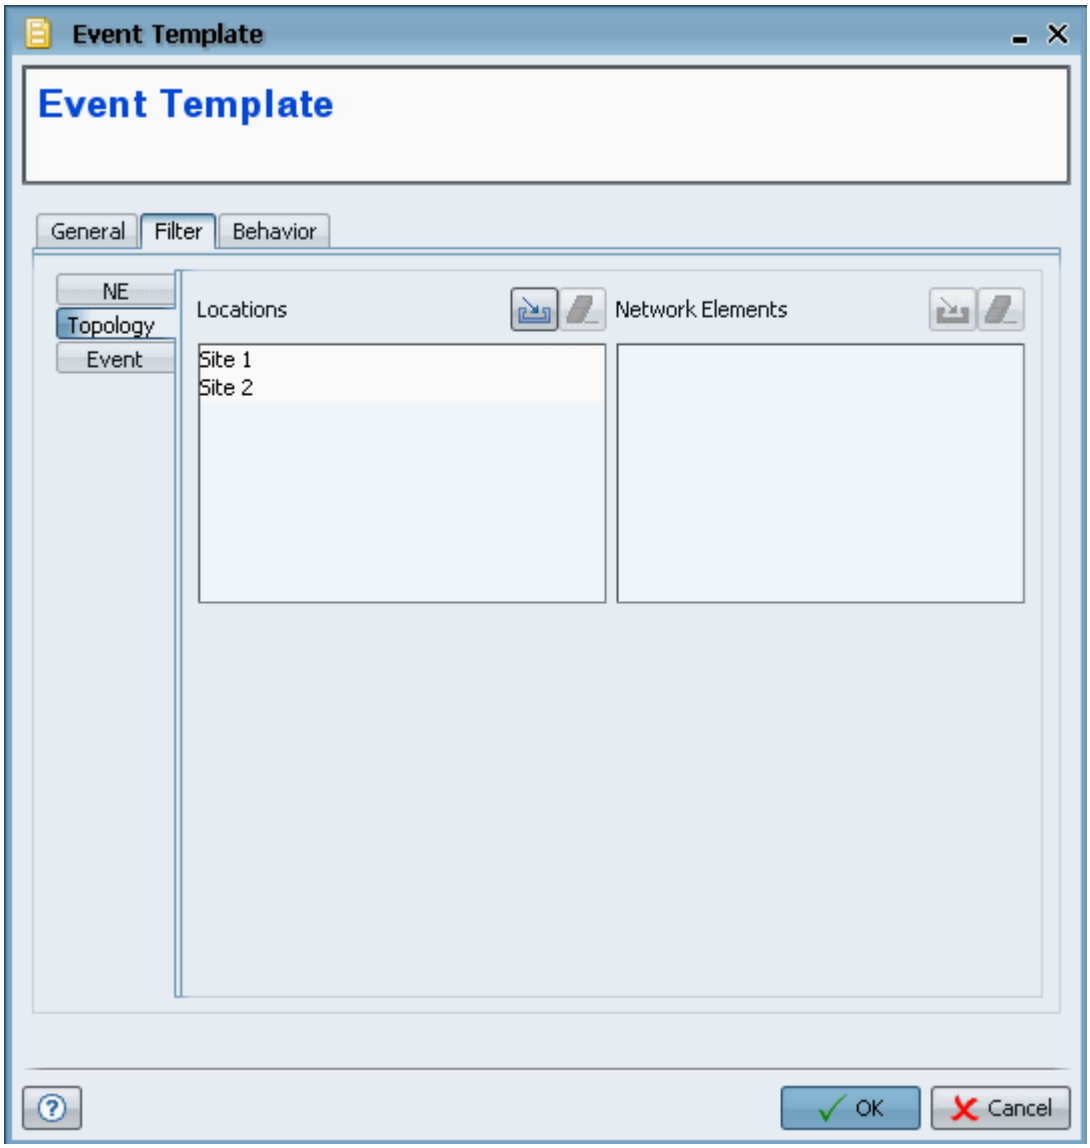

Figure 3-17: Event Template Editor - Filter Page: Topology

Parameter	Description
Locations	Select the physical location of the equipment.
Network Elements	Select the network element from which the alarm originates. This option is available only if the user selected at least one Network Element Type different from NMS (on the NE page).

3.5.1.2.3 Event Page

The Event page lets select the following filter criteria:

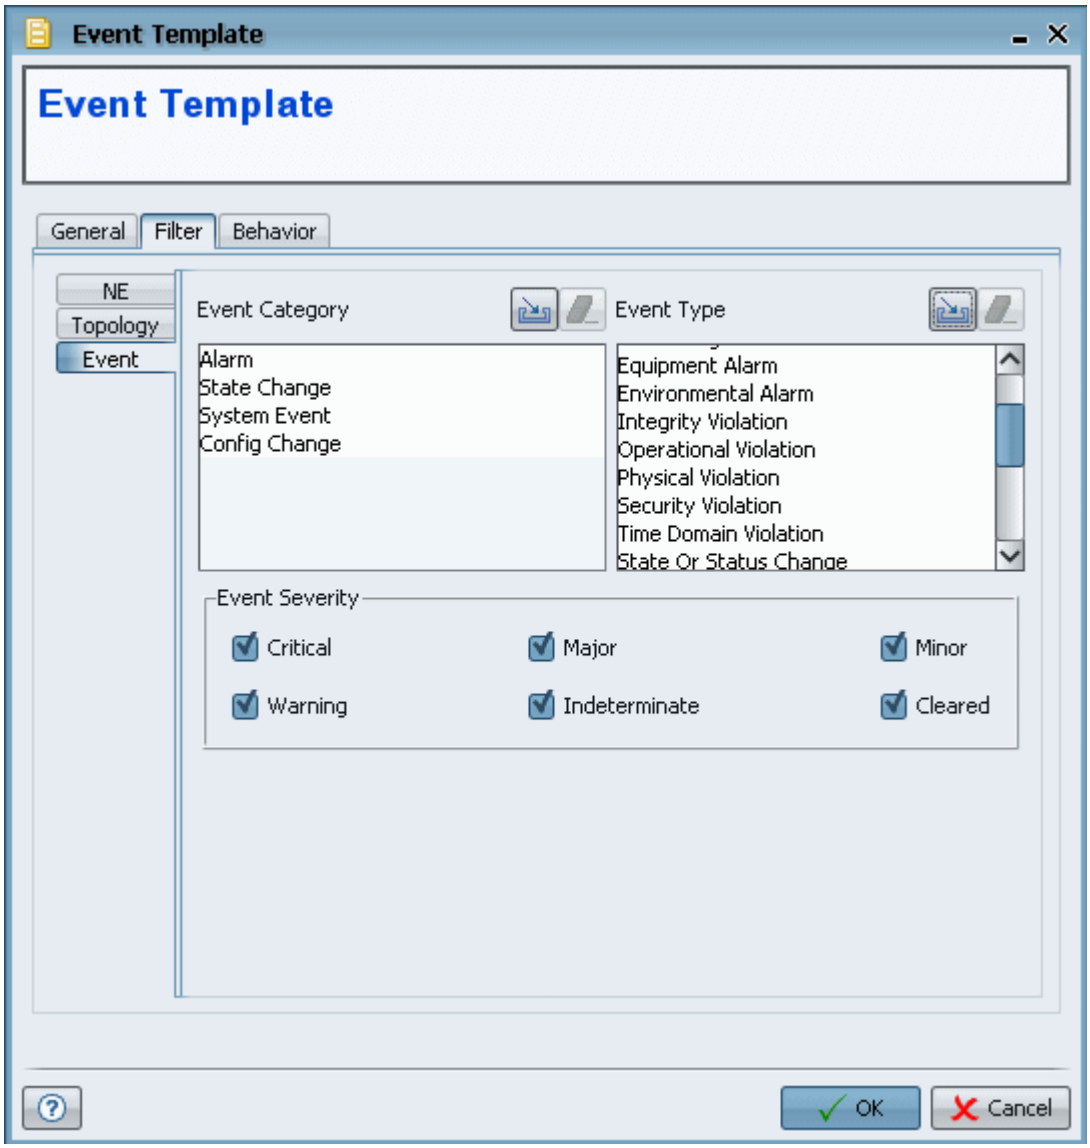

Figure 3-18: Event Template Editor - Filter Page: Event

Parameter	Description
Event Category	Select the category classification of the event. Possible values are: Alarm, State Change, System Event, Config Change
Event Type	Select the classification type of the event. The possible values differ according to the event category.
Event Severity	Check the boxes for the relevant alarm severity. For more information on alarm severity see Section 3.3.1.2.

3.5.1.3 Behavior Tab

The Behavior tab provides parameters that determine how Fault Management processes matching alarms.

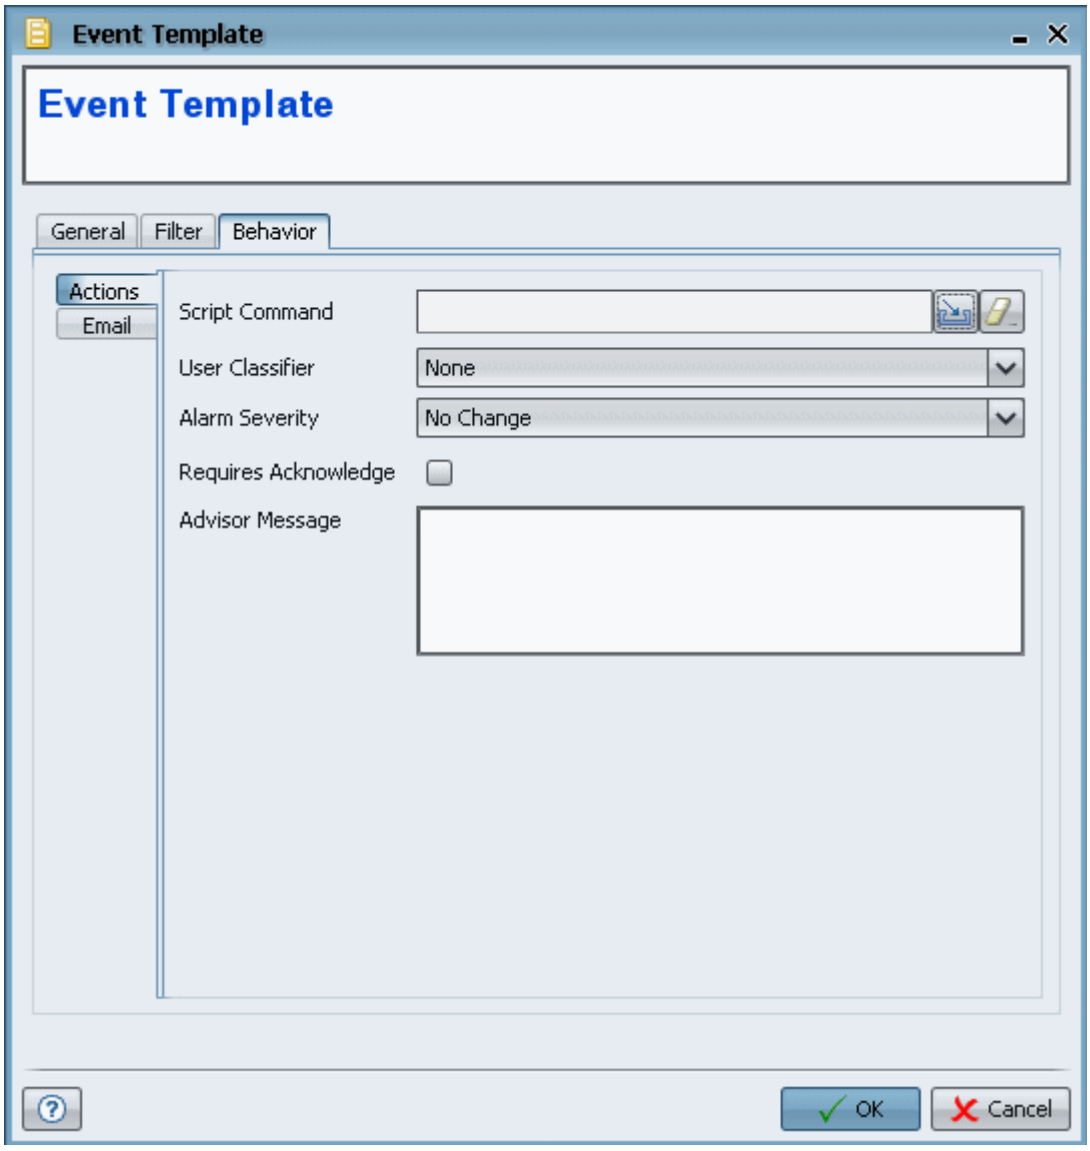

Figure 3-19: Event Template Editor - Behavior Tab

The main Behavior page comprises the following sub-tabs:

- "Actions Page" on page 89
- "Email Page" on page 90- not applicable to the Local CRAFT Utility

3.5.1.3.1 Actions Page

The Actions page contains the following parameters:

Parameter	Description
Script Command	Initiates an external script. Browse for the script command name by clicking the command (...) button. When you click this button, the Command Selector is displayed. See Section 3.6 for information about how to add commands to this selector. Click the eraser icon to remove selected scripts from this field.
User Classifier	Select the User Classifier. Possible values: None, Service Affecting
Alarm Severity	Select the severity level of the alarm. Once Fault Management selects the template, before actually processing the alarm, this field overrides the severity of the alarm as it was received from mediation. Possible values are: No Change, Cleared, Indeterminate, Warning, Minor, Major, Critical
Requires Acknowledge	Check to require that the associated event is acknowledged
Advisor Message	Enter a text description of the event.

3.5.1.3.2 Email Page

Craft The Email page is not applicable to the Local CRAFT Utility.

Use the Email page to enter a message that appears in emails when the template acts and define a list of recipients to be notified. This presupposes email functions within the environment where your host is installed.

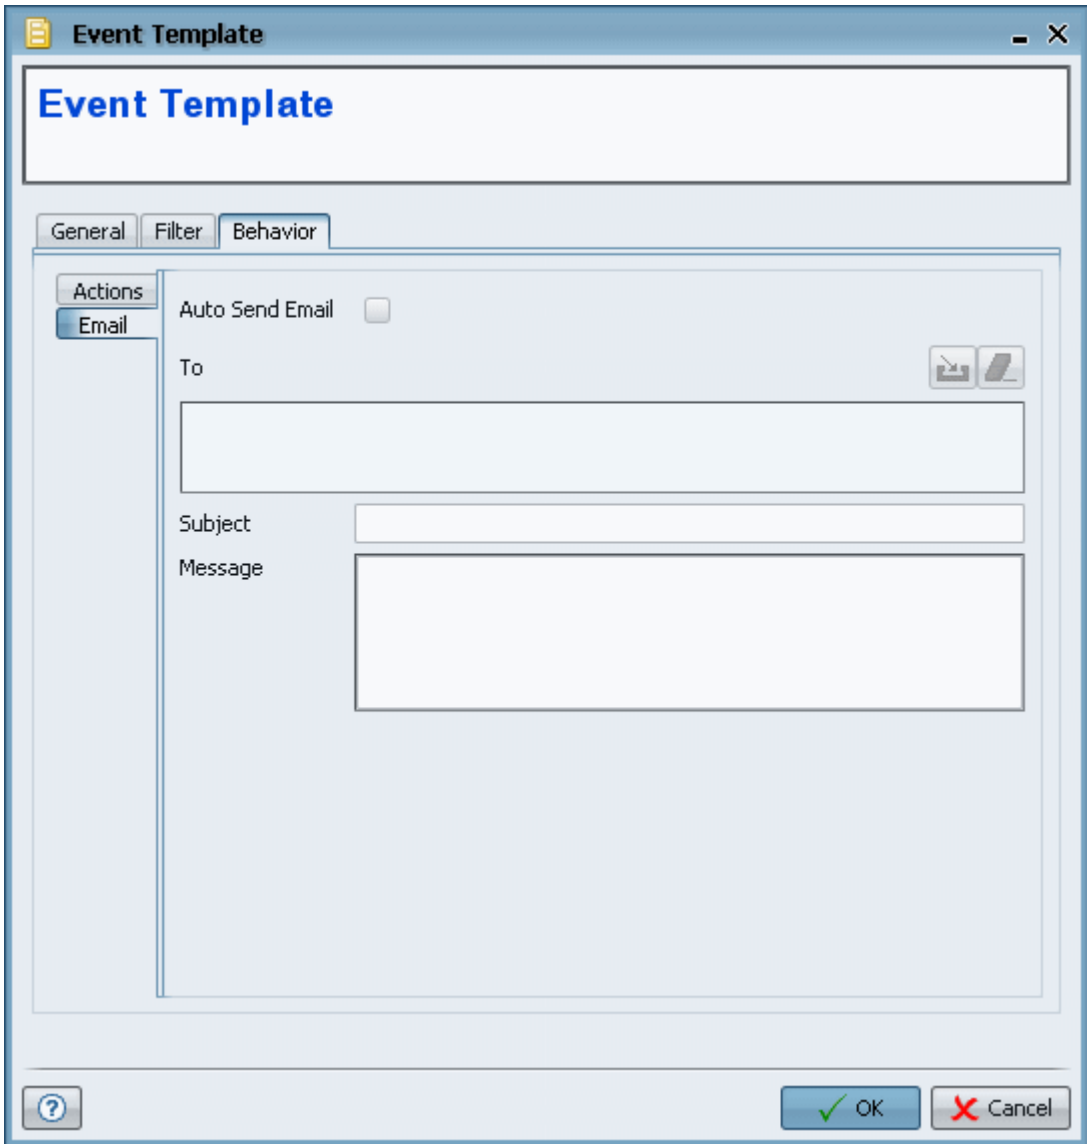

Figure 3-20: Event Template Editor - Email

The Email page contains the following parameters:

Parameter	Description
Auto Send Email	Check to automatically send a defined email message to the specified recipient(s) whenever the associated event occurs.
To	Select the recipient for this email message from the list.
Subject	Enter the subject line of the email message.
Message	Enter an email message.

3.5.2 Deleting Event Templates

To delete an Event Template:

1. In the Event Template Manager window (Figure 3-14), right click the template to remove and select **Delete**. A confirmation message is displayed.
2. Click **Yes** to confirm the deletion.

3.6 Script Command Manager

Template-matched alarms can trigger external scripts. These script commands can even have parameters that come from values in the *EventInfo* alarm's attributes, or other assigned constants. The Script Command Manager lists available script commands. You can create, edit and delete script commands.

To open the Script Command Manager:

Select *Fault Management* > *Script Command Manager* from the main menu or from the Navigation Pane. The Script Command Manager window is displayed:

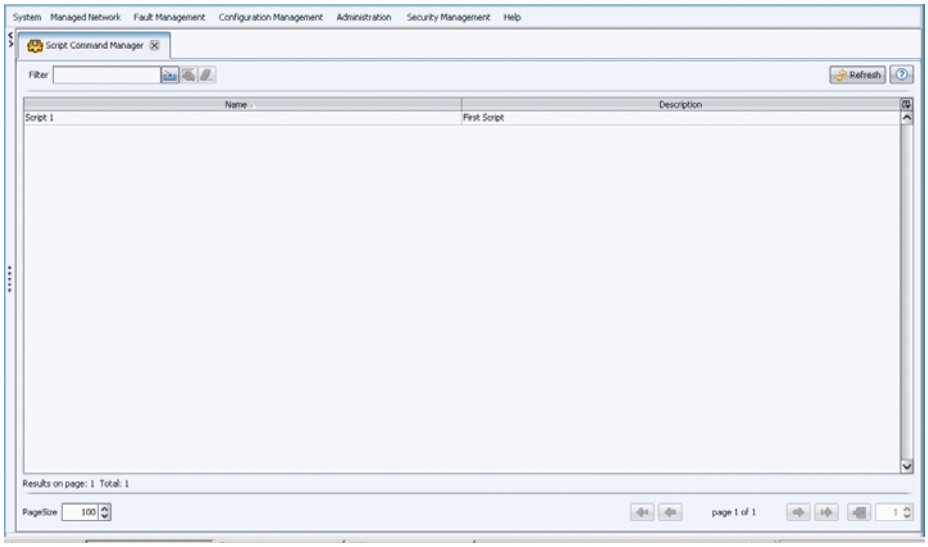

Figure 3-21: Script Command Manager

From the Script Command Manager, you can:

- Create new commands and modify existing commands - Section 3.6.1
- Delete commands - Section 3.6.2

3.6.1 Creating or Editing Commands

To create or edit a command:

1 In the Script Command Manager, right click and select **New** to define a new command. The Command Editor window is displayed:

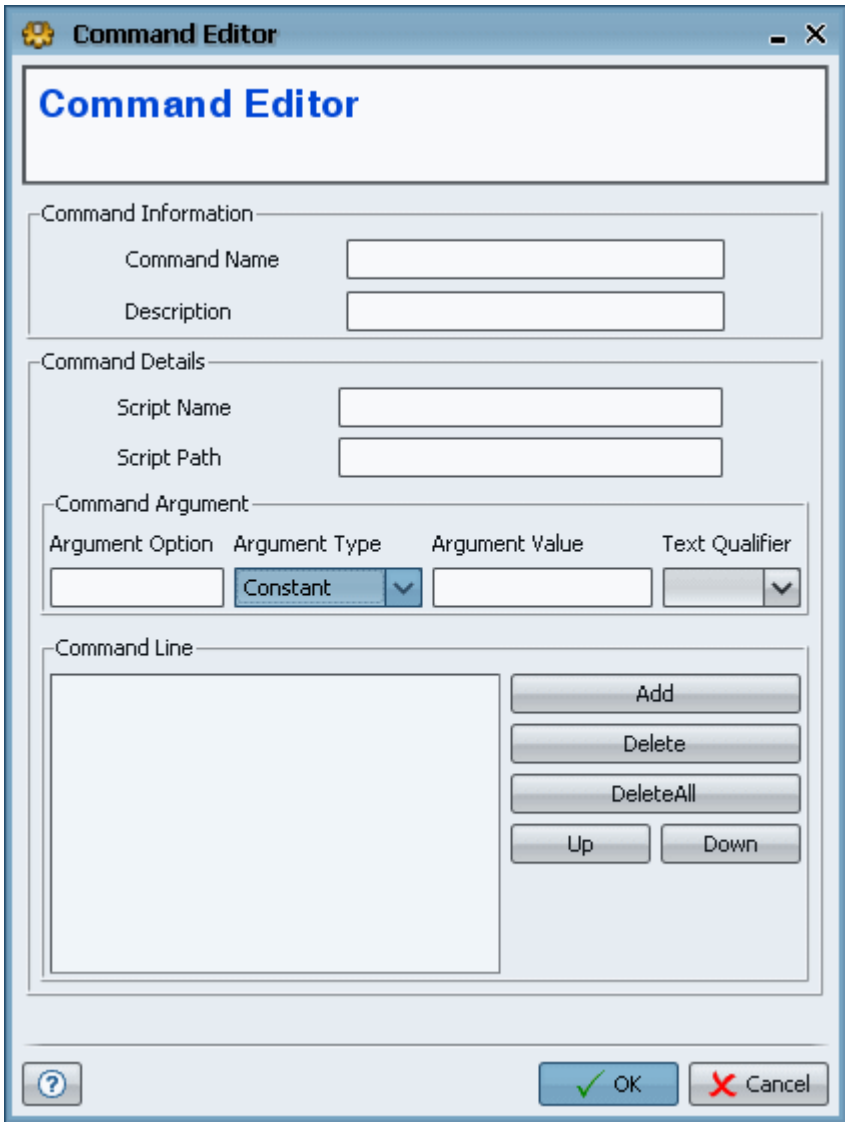

Figure 3-22: Command Editor

2 Configure your script with the following fields:

Parameter	Description
Command Information	
Command Name	A unique text identifier.
Description	A text description
Command Details	
Script Name	The name of the script to run
Script Path	The location of the script. Describe either a Windows or UNIX path.

Parameter	Description
Command Argument	
Argument Option	Enter a text value
Argument Type	Possible values are: Constant, Event Property
Argument Value	If Argument Type = Constant, this is a text field If Argument Type = Event Property then select from a list of possible attributes
Text Qualifier	Select whether this parameter needs double, single quotes, or no qualifier. When you select quotes, the parameter looks like this: -a “surrounded by quotes”.
Command Line	This section of the screen displays the script command as you assemble it. Click the **Add** button on the right to assemble the complete script command. Added parameters always appear last on the list in this area, but you can use the arrow keys to re-arrange their order, and the **Delete** button to remove parameters (but not the script). **Delete All** removes everything.

3 Click **Add** to assemble the complete script command. Added parameters always appear last on the list, but you can use the arrow keys to re-arrange their order, or use the **Delete** button to remove parameters (not the script). **Delete All** removes everything.

4 Click the **Up** or **Down** buttons to arrange the order of parameters.

5 Click **OK** to add your command script to the list of available scripts.

3.6.2 Deleting Commands

To delete a command:

1 In the Script Command Manager window (Figure 3-21), right click the command to remove and, from the context menu click **Delete**. A confirmation message is displayed.

2 Click **Yes** to confirm the deletion.

3.7 Event Forwarding NBI Manager

Craft The Event Forwarding NBI Manager is not applicable to the Local CRAFT Utility.

The Event Forwarding NBI (North Bound Interface) Manager provides an interface where you can connect to other management systems, and effectively forward traps. Fault Management uses these definitions to enable it to forward notifications to those systems.

Event Forwarding NBI systems include any EMS system (a system receiving information from Fault Management), for example: Billing Management Systems, Support Management Systems, Network Management Systems, and Customer Service Systems.

To open the Event Forwarding NBI Manager:

Select *Fault Management* > Event Forwarding NBI *Manager* from the main menu or from the Navigation Pane.

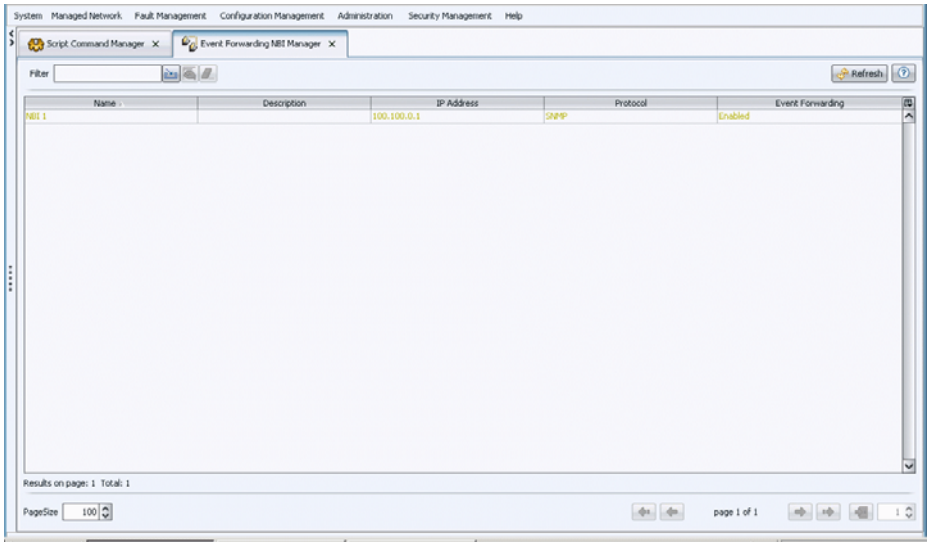

Figure 3-23: Event Forwarding NBI Manager

For each filter, the following information is displayed:

Parameter	Description
Name	The name of the filter.

Parameter	Description
Description	A description of the filter.
IP Address	The IP address of the higher manager
Protocol	The protocol governing the network management.
Event Forwarding	The event forwarding status.

From the Event Forwarding NBI Manager you can:

- Create or modify Event Forwarding NBI interfaces - Section 3.7.1
- Delete Event Forwarding NBI interfaces - Section 3.7.2
- Create and modify Event Forwarding NBI interface policies - Section 3.7.3
- Set up status notifications sent by the NMS Server for synchronisation - Section 3.7.4

INFORMATION

It is mandatory to define at least one policy for a Event Forwarding NBI interface in order to activate trap forwarding. Provided that the Event Forwarding NBI is enabled in the NBI Editor, if no policy has been defined, or if the policy is not enabled, the Event Forwarding NBI interface appears gray in the display, indicating that an action must be taken.

3.7.1 Creating or Editing Event Forwarding NBI Interfaces

To create a new Event Forwarding NBI interface:

1 Right click inside the Event Forwarding NBI Manager window (Figure 3-23) and select **New** to define a new Event Forwarding NBI interface, or right click an entry from the list and select **Edit**. The NBI Editor window is displayed:

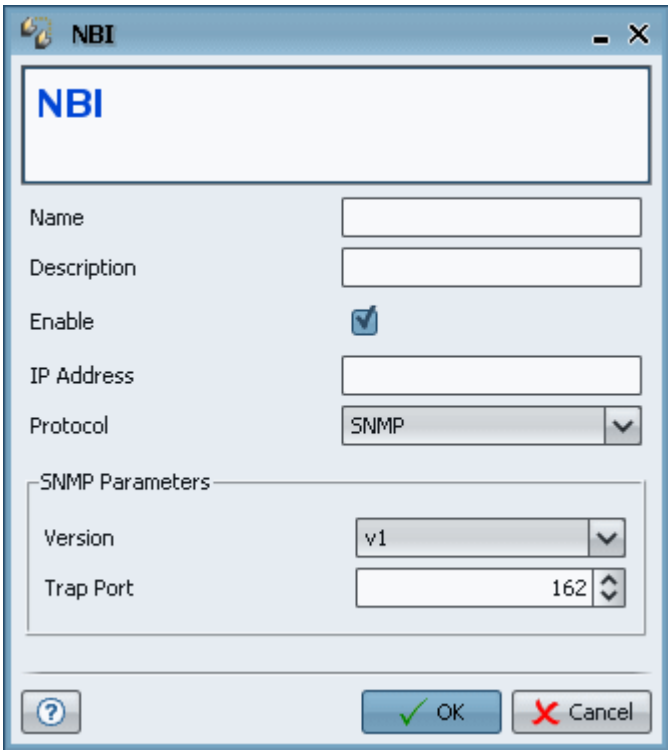

Figure 3-24: NBI Editor

2 Edit the information in the fields on all the pages as required.

Parameter	Description
Name	The name for the northbound interface.
Description	An optional description of the Event Forwarding NBI interface.
Enable	Check to enable trap forwarding
IP Address	The IP address of the remote host to which the traps will be forwarded.
Protocol	SNMP
SNMP Parameters	
Version	The SNMP version. Possible values are: v1, v2c or v3. For a complete list of all compatible SNMP versions for each device see Appendix E.
Trap Port	The port number to use to communicate with the system.

INFORMATION

The port configured in the NBI editor must match the port your system uses to communicate. Typically, SNMP devices use port 161 to receive set/get requests and port 162 to receive traps. So, typically you must configure Fault Management to forward traps to an OSS/SNMP client with a destination port of 162

3 Click **OK** to confirm your choices and save them to the database.

3.7.2 Deleting Event Forwarding NBI Interfaces

To delete an NBI:

1 In the Event Forwarding NBI Manager window (Figure 3-23), right click the filter to remove and select **Delete**. A confirmation message is displayed.

2 Click **Yes** to confirm the deletion.

3.7.3 Creating Event Forwarding NBI Interface Policies

Once you have defined the IP address to which to forward traps, the policy determines which traps to forward and when. At least one policy must be defined for a specific Event Forwarding NBI interface in order to activate trap forwarding. The policy manager displays the current policies defined for the specific interface

To open the NBI Policy List:

From the Event Forwarding NBI Manager window (Figure 3-23), right click an existing NBI from the list and select **Policy**. The NBI Policy List is displayed:

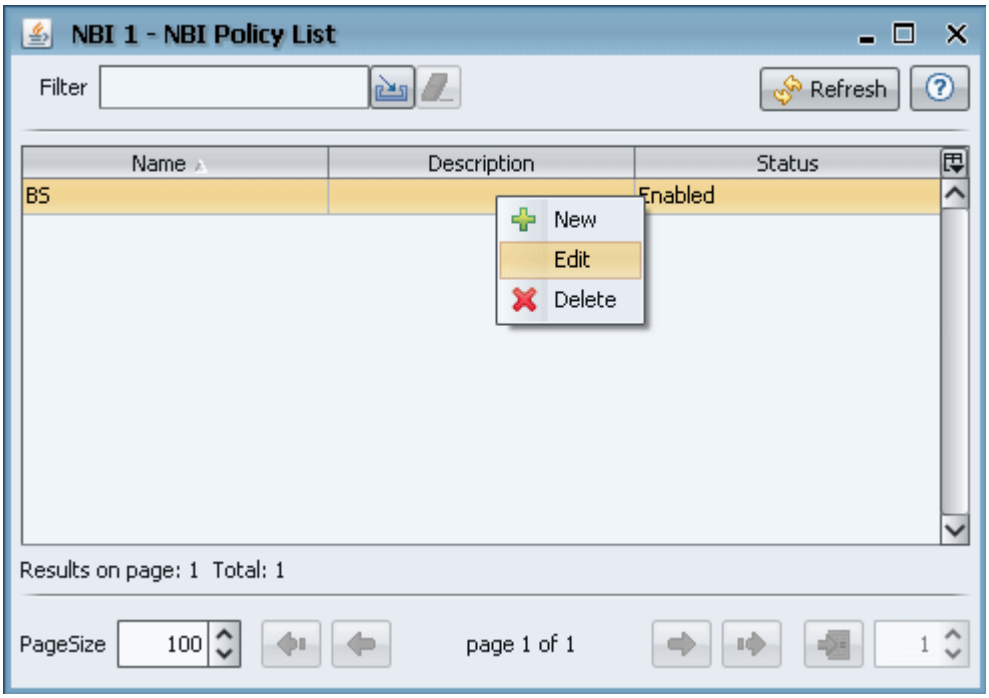

Figure 3-25: NBI Policy List

For each NBI Policy, the following information is displayed:

Parameter	Description
Name	The name of the policy.
Description	A description of the policy.
Status	The policy status

From the NBI Policy list you can:

- Create or modify NBI policies - Section 3.7.3.1
- Delete NBI policies - Section 3.7.3.2

3.7.3.1 Creating or Modifying NBI Policies

To create or modify an NBI policy:

1. Right click inside the NBI Policy window (Figure 3-25), and select **New** to define a new NBI policy, or right click an entry from the list and click **Edit**. The NBI Policy Editor window is displayed (Figure 3-26).

   The NBI Policy Editor window comprises the following main pages:

   - "General Page" on page 101
   - "Filter Tab" on page 102

2. Enter the relevant information in each of the pages.
3. Click **OK** to confirm your choices and save them to the database.

3.7.3.1.1 General Page

In the General page, you can add general information on the policy.

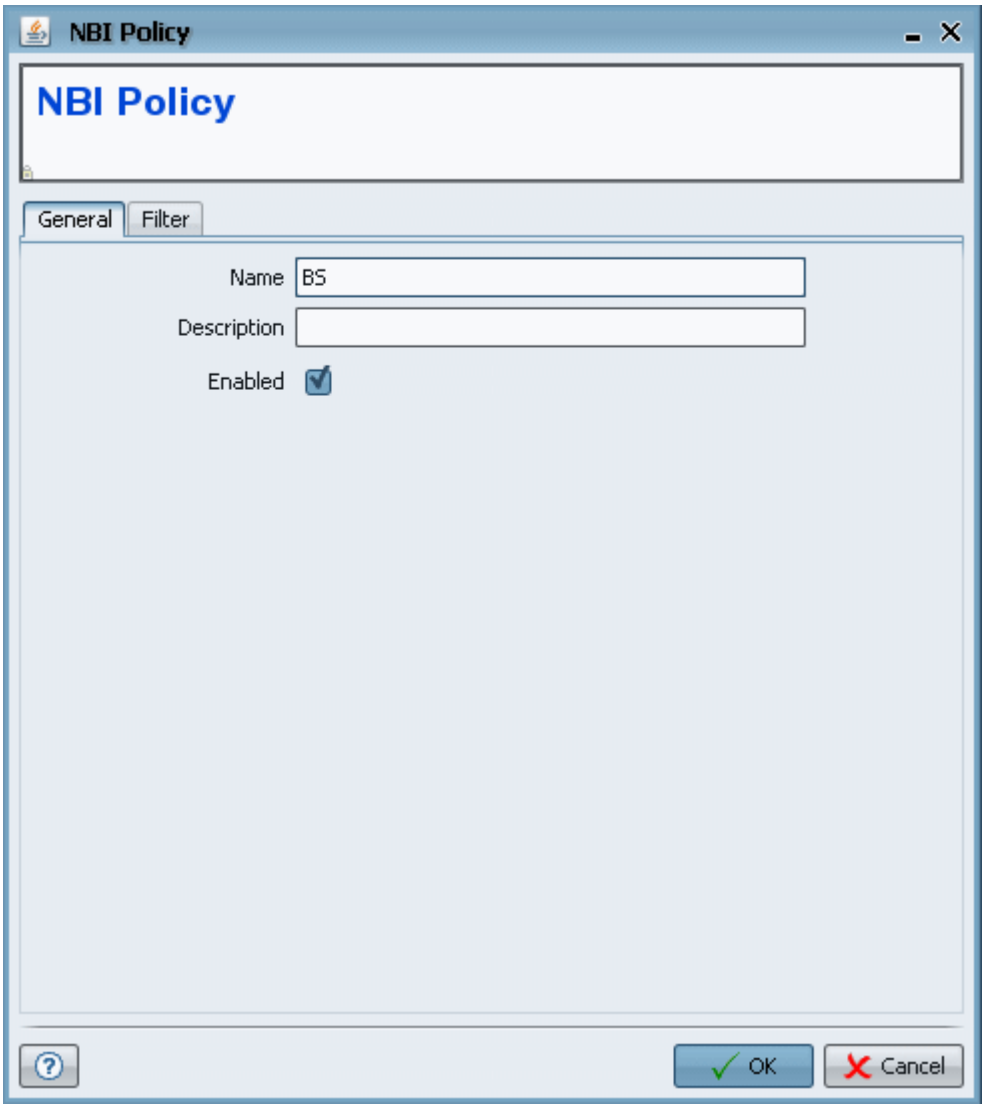

Figure 3-26: NBI Policy Editor - General Page

The General page comprises the following fields:

Parameter	Description
Name	The name of the NBI policy.
Description	An optional description of the policy.
Enabled	Check to enable the policy.

3.7.3.1.2 Filter Tab

The Filter tab lets you associate a filter with the NBI policy.

To create filter criteria:

1 From the NBI Policy Editor, click **Filter** to define filter criteria. The Filter Page is displayed:

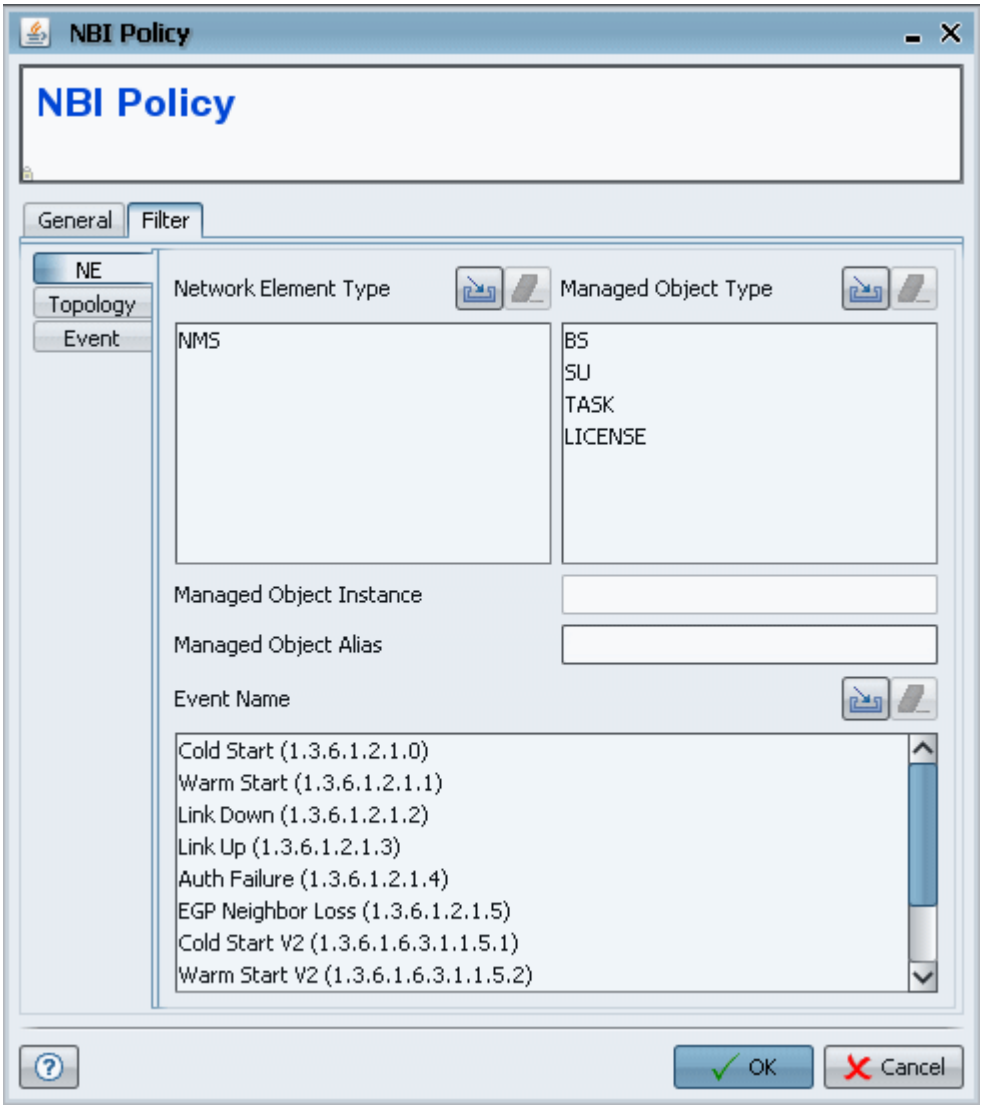

Figure 3-27: NBI Policy Editor - Filter Page: NE

The main Filter page comprises the following sub-tabs:

- "NE Page" on page 104
- "Topology Page" on page 104
- "Event Page" on page 105

2 Enter the relevant information in each of the pages. When there is a select icon, click the icon to select elements from a list. Click the eraser icon to remove selected elements.

3 Click the **OK** button to confirm your choices and save them to the database

3.7.3.1.2.1 NE Page

The NE page (Figure 3-27) lets you enter the following filter criteria:

Parameter	Description
Network Element Type	Select the type of the network element from which the alarm originated from.
Managed Object Type	Select the type of managed object from which the alarm originated.
Managed Object Instance	Enter a specific instance name of the object where the alarm originated.
Managed Object Alias	A user defined name for the managed object.
Event Name	Select the name of the alarm.

3.7.3.1.2.2 Topology Page

The Topology Page lets you select the following filter criteria:

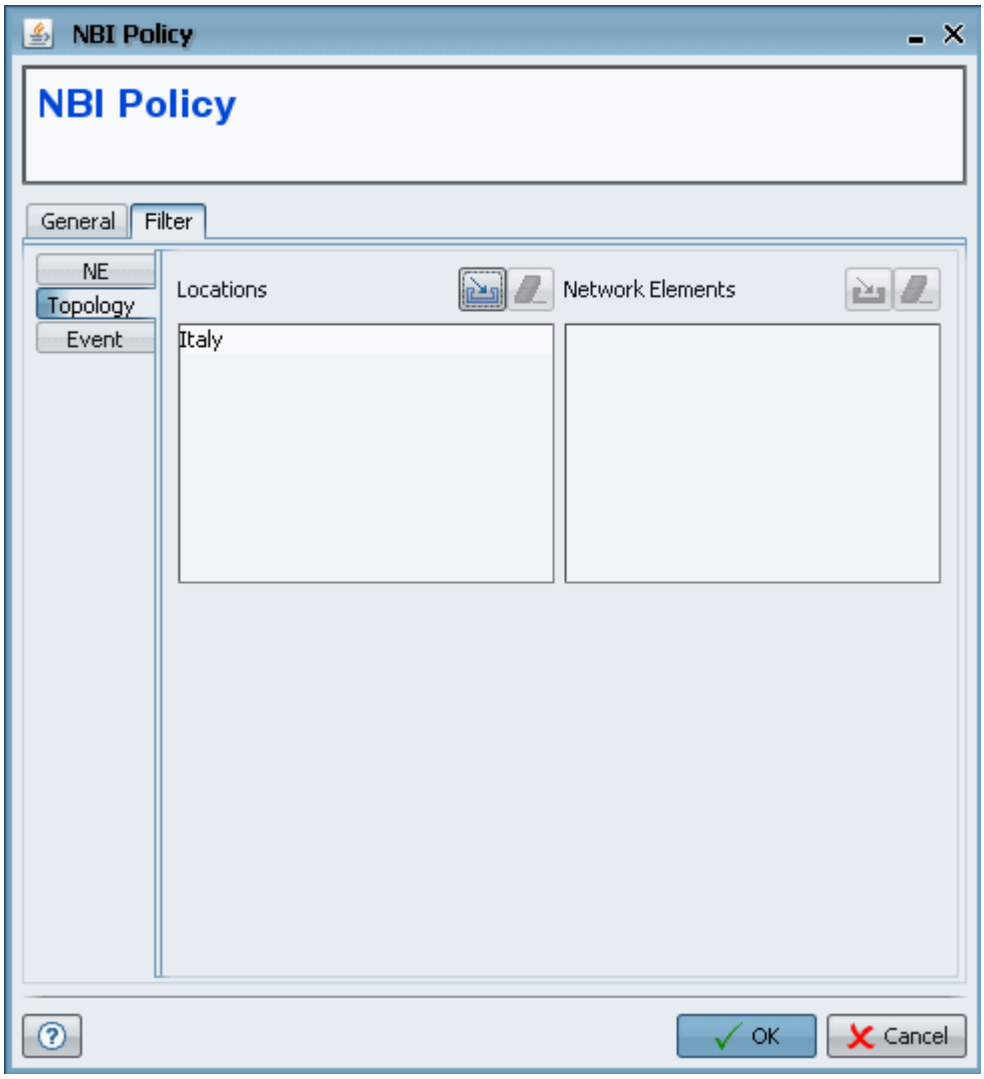

Figure 3-28: NBI Policy Editor - Filter Page: Topology

Parameter	Description
Locations	Select the physical location of the equipment.
Network Elements	Select the network element from which the alarm originated. This option is available only if the user selected at least one Network Element Type which is different from "NMS" (in the NE page).

3.7.3.1.2.3 Event Page

The Event page lets you select the following filter criteria:

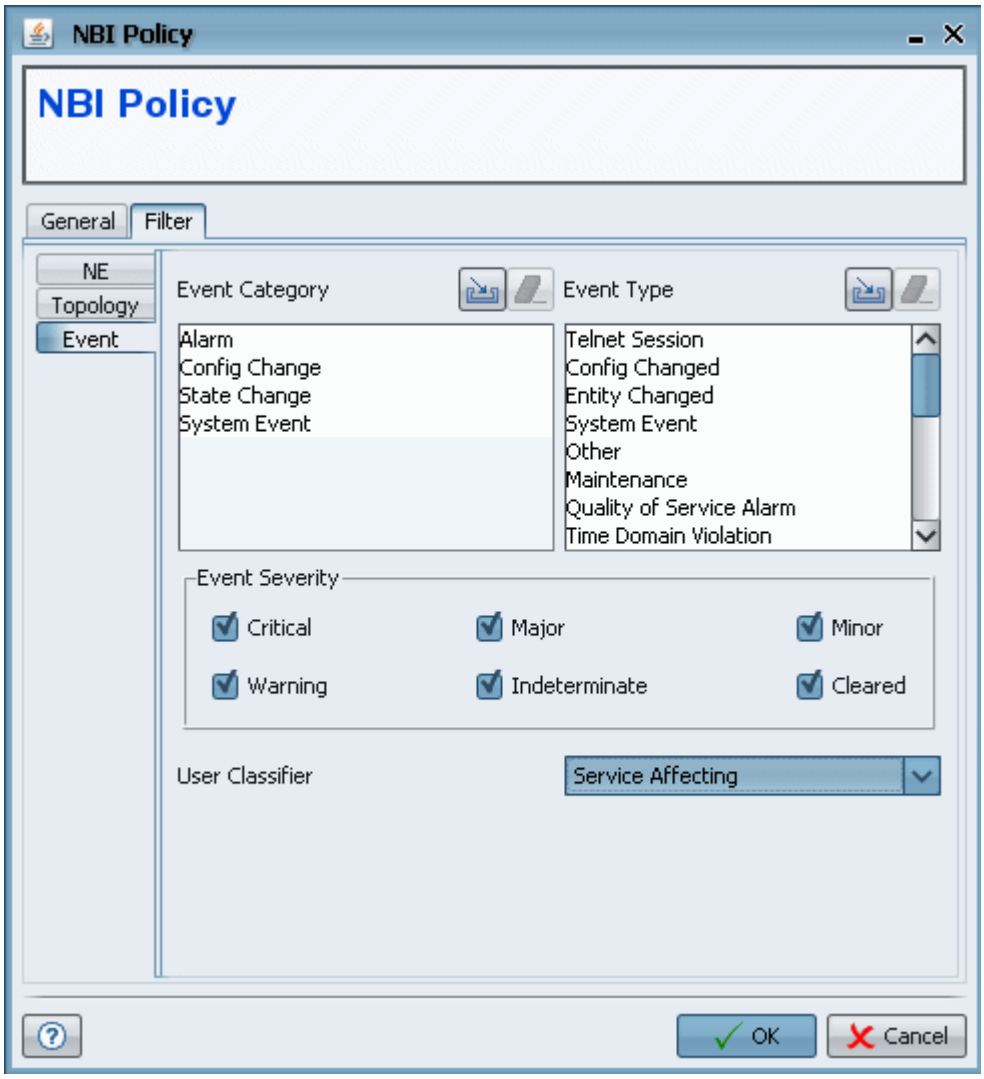

Figure 3-29: NBI Policy Editor - Filter Page: Event

Parameter	Description
Event Category	Select the category classification of the event. Possible values are: Alarm, State Change, System Event, Config Change
Event Type	Select the classification type of the event. The possible values differ according to the event category.
Severity	Check the boxes for the relevant alarm severity. For more information on alarm severity see Section 3.3.1.2.
User Classifier	Select the User Classifier. Possible values: None, Service Affecting

3.7.3.2 Deleting NBI Policies

To delete an NBI policy:

1. In the Event Forwarding NBI Manager window (Figure 3-23), right click the policy to remove and select **Delete**. A confirmation message is displayed.
2. Click **Yes** to confirm the deletion.

3.7.4 NBI Notifications Global Settings

The NBI Notifications Global Settings configures the synchronization notifications sent by the NMS to the OSS.

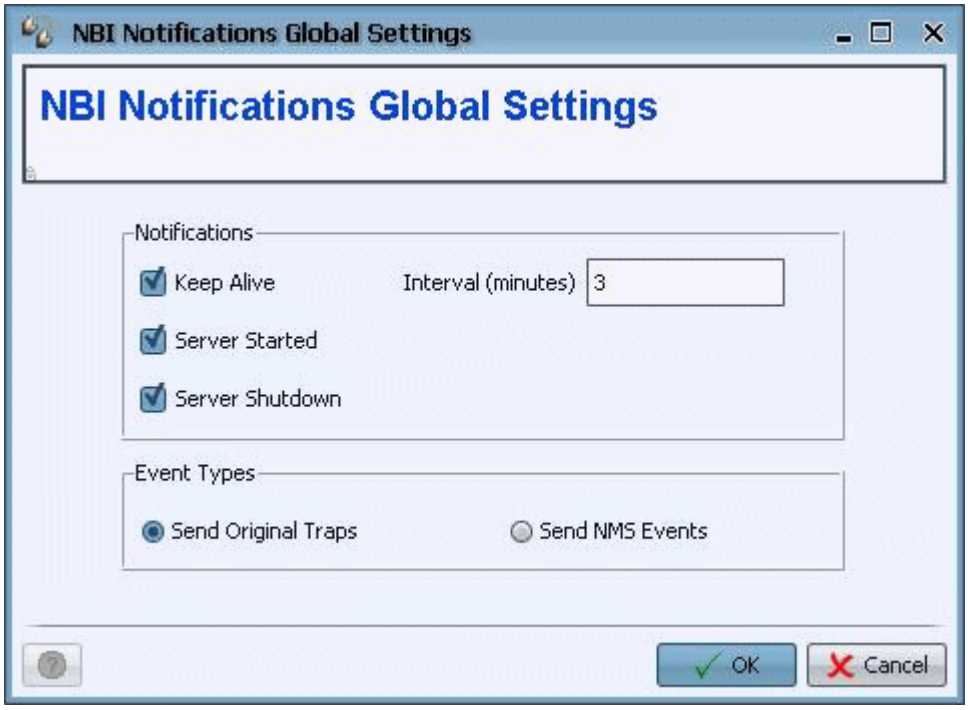

Figure 3-30: NBI Notifications Global Settings

The following settings are available:

Parameter	Description
Notifications	
Keep Alive	Sends keep alive notifications at predefined time intervals as long as the NMS server is active. Check to enable, uncheck to disable.

Parameter	Description
Interval (minutes)	Defines the time interval (in minutes) between successive keep alive notifications. Use the text box to enter the desired value.
Server Started	Sends a notification message when the server has started up. Check to enable, uncheck to disable.
Server Shutdown	Sends a notification message when the server is shutting down. Check to enable, uncheck to disable.
Event Types	
Send Original Traps	Select this option to forward traps in their original format, just as they are received from the device.
Send NMS Events	Select this option if you want the sent traps to include all the relevant information stored in the fault management database.

INFORMATION

In order to enable synchronization with the NMS, the following RW parameters must be configured on the OSS/SNMP client:

Parameter	Description
sendOperationalAlarms	Enables/Disables alarm synchronization. The following values apply: ■ 0 - Synchronization disabled ■ 1 - Synchronization enabled ■ 2 - Synchronization based on a custom time interval ■ 3 - Synchronization based on a custom SeqNo interval
opAlarmsCustomIntervalStart	Interval start for custom time/SeqNo interval based synchronization
opAlarmsCustomIntervalEnd	Interval end for custom time/SeqNo interval based synchronization

INFORMATION

The OSS/SNMP client uses the 16162 port to send synchronization request to the NMS.

Chapter 4 - Configuration Management

In This Chapter:

In the current release Configuration Management includes the Template Manager and is applicable only if Templates Based Multiple Configuration is supported for for devices managed by one or more of the installed device drivers.

4.1 Template Manager

INFORMATION

The Template Manager is available only if the installed Device Drivers include one or more Device Driver(s) for device families that support this feature.

The Template Manager enables managing equipment configuration templates that can be used for modifying configuration of selected devices using the template-based Multiple Configuration task (see "Multiple Configuration (Template Based) Task" on page 142).

This section includes:

- "The Template Manager Window" on page 110
- "The Template Editor" on page 113

For details on specific templates refer to the Templates section in the relevant Device Driver Manual.

4.1.1 The Template Manager Window

To open the Template Manager

Select Configuration Management > Template Manager from the Navigation Pane or menu bar. The Template Manager window opens.

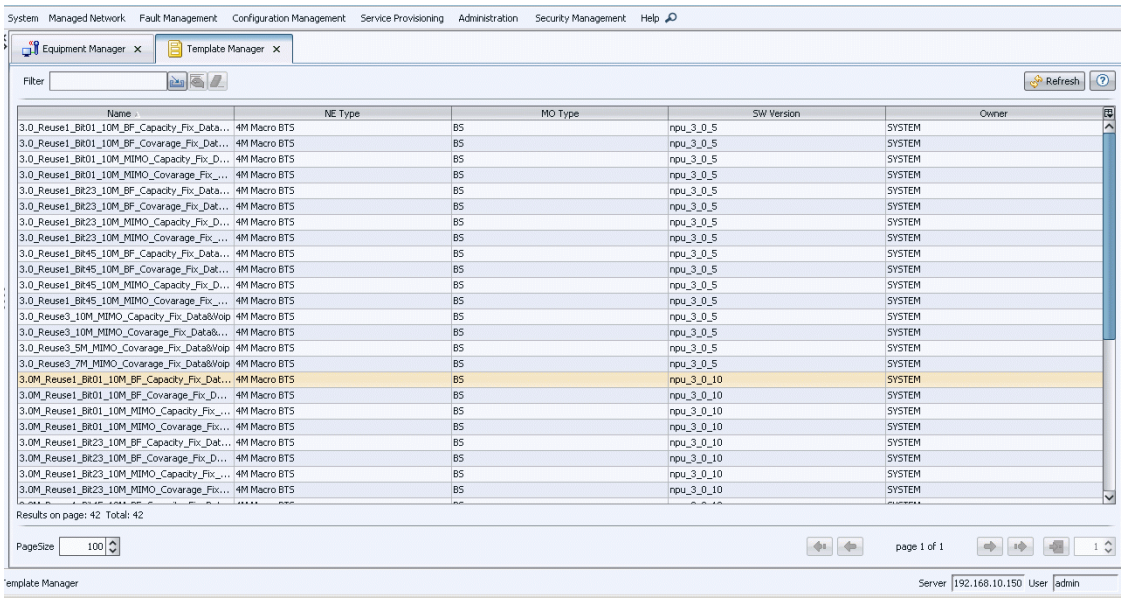

Figure 4-1: The Template Manager

You can use the Filter Criteria Manager for viewing only templates that meet one or several selection criteria.

The read-only details of displayed template are:

Parameter	Description
Name	The name of the template
NE Type	The type of Network Element for which the template is prepared.
MO Type	The type of Managed Object for which the template is applicable.
SW Version	The SW Version used for preparing the template.
Owner	The user that created the template.

The system is supplied with several default templates for some typical deployment scenarios of the relevant equipment. The template's name provide the main properties of the relevant deployment scenario such as reuse type, diversity mode, selected map major groups, bandwidth, coverage/capacity optimization, fix/mobile deployment and service types. Default templates cannot be edited or deleted. To create a different template based on an existing default template, select the required source template and use the Copy option.

Select one or several entries and right-click to view the following management options:

Button	Description
New	Adds a new template object to the database. Click to open the Template Editor opens, allowing to enter general information on the template to be added. For more details, see "The Template Editor" on page 113. NOTE: The New option is available when right-clicking anywhere in the work area, without the need to select any existing entry.
Edit	Not available if two or more templates are selected. Opens the Template Editor for the selected template, allowing to edit the Name and Description of the template. All other general details of an existing template cannot be modified. For more details, see "The Template Editor" on page 113.
Copy	Not available if two or more templates are selected. Opens the Template Editor for a new template, that is identical to the selected "source" template, with the default name of "Copy of <source template name>. You can edit only the Name and Description of the new template. All other general details of the new template cannot be modified. For more details, see "The Template Editor" on page 113.

Button	Description
Configure	Not available if two or more templates are selected. Opens the Template Editor (Configure Template) for the selected template. For more details refer to "The Template Editor" on page 113. NOTE: You can also open the Template Editor by double-clicking on the selected template entry.
Apply	Not available if two or more templates are selected. Opens the Multiple Configuration Task editor, allowing to initiate a Multiple Configuration task using the selected template. For more details refer to "Multiple Configuration (Template Based) Task" on page 142.
Delete	Not available for default templates. Deletes the selected template(s) from the database. The application prompts you for confirmation.
Import	Imports a template XML file from the client file-system. Click to open the **Import** window, browse to the location on the client file-system where the file is stored, select the file and click **Import**. The Template Editor will open, allowing you to modify the Name and Description of the imported file. NOTE: The Import option is available when right-clicking anywhere in the work area, without the need to select any existing entry.
Export	Not available if two or more templates are selected. Exports the selected template XML file to the client file-system. Click to open the **Export** window, browse to the desired location on the client file-system, if necessary change the name to be assigned to the template file in the client file-system, and click **Export** to export the template.

4.1.2 The Template Editor

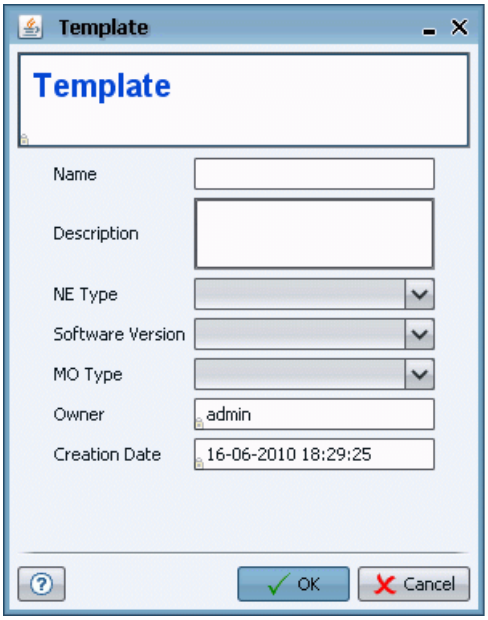

Figure 4-2: The Template Editor

The Template Editor comprises the following fields:

Parameter	Description
Name	The name of the template. A string of 1 to 128 characters.
Description	An optional free text field providing a general description of the task. A string of 0 to 250 characters.
NE Type	The type of Network Element for which the template is prepared. Can be configured only for a new template.
MO Type	The type of Managed Object for which the template is applicable. Can be configured only for a new template.
Software Version	The SW Version used for preparing the template. Can be configured only for a new template.
Owner	Read-only. The user that created the template.
Creation Date	Read-only. The date and time of template's creation.

Chapter 5 - Administration

In This Chapter:

- "Introduction" on page 115
- "Task Manager" on page 116
- "File Manager" on page 145
- "Contact Manager" on page 146
- "License Manager" on page 149 - not applicable to the Local CRAFT Utility
- "Report Manager" on page 153
- "Map Refresh Rate" on page 154
- "Export Site Coordinates" on page 155
- "Import Site Coordinates" on page 156

5.1 Introduction

The Administration node in the Navigation Pane comprises the following system-wide utilities:

- Task Manager - enables to manage system-wide tasks, such as SW upgrade, Network Discovery (not applicable to the Local CRAFT Utility), PM collection, etc. See Section 5.2.
- File Manager - enables to manage files that are stored in the database. These files and functionality of the manager are product line dependent. For details refer to the relevant *Device Driver Manual*. Refer to Section 5.3.
- Contact Manager - enables to organize and manage your contacts. Refer to Section 5.4
- License Manager (not applicable to the Local CRAFT Utility) - enables to view information about valid licenses. See Section 5.5.

5.2 Task Manager

This section includes:

- "The Task Manager Window" on page 116
- "The Task Wizard" on page 119
- "The Task Editor" on page 121
- "The Selector Window" on page 123
- "The Task Scheduler" on page 124
- "The Runtime Results Window" on page 126
- "The Task Report Window" on page 127
- "The Task Results Window" on page 128
- "Task Rerun" on page 130
- "Network Discovery Task" on page 130 - not applicable to the Local CRAFT Utility
- "Database Aging Tasks" on page 132
- "Discovery Task" on page 133 - not applicable to the Local CRAFT Utility
- "LDAP Backup/File Aging Task" on page 136

5.2.1 The Task Manager Window

Tasks are operations that are performed on a large number of system entities (such as equipment, services, etc.). They run in the background, allowing the network administrators to continue managing the network while they run. After a task has completed, or upon termination of a task, a report is issued.

The Task Manager displays information on defined tasks and enables to create new tasks, edit, schedule, run or delete existing tasks. If there is any error in the parameters definition such as a missing parameter, contradicting definitions or a non-valid value, the relevant error message(s) will be displayed at the top section of the window, and a red border around the relevant entries will indicate the parameters that should be corrected. The Task Manager also enables to abort running tasks and to view reports on completed and aborted tasks.

The following are tasks that are applicable for all device drivers:

- "Network Discovery Task" - Section 5.2.10 - not applicable to the Local CRAFT Utility
- "Database Aging Tasks" - Section 5.2.11
- "Discovery Task" - Section 5.2.12 - not applicable to the Local CRAFT Utility
- "LDAP Backup/File Aging Task" - Section 5.2.13

Certain task are applicable for two or more device drivers that share some common features. These include:

- "The Performance Collection (SNMP Based) Task" - Section 5.2.14
- "Multiple Configuration (Template Based) Task" - Section 5.2.15

As many tasks are available only for a specific device family, refer to the relevant *Device Driver Manual* for a detailed description of these tasks.

To access the Task Manager:

Select *Administration > Task Manager* from the main menu or the Navigation Pane. The Task Manager displays a list of defined tasks.

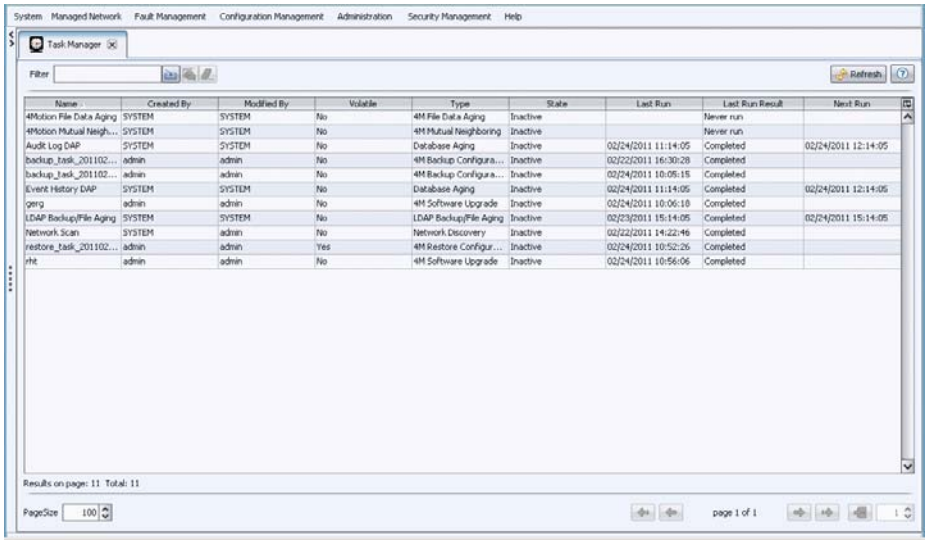

Figure 5-1: Task Manager

The following information is displayed for each defined task:

Parameter	Description
Name	A unique name of the task.
Created by	The user name of the task creator.
Modified by	The name of the user who last modified the task.
Volatile	A volatile task is not saved in the database. It can be run only once and it will be displayed in the Task Manager (with Volatile status Yes) only for a short time. This is applicable only for certain tasks that are not initiated from the Task Manager.
Type	The type of task.
State	The current state of the task: Active, Inactive, Waiting, Stopping.

Parameter	Description
Last Run	The date and time the last time the task was run.
Last Run Result	The result of the task's last run: Completed/Completed with errors/Aborted/Never run.
Next Run	The date and time the next time the task is scheduled to run, or null if not scheduled.

Select one entry and right-click to view the available management options (if you select more than one entry only the New and Delete options will be available):

Control	Description
New	Opens the Task Wizard (See Section 5.2.2), enabling creation of a new task.
Edit	■ For an Inactive Task: Opens the Task Editor (See Section 5.2.3) for the selected task, allowing to edit the task parameters. . ■ For an Active Task: Opens the Runtime Results window (See Section 5.2.6) displaying the task's progress.
Delete	Deletes the selected task(s) from the database. The application will prompt you for confirmation. Not available for active tasks and for system tasks (Created By is SYSTEM). Scheduled tasks cannot be deleted. To delete a scheduled task, you need to first unschedule it (see below).
Run	Manually executes the task. While the task is running, the state changes from Inactive to Active. The option is unavailable for currently running tasks. If there are more than 20 active tasks, some of the tasks may change from Inactive to Waiting. When attempting to run a task which affects equipment that is not part of the user's visibility domain, a meaningful message will be displayed in the task report. For more information about domain management, see "User Domain Manager" on page 185. If a previously executed task was completed with errors, you have several options when trying to run it again. Upon selecting the Run option for a previously executed Software Upgrade task that was completed with errors, the Previously Run Task window (See Section 5.2.9) will open, enabling selection of actions for the next run of the task.

Control	Description
Abort	Aborts the selected running task. Available for running tasks only (State is Active or Waiting). Upon selecting the **Abort** option, a confirmation message is displayed. Click **Yes** to abort the task. The task's State changes to Inactive (in some cases it may temporarily change to Stopping), and the Last Run Result to Aborted.
Schedule	Opens the Schedule Editor (See Section 5.2.5) , enabling to schedule the activation of the task (or change the scheduling of a previously scheduled task). Not available for currently running tasks.
Unschedule	Clears the schedule for the selected task. Active only for scheduled tasks.
Report	Opens the Task Report window (See Section 5.2.7) , enabling to view a report of the last execution of the selected task. Not available for tasks that were never run or for currently running tasks.
History	Opens the Task Results window (See Section 5.2.8) , displaying a list of all past activations of the selected task and their results. Not available for tasks that were never run.

5.2.2 The Task Wizard

The Task wizard enables creation of a new task.

To open the Task Wizard:

In the Task Manager window, right-click anywhere in the window and select **New**. The Task Wizard comprises three steps:

- Step 1 - Create New Task
- Step 2 - Configure Task
- Step 3 - Finish Task

5.2.2.1 Step 1 - Create New Task

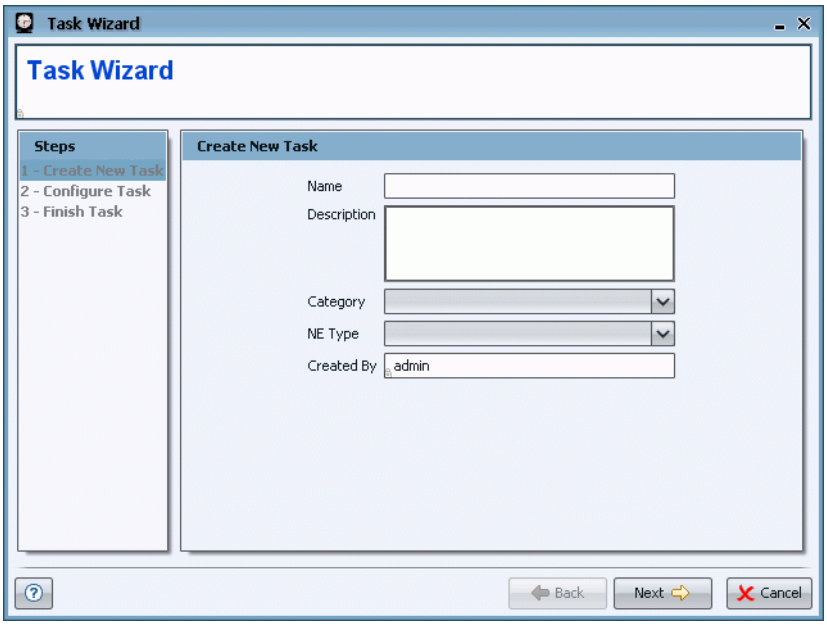

Figure 5-2: Task Wizard - Step 1 (Create New Task)

Step 1 (Create New Task) of the wizard includes the following parameters:

Parameter	Description
Name	The name of the task. A string of from 1 to 128 printable characters. The name must be unique in the system and cannot include the following characters: /,\,?,<,>,:,*,^,|,"
Description	An optional description of the task.
Category	The task's category. Available options depend on installed Device Drivers. Must be selected prior to selecting NE Type.
NE Type	The relevant Network Element(s) type. Available options depend on installed Device Drivers and selected Category.
Created By	Read-only. The User creating the new task.

Click **Next** to apply the configuration and continue to next step.

5.2.2.2 Step 2 - Configure Task

The parameters/functionality of Step 2 (Configure Task) of the wizard depend on the specific task. For details refer to the Task Editor section for each task.

Click **Next** to apply the configuration and continue to next step.

5.2.2.3 Step 3 - Finish Task

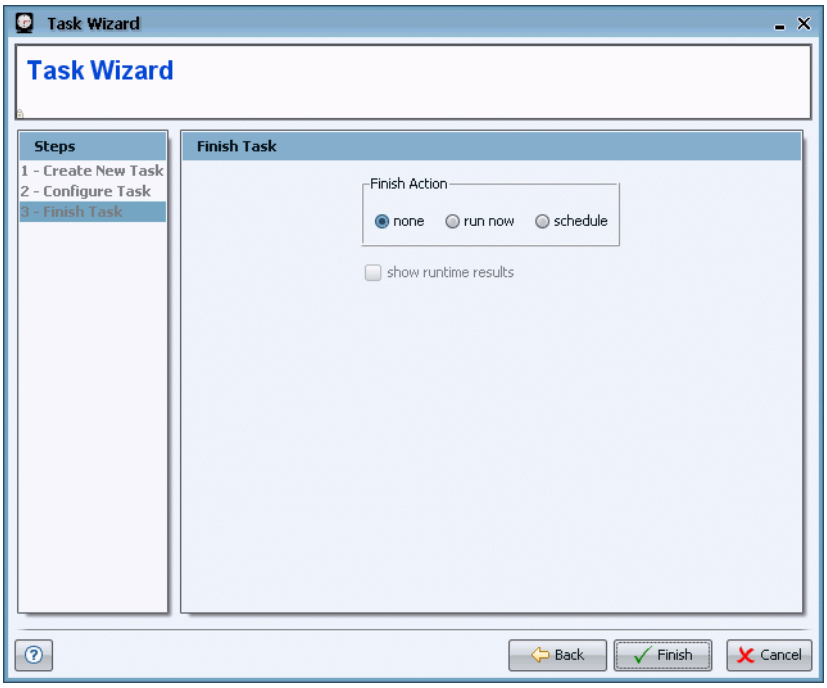

Figure 5-3: Task Wizard - Step 3 (Finish Task)

Step 3 (Finish Task) of the wizard includes the following components:

Parameter	Description
Finish Action	The action to be performed after finishing task creation: ■ none (the default): No action except adding the new task to the Task Manager. ■ run now: Add the task to the Task Manager and run it. ■ schedule: Add the task to the task manager and open the Schedule Editor (See Section 5.2.5) for the task.
show runtime results	Available only if selected Finish Action is run now. If selected (marked), the Runtime Result window (See Section 5.2.6) will open when the task starts running.

Click **Finish** to apply the specified **Finish Action**.

5.2.3 The Task Editor

To open the Task Editor for a selected task:

In the Task Manager window, right-click on the task you want to edit and select **Edit**.

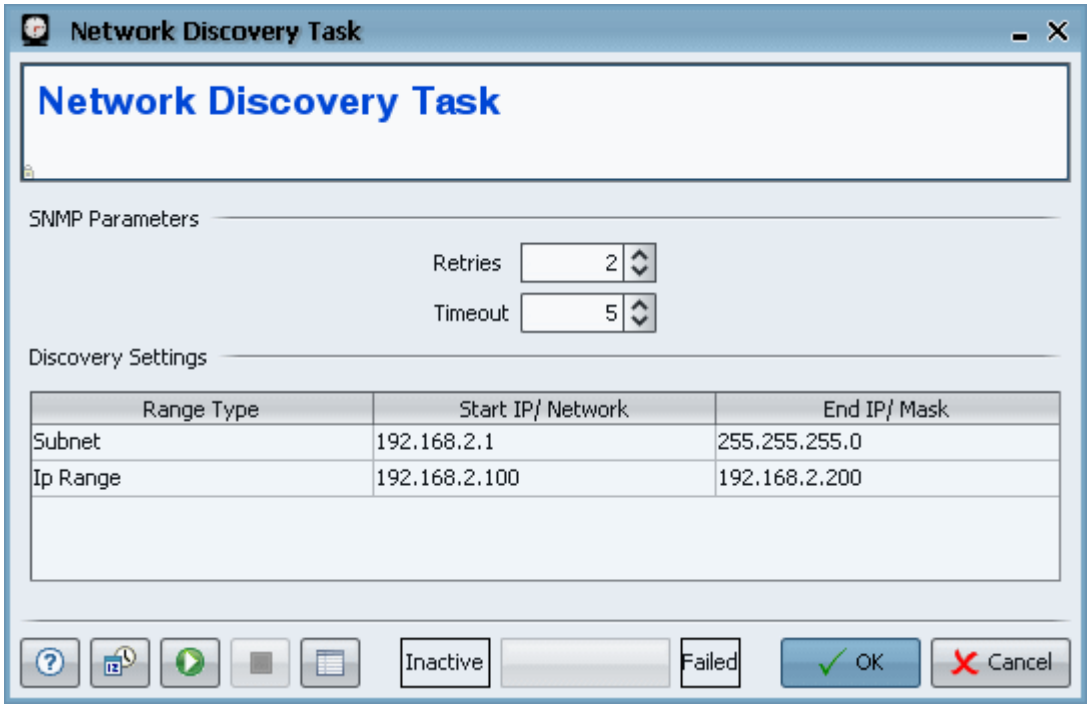

Figure 5-4: The Task Editor (Network Discovery Task)

The parameters/functionality of a Task Editor depend on the specific task. For details refer to the Task Editor section for each task.

When editing tasks, the following general controls are available at the bottom:

Click	**To:**
OK button	Save the changes and close the task window
Cancel button	Close the window without saving changes
Run	Execute the task
Abort	Stop the task
View Report	Open the scan report (see Section 5.2.7)
Schedule	Set a time to run the task (see Section 5.2.5)
Help	Open the On Line Help for the task

The task's State and Last Run Results are also displayed, In addition, there is a progress bar indication progress of an Active task.

5.2.4 The Selector Window

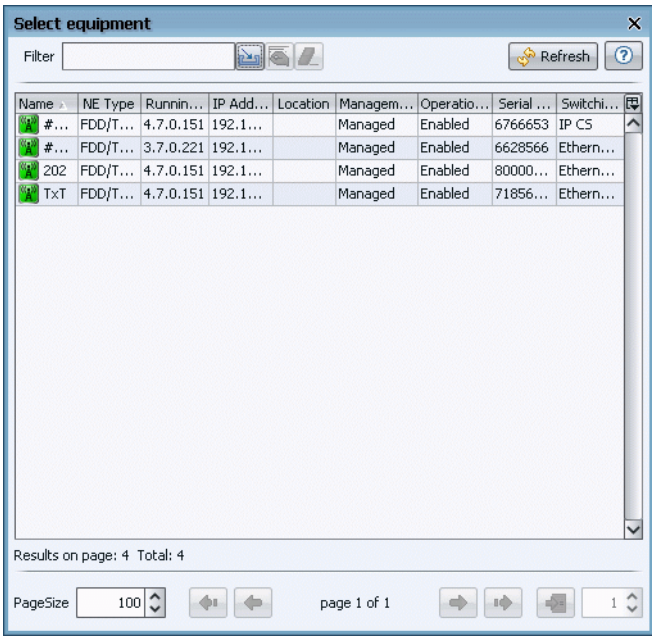

Figure 5-5: Selector Window - Example 1

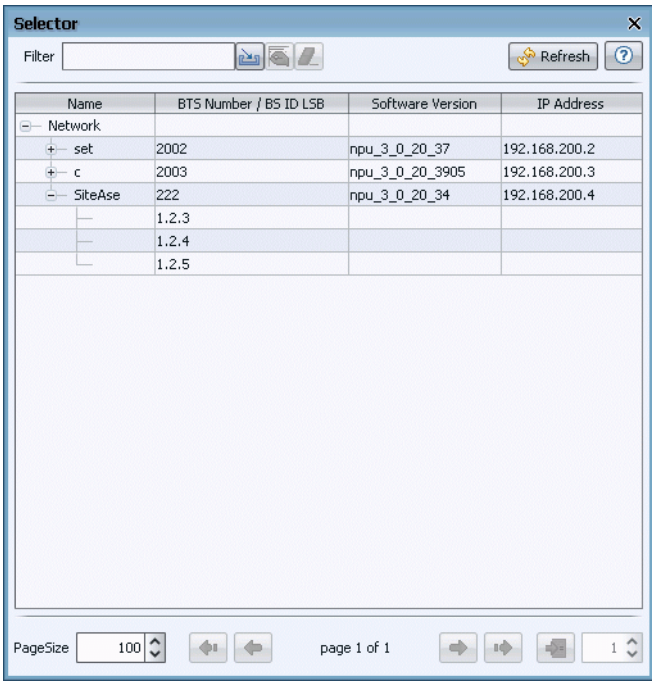

Figure 5-6: Selector Window - Example 2

In most tasks one or several entities should be selected as participants in the task. When adding entities to a task, an appropriate Selector window opens, displaying identification details and some other properties of all eligible entities. Typically, the Selector window includes common features such as Page Control Bar and Filtering.

To add one or several entities to the task select the relevant entries, right-click to open the options menu and select the Select option (to add a single entity you can just double-click on the selected entry).

5.2.5 The Task Scheduler

Tasks can be scheduled to run once, or at predefined recurrence intervals. Examples of recurring tasks include Network Discovery and Database Aging.

To schedule a task:

1 In the Task Manager window, right click a task from the list and select **Schedule**. Alternatively, you can schedule a task during task creation, or while editing a task, by clicking on the scheduler icon at the bottom left of the task window. The Schedule Editor opens.

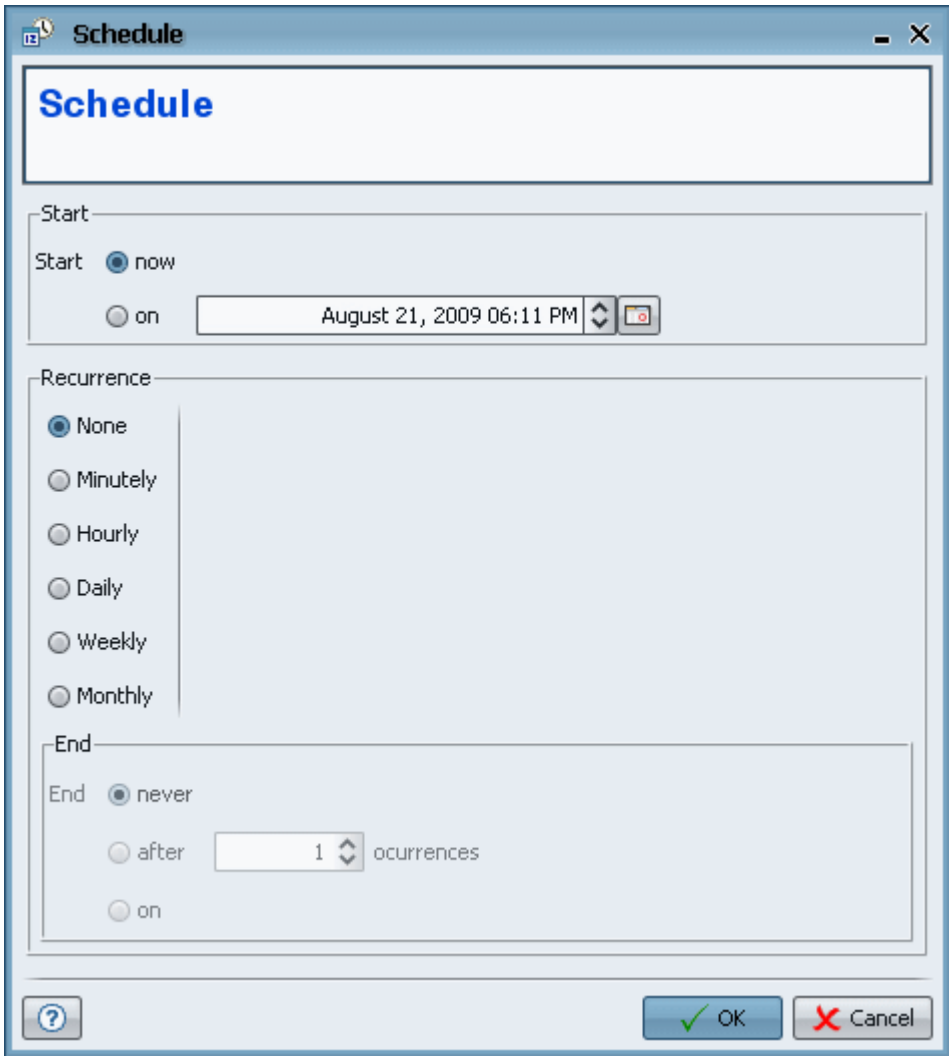

Figure 5-7: Schedule Editor

The Schedule Editor includes the following parameters:

Parameter	Description
Start	The start time for the task. Select one of the following options: ■ Now ■ On - set a specific start date and time. You can highlight the value to change (month, day, year) and click on the up/down arrows to change the value, or you can pick a specific date using the calendar icon. You can also type in the date and time as follows: MMMM DD, YYYY HH:MM AM/PM.

Parameter	Description
Recurrence	Set the recurrence interval between each task execution. Available intervals include: ■ None - no recurrence (default) ■ Minutely - specify the number of minutes. (the range is 1-1,440) ■ Hourly - specify the number of hours. (the range is 1-96). ■ Daily - specify the number of days. (the range is 1-60) ■ Weekly - select one of the following options: » Recur every - enter the number of weeks between task executions (the range is 1-20) » Day - specify the day of the week (Sunday to Saturday) and the number of weeks between task executions (the range is 1-20). ■ Monthly - select one of the following options: » Recur every - enter the number of months between task executions (the range is 1-36) » Day - specify the day in the month (1-31) and the number of months between task executions (the range is 1-36).
End	The end time for a recurring task (only). Select one of the following options: ■ Never - enable tasks to be executed indefinitely ■ After N occurrences (where N is a number between 1-65,000) - set the number of occurrences after which the task's scheduling will be cleared. ■ On - set an end date and time. You can highlight the value to change (month, day, year) and click on the up/down arrows to change the value, or you can pick a specific date using the calendar icon. You can also type in the date and time as follows: MMMM DD, YYYY HH:MM AM/PM.

2 Set the **Start** and **End** time and optionally select a recurrence interval.

3 Click **OK** to apply the schedule for the selected task.

5.2.6 The Runtime Results Window

To open the Runtime Results Window for an active task:

Right click on an active task and select **Edit,** or double-click the task's entry to open the Runtime Results window, displaying the status of the running task.

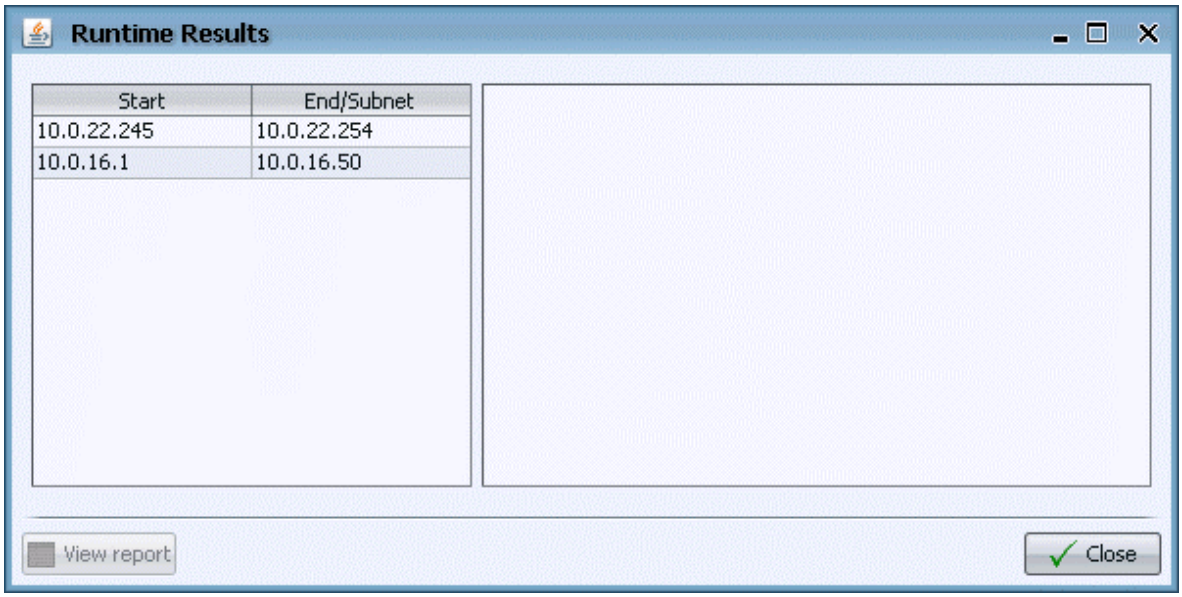

Figure 5-8: Runtime Results Window (Network Discovery Task)

The Runtime Results window will open automatically when selecting to run a new task from the Task Wizard, with the show runtime results option selected (see Section 5.2.2.3).

After completion of the task, the **View report** button becomes active. You can click on this button to open the Task Report (see Section 5.2.7) for the completed task.

5.2.7 The Task Report Window

To open the Runtime Results Window for an inactive task:

Right click on an inactive task and select **Report** to open the Task Report for the last activation of the task (not available for tasks that were never run).

The Task Report for the last activation of the task can also be accessed from each task editor (see Section 5.2.3). The **Report** button in the task editors is inactive while the task is running and will become active only after the task has completed.

The Task Report for any previous activations of the task can also be access from the Task Results window (see Section 5.2.8).

The following controls are available:

Button	Description
Save As	Click to open the Save window. Browse to a location in the file system, enter a name for the file and click **Save**.
Print	Click to open the Print Preview window. Select the required printing prefernces and click on the **Print** icon.
Filter	The Filter functionality is not available for some reports. Use the Drop-Down List (on the right side of the button) to open the results list, select the desired result and click the Filter button to view only task operations that meet the specified criteria.

5.2.8 The Task Results Window

The Task Results window displays a list of all past activations of the task selected in the Task Manager window and their results. Not available for tasks that were never run.

To use the Task Results window:

In the Task Manager window, right click a task from the list and select **History** . The Task Results window is displayed.

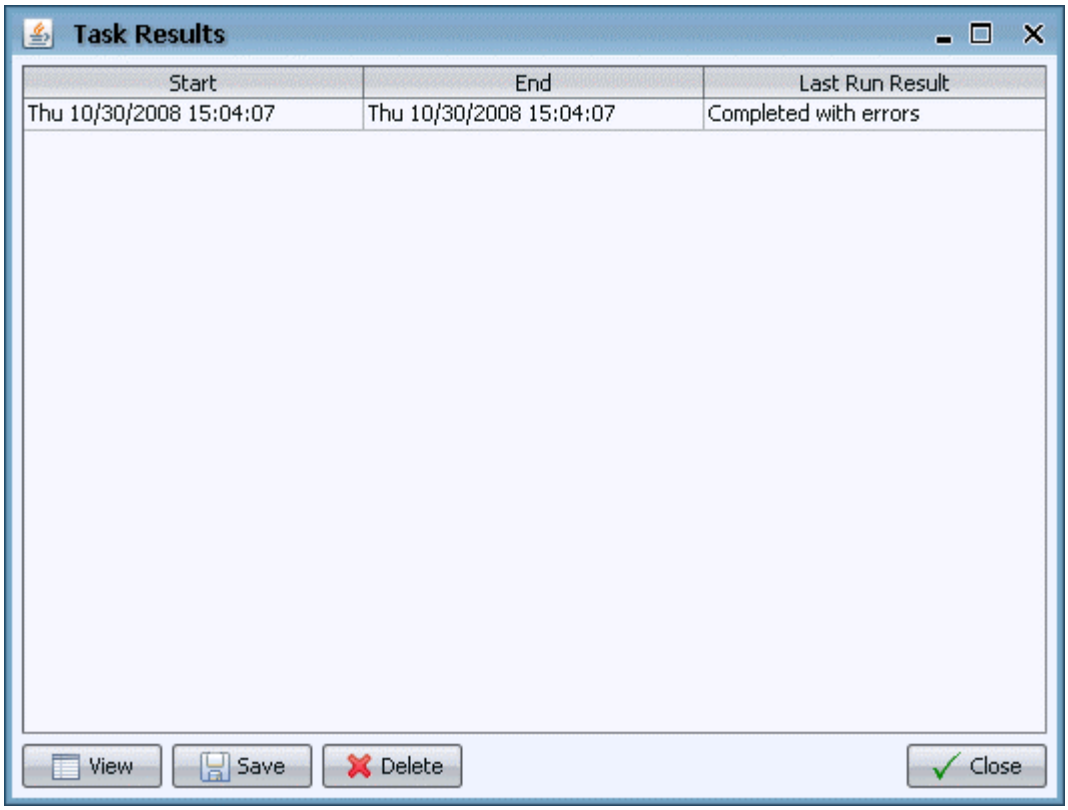

Figure 5-9: Task Results Window

The Task Results window displays the following information for each listed activation:

Parameter	Description
Start	The start date and time of the activation.
End	The end date and time of the activation.
Result	The result of the activation.

Use the Task Results controls as required:

Action	Description
View	Open the Task Report (see Section 5.2.7).
Save	Enables to save the task results to an external file. Click and browse to a location in the file system, enter a name for the file and click **Save**.
Delete	Deletes the selected task activations(s) from the database of the management system.
Close	Closes the Task Results window.

5.2.9 Task Rerun

In the current release the Task Rerun feature is applicable only for a Software Upgrade task. If a previously executed task was completed with errors, you have several options when trying to run it again.

Upon selecting the Run option for a previously executed task that was completed with errors, the Previously Run Task window will be displayed:

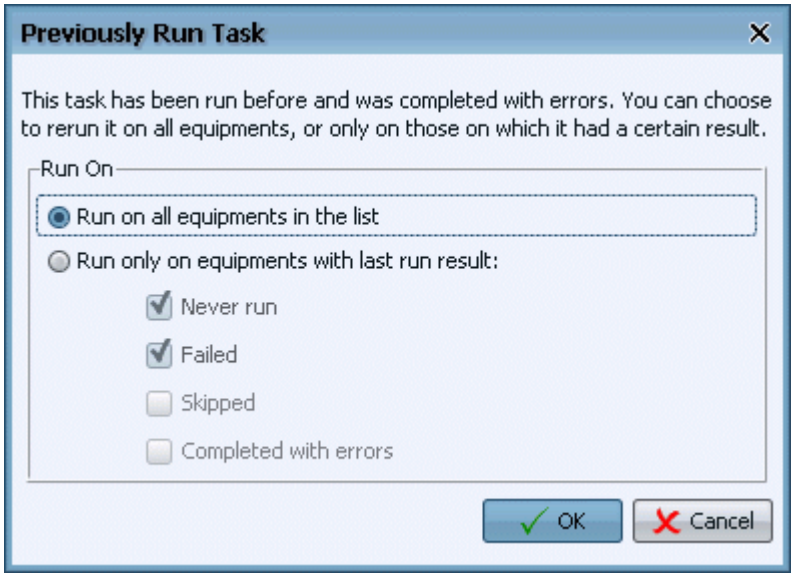
Previously Run Task
This task has been run before and was completed with errors. You can choose to rerun it on all equipments, or only on those on which it had a certain result.
Run On
Run on all equipments in the list
Run only on equipments with last run result:
Never run
Failed
Skipped
Completed with errors
OK
Cancel

Figure 5-10: Previously Run Task Window

You can choose to rerun the task on all equipment in the list or only on devices that meet any of the specified conditions.

Note that if the equipment list was updated since the last time the task was executed, the task rerun will include also all new devices that were not included in the previous list.

5.2.10 Network Discovery Task

Craft The Network Discovery Task is not applicable to the Local CRAFT Utility.

The Network Discovery task is a system task that scans the entire network for new devices. The scope of the network is defined in the Discovery Settings window (see Section 2.3). The Network Discovery task can only be modified, not deleted.

To edit the Network Discovery Task

In the Task Manager window, right click the Network Discovery task (task's Name is Network Scan) from the list and select **Edit,** or double-click the task's entry. If the task is Inactive, the Network Discovery Task is displayed.

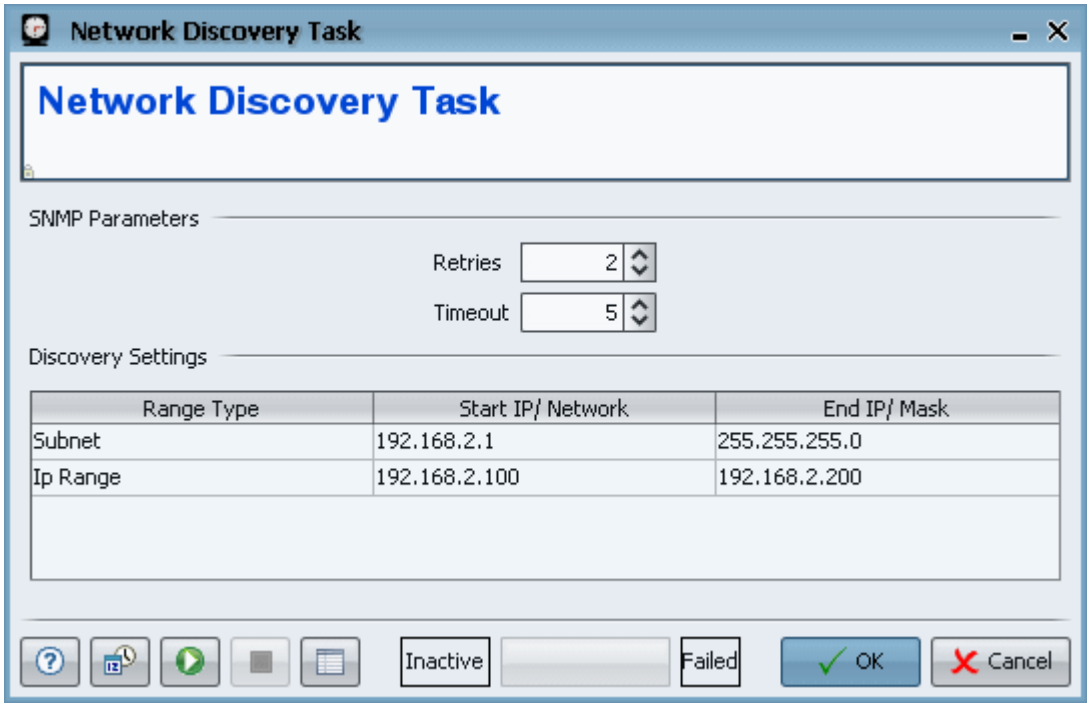

Figure 5-11: Network Discovery Task Window

4 You can modify the SNMP Parameters of the Network Discovery Task as required (the Discovery Settings are read-only and can be modified only in the Discovery Settings manager):

Parameter	Description
Retries	The maximum number of retries for SNMP communication. The range is from 0 to 255.
Timeout	The maximum time in seconds that the requesting process waits for a response before attempting a retransmission (or aborting if the maximum number of retries has been reached). The available range is 1 to 3,600 seconds.

5 Use the Editor controls as required (for details see Section 5.2.3).

5.2.11 Database Aging Tasks

The Database Aging tasks set the maximum number of alarms shown in the Event History (Section 3.3) and Audit Log (Section 6.2) and automate database management tasks. Database Aging tasks are system tasks and can only be modified, not deleted.

There are two instances of tasks with Type Database Aging:

- Task Name is Audit Log DAP
- Task Name is Event History DAP

To edit the Database Aging Task:

1 In the Task Manager window, right click the Database Aging task from the list and select **Edit**.

If the task is Inactive, the Database Aging Task is displayed.

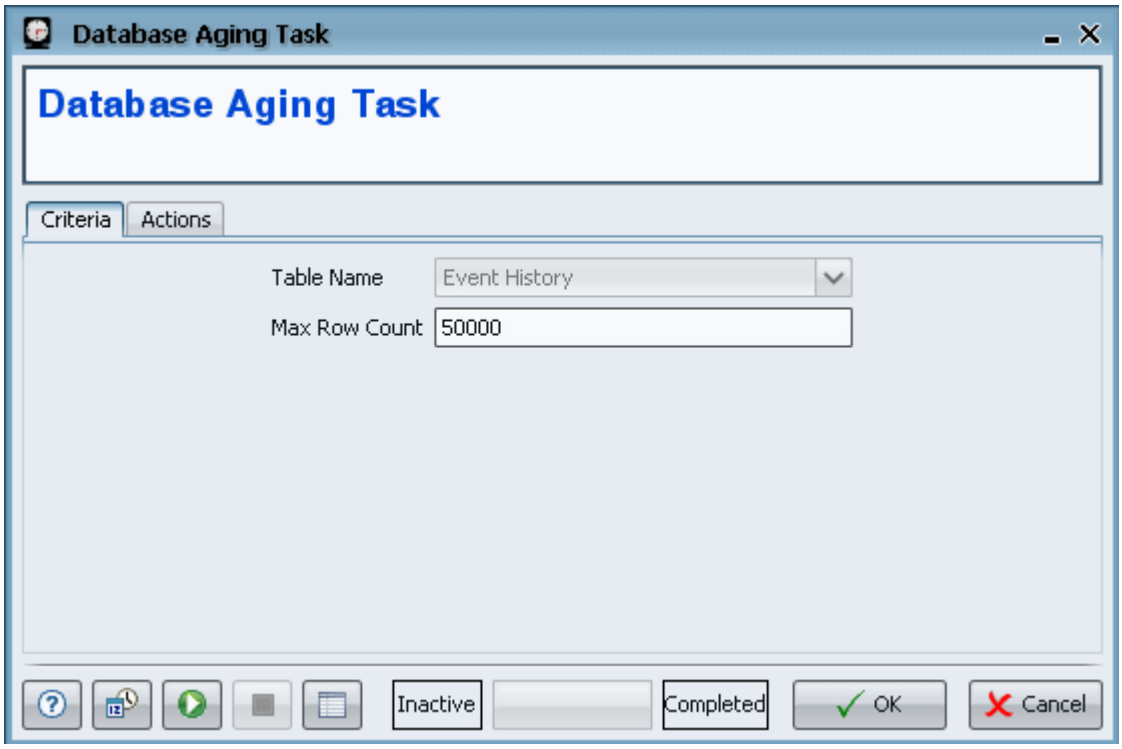

Figure 5-12: Database Aging Task Window

The Database Aging Task window includes the following information in two tabs:

Parameter	Description
Criteria tab	

Parameter	Description
Table Name	The name of the table. Possible values are Event History (Event History DAP Database Aging task) and Audit Logs (Audit Log DAP Database Aging task). This is a read only field and cannot be modified
Max Row Count	The maximum number of alarms in the database. **Note:** When the number of alarms exceeds the value entered in the *Max Row Count* field by 25%, an alarm is sent. When the number of alarms exceeds the value entered in the *Max Row Count* field by 50%, the oldest alarms are deleted so that the total number of alarms in the database equals the value defined in the *Max Row Count* field.
Actions tab	
Secondary Storage	File type of the archived records. Possible values are: None, CSV
Destination	A disk location for archiving. The default location is: <Management_System>/filesystem/archive.

5.2.12 Discovery Task

Craft The Discovery Task is not applicable to the Local CRAFT Utility

The Discovery Task enables to scan a predefined range of IPs for new and modified devices.

To open the Discovery Task window:

- To open a new Discovery task, use the Task Wizard in the Task Manager window. Select **Discovery** in the **Category** drop-down menu. Select **Any NE** (the only available option) in the **NE Type** drop-down menu.
- To edit an existing task, in the Task Manager window, select an existing Discovery task from the list, right-click and select the **Edit** option, or double-click on the selected entry. If the task is Inactive, the Discovery Task Editor for the selected task will open.

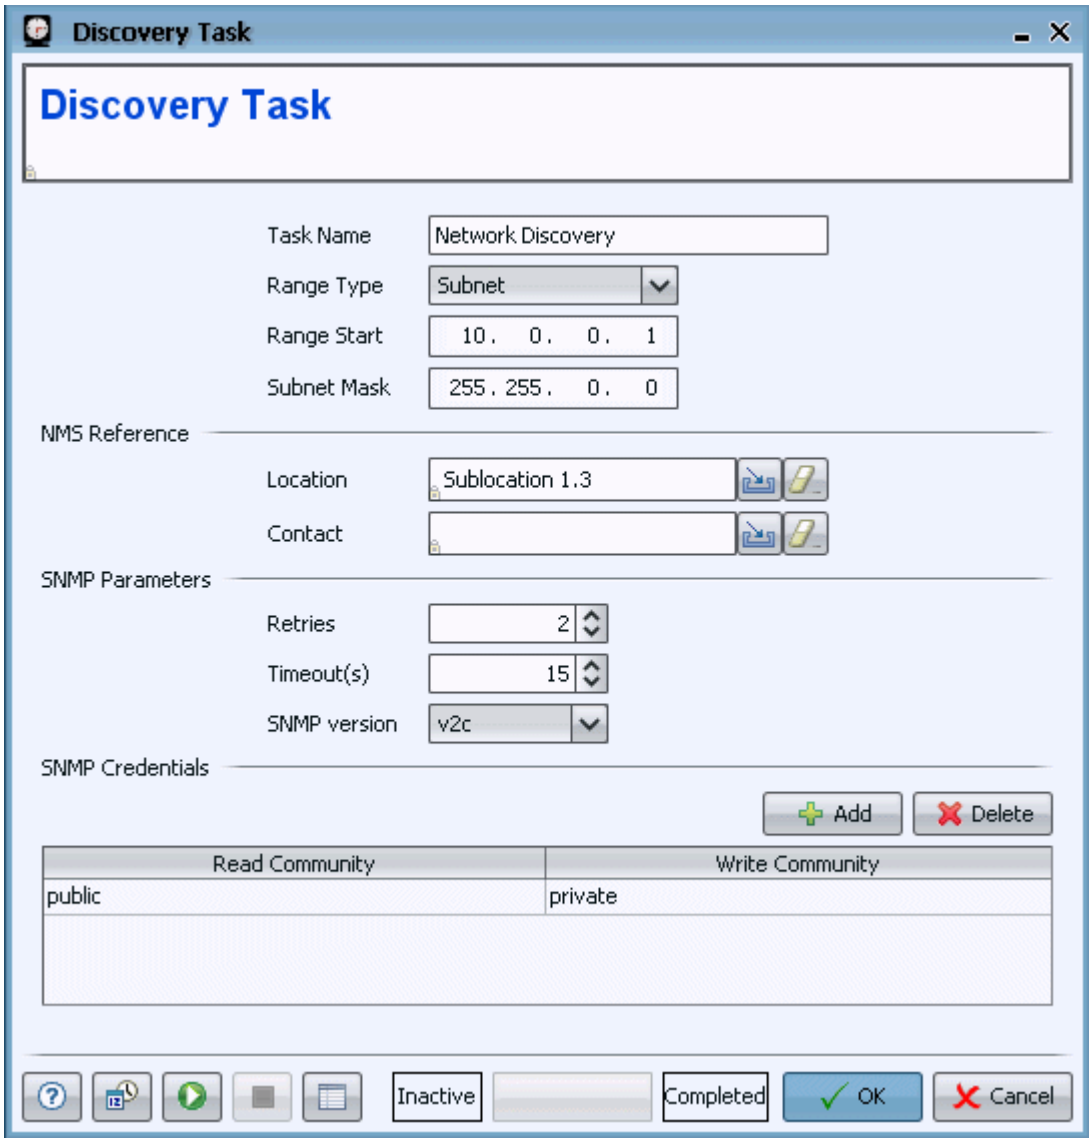

Figure 5-13: Discovery Task Window

The Discovery Task window comprises the following fields:

Parameter	Description
Task Name	The name of the task. A string of up to 128 printable characters. The name must be unique in the system and cannot include the following characters: /,\,?,<,>,:,*,^,|,"
Range Type	The range type: IP or Subnet.
Range Start	The first IP in the range or the base IP, depending on the selected Range Type.
Range End/Subnet Mask	The last IP in the range or the subnet mask, depending on the selected Range Type.

Parameter	Description
Location	An optional field for defining a location for devices in the range. Select from the available locations. Newly discovered devices will be automatically associated with the defined location. Devices already in the database will not be affected.
Contact	An optional field for defining a contact for devices in the range. Select from the available contacts. Newly discovered devices will be automatically associated with the defined contact. Devices already in the database will not be affected.
Retries	The maximum number of retries for SNMP communication. The range is from 0 to 255.
Timeout(s)	The maximum time in seconds that the requesting process waits for a response before attempting a retransmission (or aborting if the maximum number of retries has been reached). The available range is 1 to 3,600 seconds.
SNMP Version	The SNMP protocol version used by the devices the NMS is attempting to discover. The available options are: ■ v1 ■ v2c ■ v3 For a complete list of all compatible SNMP versions for each device, see Appendix E.

Parameter	Description
SNMP Credentials	Use the Add and Remove buttons to populate the SNMP Credentials. The type of credentials differ, depending on the SNMP version. For SNMP v1 and v2c, fill in the read/write community table: ■ Read Community - SNMP Read community to be used by discovery when accessing devices in the range. If unique communities are not defined, the defined global Read communities will be used one after the other. ■ Write Community - The unique SNMP Write community to be used when accessing discovered devices in the range. If unique communities are not defined, the global Write community paired with the global Read community that was used to discover devices in the range will be used when accessing these devices. For SNMP v3, the following credentials apply: ■ Username - Username used for authentication ■ Security Level - Authentication and privacy settings » NoAuth_NoPriv - Both authentication and privacy are disabled » Auth_NoPriv - Authentication is enabled and privacy is disabled » Auth_Priv - Both authentication and privacy are enabled ■ Authentication Algorithm - Hashing algorithm applied to the authentication password » MD5 - Message-Digest algorithm 5 » SHA - Secure Hash Algorithm ■ Authentication Password - Password used for authentication ■ Privacy Algorithm - Encryption standard used for data transmission » AES - Uses the Advanced Encryption Standard » DES - Uses the Data Encryption Standard Privacy Password - Encryption key used by the privacy algorithm

5.2.13 LDAP Backup/File Aging Task

The LDAP Backup/File Aging task is used to set up the backup frequency for LDAP credentials. The LDAP Backup/File Aging task is a system tasks and can only be modified, not deleted.

To edit the LDAP Backup/File Aging Task:

1. In the Task Manager window, right click the LDAP Backup/File Aging task from the list and select **Edit**.
2. If the task is Inactive, the Database Aging Task is displayed.

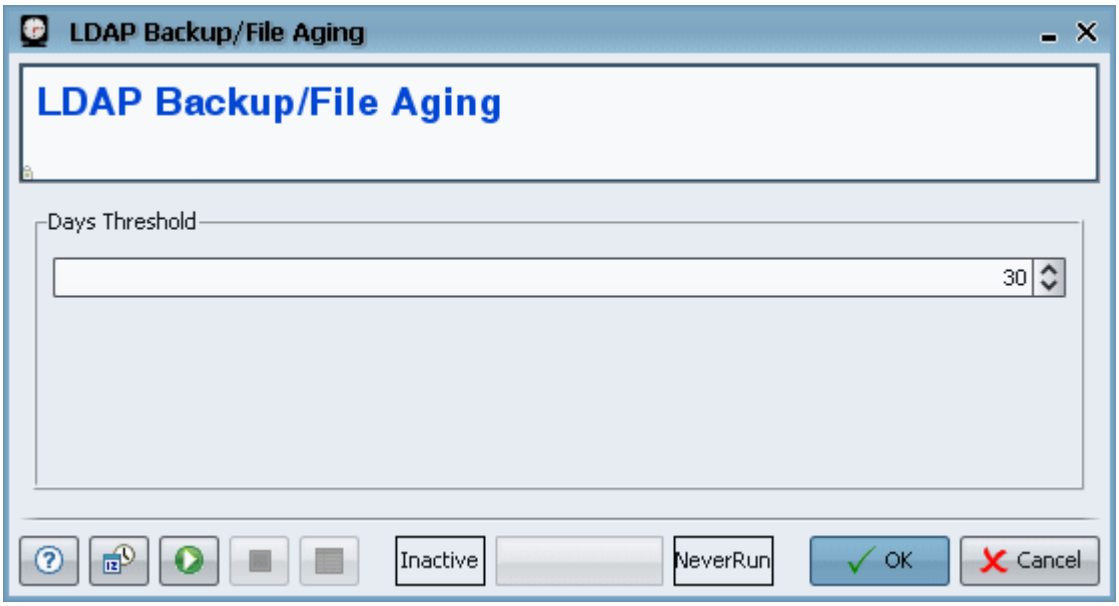

Figure 5-14: The LDAP Backup/File Aging Edit Window

3 Use the Days Threshold field to indicate how often the backup task should be run.

5.2.14 The Performance Collection (SNMP Based) Task

INFORMATION

The Performance Collection (SNMP Based) Task is available only if the installed Device Drivers include one or more Device Driver(s) for device families that support this feature.

Craft The Performance Collection Task is not applicable to the Local CRAFT Utility.

The Performance Collection Task enables collecting performance data at defined intervals from specific entities using SNMP. It also enables to select the type of data to be collected.

To open the Performance Collection (SNMP Based) Task Editor:

- To open a new Performance Collection task for either Equipment or Service, use the Task Wizard in the Task Manager window. Select **Performance Collection** in the **Category** drop-down menu. Select **Any NE (SNMP Based)** in the **NE Type** drop-down menu.
- To open a new Performance Collection task for Services (if applicable for the specific device family) from the Service Manager, select one or several entries, right-click and select the **Performance**

Collection option. A Services Performance Collection Task will open, including the selected services in the Entities tab. In this case use the Next button to move between tabs.

- To edit an existing task, in the Task Manager window, select an existing Performance Collection task from the list, right-click and select the **Edit** option, or double-click on the selected entry. If the task is Inactive, the Performance Collection Task for the selected task will open.

The Performance Collection Task includes four tabs:

- "General Tab" - Section 5.2.14.1
- "Entities Tab" - Section 5.2.14.2
- "Counters Tab" - Section 5.2.14.3
- "Actions Tab" - Section 5.2.14.4

5.2.14.1 General Tab

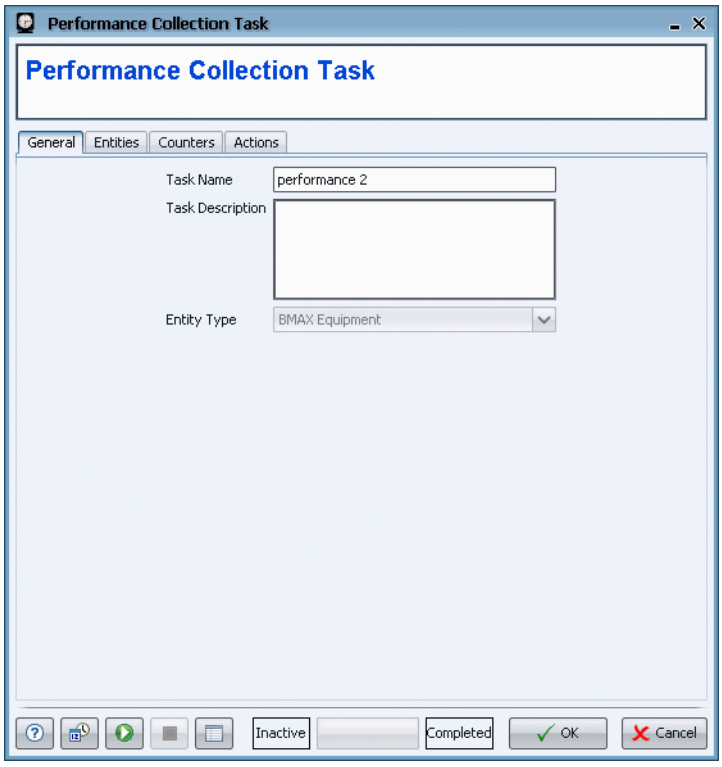

Figure 5-15: Performance Collection Editor - General Tab

The General tab of the Performance Collection task enables definition of the following parameters:

Parameter	Description
Task Name	The name of the task. A string of 1-128 characters. The name must be unique and cannot include the following characters: /,\,?,<,>,:,*,^,|,"
Task Description	An optional description of the task.
Entity Type	The type of data to be collected: Service Performance task (if applicable) or Equipment Performance task. This field is configurable only when creating a new task from the Task Manager.

5.2.14.2 Entities Tab

The Entities tab enables to select existing entities for data collection. The type of entities depend on the selected Type in the General tab. If the task was initiated from either the Equipment Manager or the Service Manager, the selected entities are automatically included.

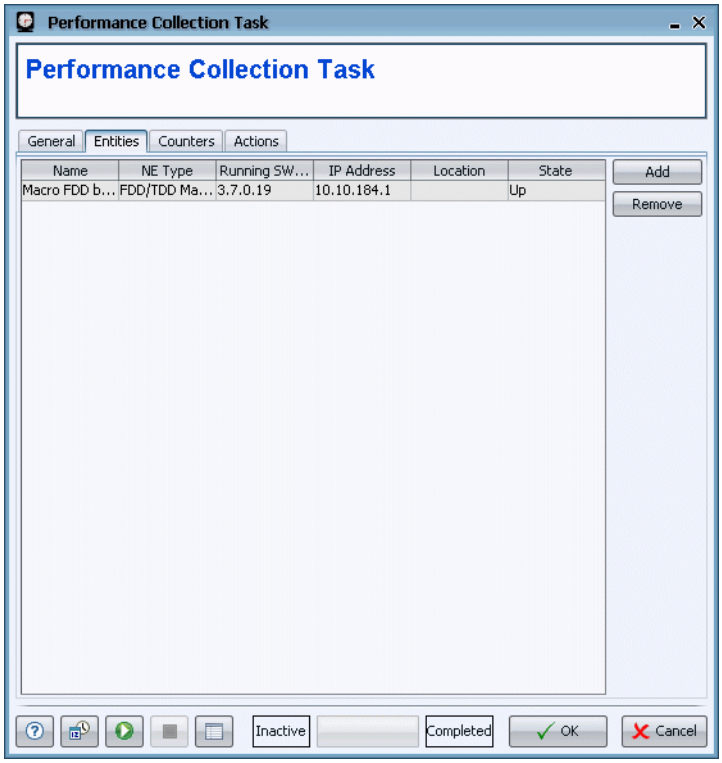

Figure 5-16: Performance Collection Task - Entities Tab (for Equipment Task)

The Entities tab includes the following controls:

Parameter	Description
Add	Open the Select relevant entities window, allowing you to add entities to the task. You may be prompted to select specific entities type (e.g. Base Stations or SUs).
Remove	Removes selected entities from the list.

The information displayed for each entity depends on the specific Entity Type selected in the General tab.

5.2.14.3 Counters Tab

The counters tab enables to select the counters for the performance collection task. The list of counters depends on the type of performance task selected and (if applicable) on the selected entity type. For the full list and details of equipment counters, refer to the Performance Page(s) of the relevant equipment. For a list and details of service counters (if applicable), refer to the Service Manager.

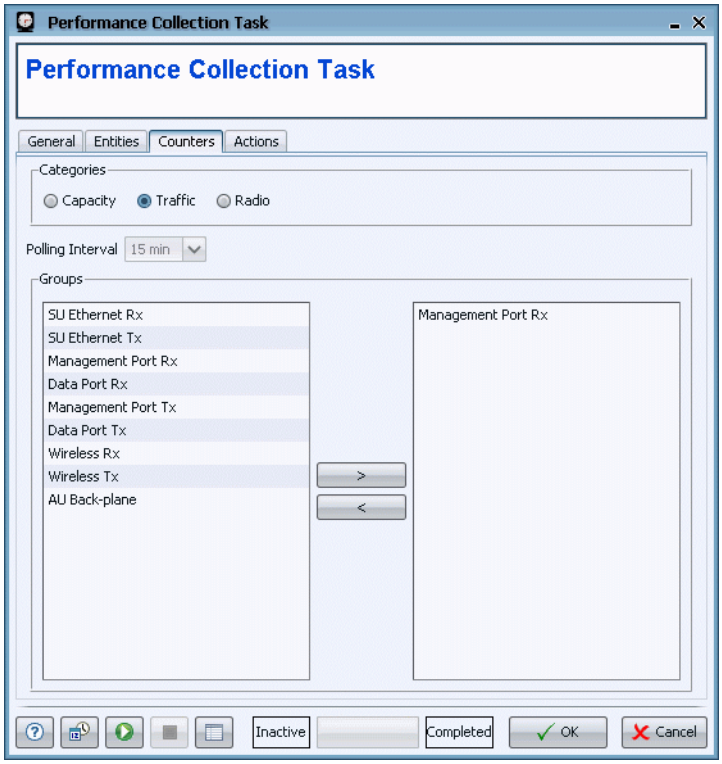

Figure 5-17: Performance Collection Task - Counters Tab (for Equipment) Task)

To select counters:

1 Select a Category. The available options for equipment are Capacity (data collected from relevant devices at 15 minutes intervals using the Statistics Collection feature), Traffic and Radio. The counters

available for the category selected are displayed in the left column under Groups. Note that certain Categories/Counters Groups may not be valid for certain devices. For Services only the Traffic option is applicable.

2 Select a time between polls from list in the Polling Interval field. This option is available only for the Radio Category in an Equipment Performance Collection Task, allowing to select the intervals of polling data from relevant devices (SUs/RBs) participating in the task. The available options are 1, 3, 5, and 15 minutes. For all other categories the Polling Interval is set at 15 minutes and cannot be modified.

3 Select the required counters from the list displayed on the left and click on >. The selected counters are displayed on the right. To delete a counter from the list of counters to be collected, select the counter from the list on the right and click <.

5.2.14.4 Actions Tab

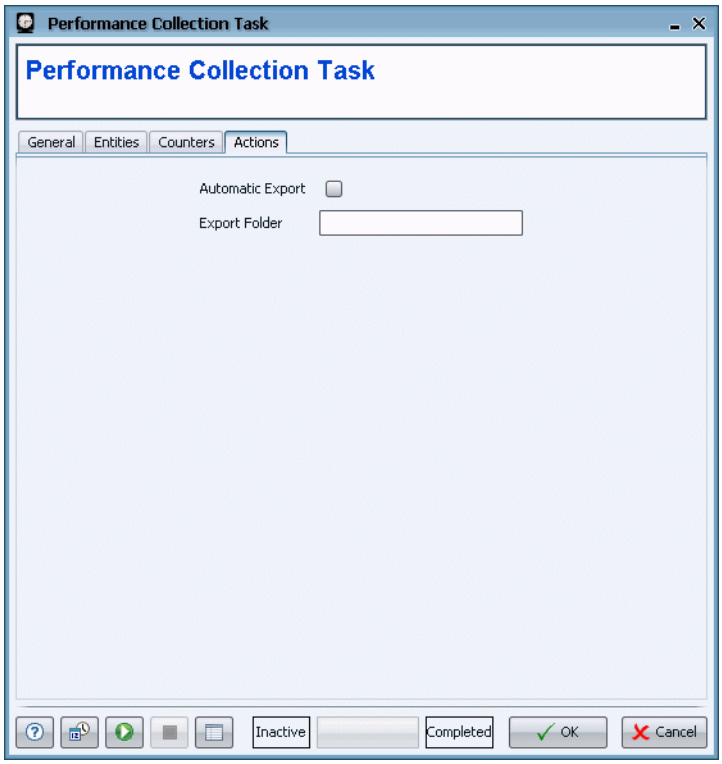

Figure 5-18: Performance Collection Task - Actions Tab

The collected data is stored automatically in the database (see File Manager in the relevant Device Driver Manual). You may also export the collected files to the file system. By default exported data files are saved in the following folder: <Management_System>\filesystem\export.

For information on how to change the default file location refer to the section on configuring the Global Properties File (appserve.properties) in the Management System Installation Manual.

5.2.15 Multiple Configuration (Template Based) Task

Craft In the Local CRAFT Utility, the Multiple Configuration Task is applicable only to the managed device.

The template based Multiple Configuration task enables modifying the configuration of selected devices using a pre-prepared template. For details on templates and how they are used to modify configuration of target objects refer to "Template Manager" on page 110.

To open the Multiple Configuration (Template Based) Task Editor:

In the Task Manager window, do one of the following:

- To open a new task, use the Task Wizard in the Task Manager window. Select **Multiple Configuration** in the **Category** drop-down menu. Select **Any NE (Template Based)** in the **NE Type** drop-down menu.
- To open an existing task, select an existing template based Multiple Configuration task from the list, right-click and select the **Edit** option, or double-click on the selected task. If the task is Inactive, the Multiple Configuration Task Editor for the selected task is displayed.

To open a new task from the Template Manager select the template you want to use, right-click and select the **Apply** option. The Task Editor with the selected Equipment Template is displayed.

To open a new task from the Equipment Manager, select the target device(s), right-click and select the **Multiple Configuration** option. The Task Editor with the selected Equipment is displayed.

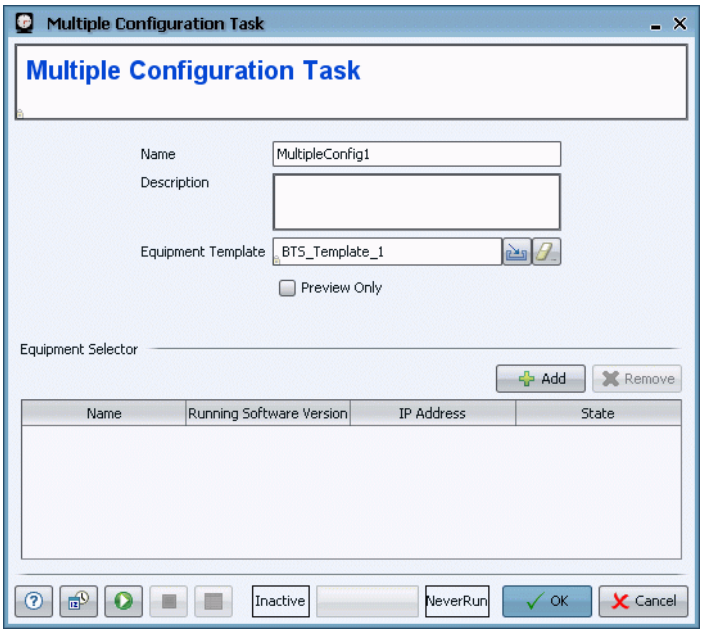

Figure 5-19: Multiple Configuration Task Editor

The Multiple Configuration Task editor comprises the following fields:

Parameter	Description
Name	The name of the task. A string of 1 to 128 printable characters. The name must be unique and cannot include the following characters: /,\,?,<,>,:,*,^,|,"
Description	An optional free text field providing a general description of the task.
Equipment Template	Use the Browser button to open the Template Selector and select the template you want to use from the list of previously defined templates.
Preview Only	Select to define a preview task. Preview option allows getting the full report without performing any actual modification to the devices. All validation rules are verified. This enables the user to gain confidence on performing the multiple configuration task. Typically the user will run the multiple configuration task without preview when he has no more errors in the Preview task report.

The Equipment Selector table includes the following details for each device participating in the task:

Parameter	Description
Name	The name of the device as configured in the device.
SW Version	The running SW version of the device.

Parameter	Description
IP Address	The IP address of the device.
State	The operational state of the device

Click **Add** to open the Selector window, allowing you to add objects to the Equipment table. The available objects are according to the MO Type of the selected template.

Click **Remove** to remove one or several selected objects from the table.

5.3 File Manager

The File Manager allows users to manage different types of files stored in the database such as backup configuration files and performance collection files.

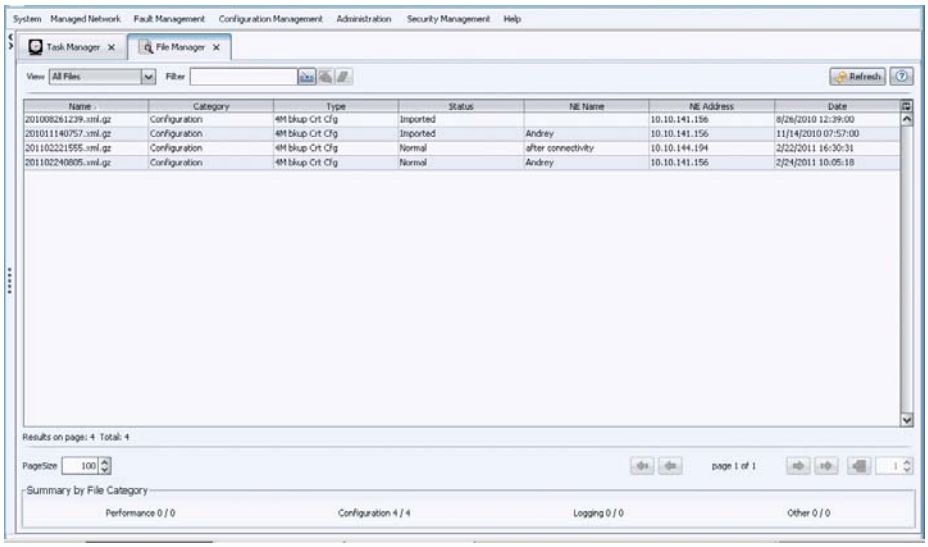

Figure 5-20: File Manager

For detailed information about each type of file that is supported for a particular equipment, check the File Manager related section of the corresponding device driver manual. In general, you can use the right click menu to import, export or delete various files from the client file system. Depending on the file type, additional options may be available in the context menu, such as initiating a restore configuration task for configuration backup files.

You can display only specific types of files by selecting the corresponding setting from the **View** drop menu at the top of the working area. When doing so, the table header will change so that only the columns that are relevant for that particular file type are shown. If you choose the **All Files** option, an additional summary section will be displayed at the bottom of the Working Area. You can switch between two types of summaries by right clicking on the section and selecting the corresponding option from the context menu:

- **Summary by File Category** - File counts for performance, configuration, logging and other file categories.
- **Summary by File Type** - File counts for various types of files according to the installed Device Drivers.

5.4 Contact Manager

The Contact Manager enables to organize and manage your contacts. Each device can be associated with a contact.

To open the Contact Manager:

1 Select *Administration* > *Contact Manager* from the main menu or the Navigation Pane. The Contact Manager displays a list of available contacts.

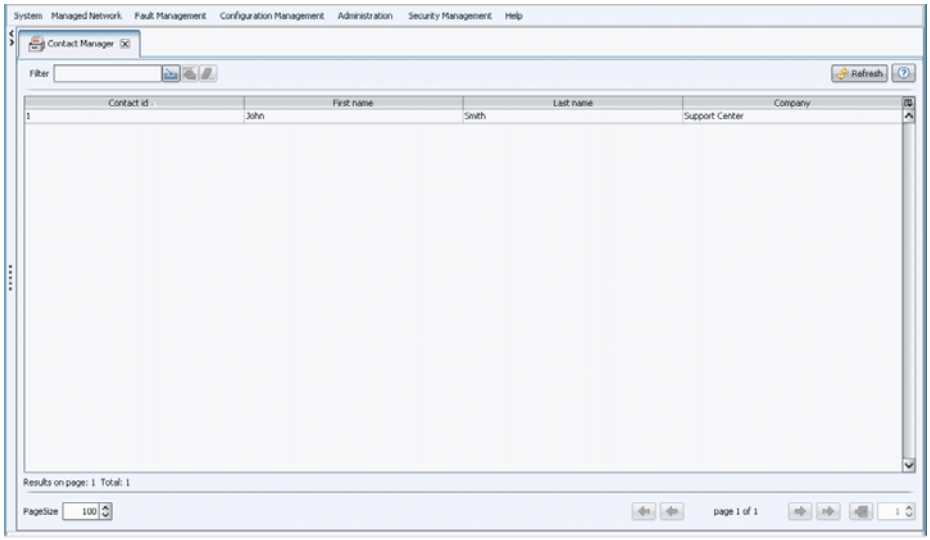

Figure 5-21: Contact Manager

2 Use the following controls in the right click menu of the Contact Manager window:

Button	Description
New	Opens the *Contact Editor* window, enabling to create new contacts.
Edit	Opens the *Contact Editor* window, enabling to modify the selected contact.
Delete	Deletes the selected contact(s) from the Contact Manager window and from the database. Contacts that are associated with equipment cannot be deleted.

5.4.1 Associating Devices with a Contact

To associate devices with a contact:

Open the Network Element Editor of the device. Click the **Browse** button next to the Contact field to open the *Select Contact* window and select a contact.

5.4.2 Creating or Modifying a Contact

To create/modify a contact:

1 From the Contact Manager window, right click and select **New** to create a new contact. To modify an existing Contact, select a contact from the list and click **Edit**, or double-click on the selected contact.

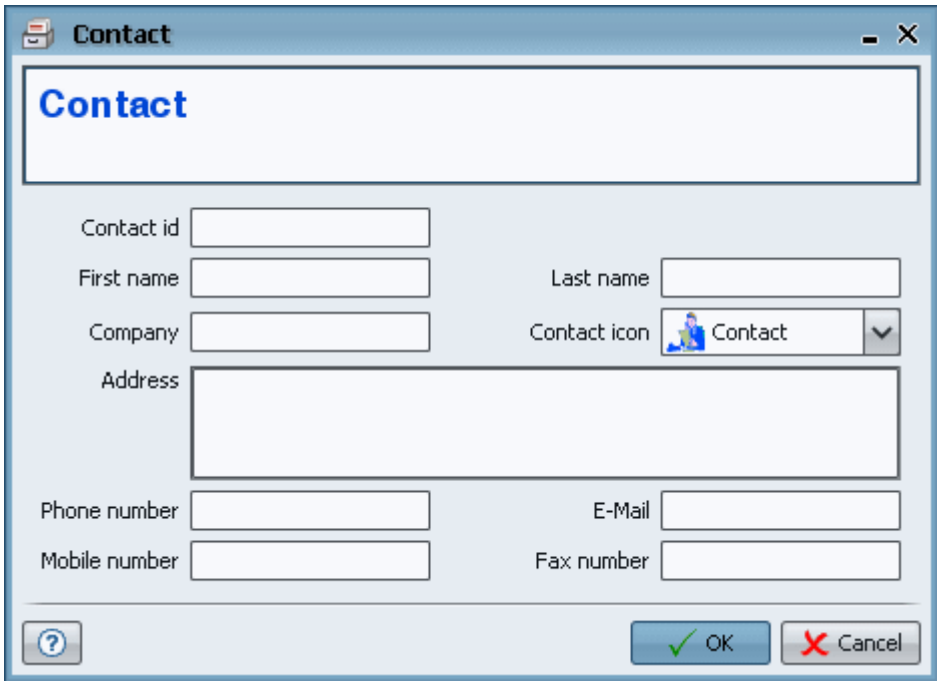

Figure 5-22: The Contact Editor

2 Configure the following parameters:

Parameter	Description
Contact ID	A unique identifier for this contact. Up to 80 printable characters.
First Name	Optional. The contact's first name. Up to 80 printable characters.
Last Name	Optional. The contact's last name. Up to 80 printable characters.
Company	Optional. The contact's company name. Up to 80 printable characters.
Contact Icon	Optional. Select from the drop-down list an icon to represent this contact: Contact/Group.
Address	Optional. The contact's address. Up to 80 printable characters.

Parameter	Description
Phone Number	Optional. The contact's phone number. Up to 80 printable characters.
Mobile Number	Optional. The contact's mobile number. Up to 80 printable characters.
Email	Optional. The contact's e-mail address. Up to 80 printable characters.
Fax Number	Optional. The contact's fax number. Up to 80 printable characters.

3 Click **OK**, to save and close the contact, or click **Cancel** to close the window without saving the changes.

5.5 License Manager

Craft The License Manager is not applicable to the Local CRAFT Utility.

This section includes:

- "The License Manager" on page 149
- "Adding Licenses" on page 151
- "Activating Existing Licenses" on page 151
- "Rescue License" on page 151
- "Displaying Licensing Information" on page 151

5.5.1 The License Manager

The License Manager displays information about valid licenses for managing different device types, summary details on the currently managed device types, and server information included in the license.

To access the License Manager window:

Select *Administration* > *License Manager* from the main menu or the Navigation Pane.

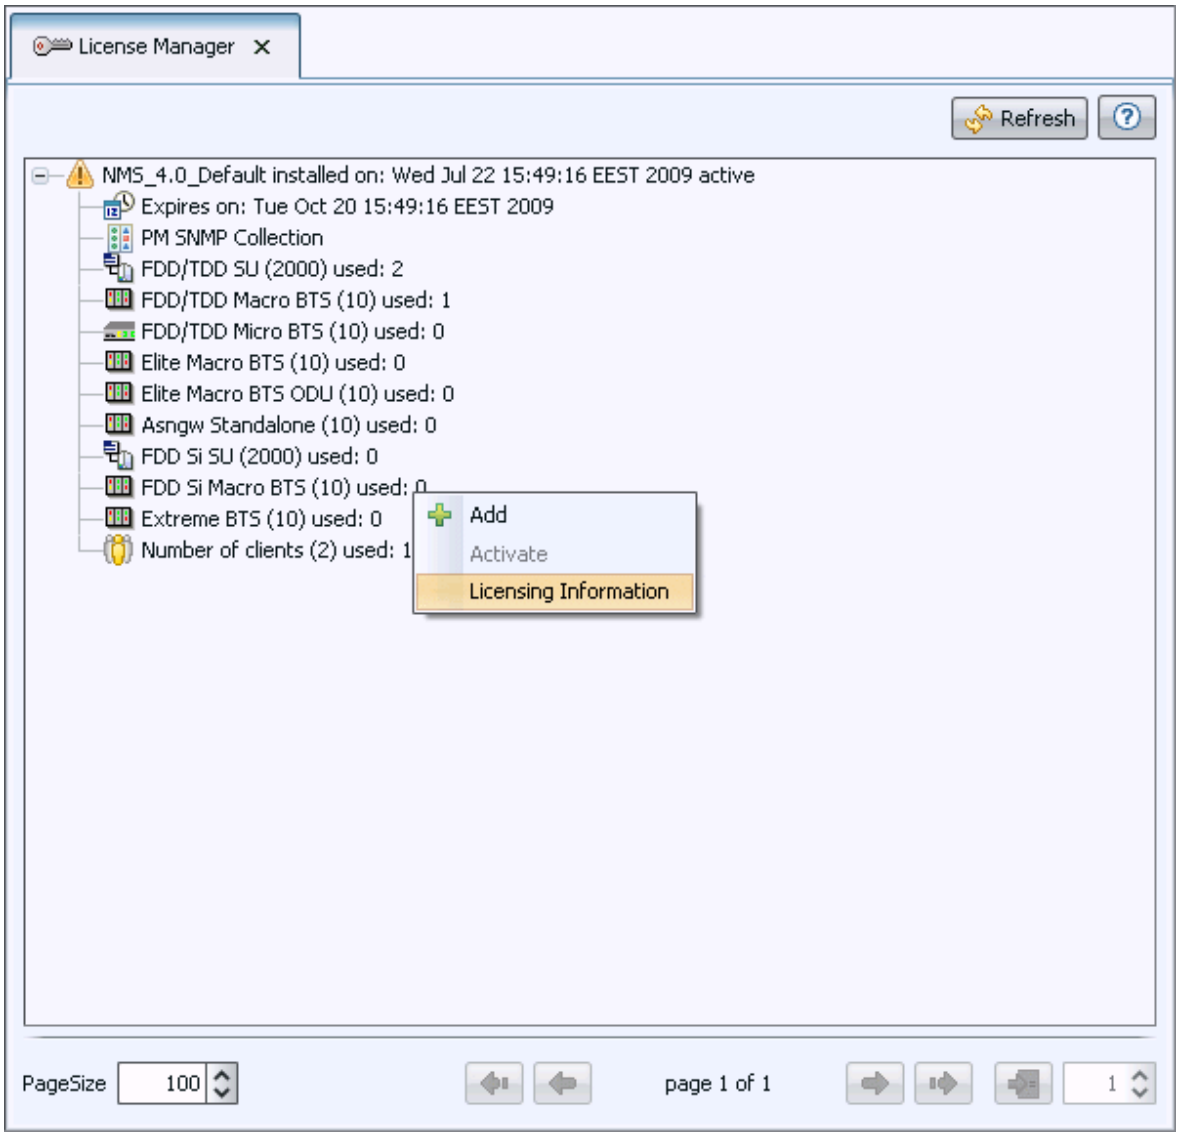
License Manager
Refresh
NMS_4.0_Default installed on: Wed Jul 22 15:49:16 EEST 2009 active
Expires on: Tue Oct 20 15:49:16 EEST 2009
PM SNMP Collection
FDD/TDD SU (2000) used: 2
FDD/TDD Macro BTS (10) used: 1
FDD/TDD Micro BTS (10) used: 0
Elite Macro BTS (10) used: 0
Elite Macro BTS ODU (10) used: 0
Asngw Standalone (10) used: 0
FDD Si SU (2000) used: 0
FDD Si Macro BTS (10) used: 0
Extreme BTS (10) used: 0
Number of clients (2) used: 1
Add
Activate
Licensing Information
PageSize
100
page 1 of 1
1

Figure 5-23: License Manager

The License Manager displays the following information for each licensed device type: <Name> (#) used: #

Parameter	Description
Name	The device type.
(#)	The number of licensed devices of the applicable type.
used: #	The number of managed devices. The number increases whenever a new device is discovered.

When the number of discovered devices (Managed Devices) reaches the number of Licensed Devices, additional discovered devices will be ignored.

Unlicensed devices will be marked in Equipment Manager with an exclamation icon.

When considering future expansion plans, the number of licensed devices compared with the number of managed devices of each type, will indicate whether there is a need for an updated license.

5.5.2 Adding Licenses

Before adding a license, make sure that the file obtained from the supplier is available.

To add licenses:

From the right click menu, select **Add** and browse to the location of the license file. Select the file and click **Open**. The new licenses are displayed on the list. Alternatively, save the license file in the */<Management_System>/file system/license* folder. The next time the server will be restarted, the new license will also be added.

5.5.3 Activating Existing Licenses

The new license added to the system needs to be activated in order to enable the system to manage the required devices.

To activate a license:

Right click the required license and select **Activate**.

INFORMATION

Activating a license will deactivate all other licenses.

5.5.4 Rescue License

The NMS comes with a default license called Rescue. This license is activated automatically if there is no other license currently active. It allows the user to login and add a new valid license. This prevents the user from being locked out of the application if the current license expires.

5.5.5 Displaying Licensing Information

To display licensing information:

From the right click menu, select **Licensing Information**. The Server Information window is displayed showing the Server IP and MAC Addresses.

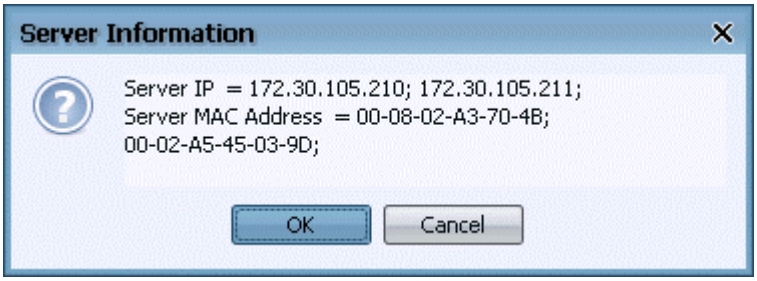

Figure 5-24: Server Information Window

5.6 Report Manager

INFORMATION

The Report Manager is available only if the installed Device Drivers include one or more Device Driver(s) for device families that support this feature.

The Report Manager enables generating different inventory or configuration reports for relevant devices managed by the system.

To access the Report Manager window:

Select *Administration* > *Report Manager* from the main menu or the Navigation Pane.

In the Report Manager, click on the applicable **Run Report** button to generate the required report type.

For certain reports the requested report will be generated by default for all relevant entities.

For most reports a **Parameter** selection window will open, enabling selection of the entities for which the requested report will be generated. The default selection for all reports is "All". Click **OK** to generate the report for the selected entities. The report will be displayed in a new Windows Internet Explorer window/tab using BIRT (Business Intelligence and Reporting Tools) Report Viewer.

The following General Inventory Reports are applicable for all product families supporting the feature:

- Equipments Inventory: Provides general details (BTS Model, BTS Name, BTS Number, BTS Location, Management IP Address) and inventory count details for hardware entities (such as GPS, Antenna and other components if applicable) available for each of the selected devices. In addition, the report includes a summary count of all relevant enties.
- Detailed Equipments Inventory: Provides general details (BTS Model, BTS Name, BTS Number, BTS Location, Management IP Address) and main hardware (Serial Number, Hardware Version, Hardware Revision) and software (Operational Software Version, Boot Software Version) details for each of the relevant entities.

In addition, the Report Generator enables generating specific reports for each of the relevant device families according to the installed Device Drivers.

5.7 Map Refresh Rate

The NMS can be configured to generate a file containing information about the network elements' locations. This file uses the Keyhole Markup Language (*.kml*) format, which is compatible with Google Earth, allowing it to display the network's topography.

To open the Map Refresh Rate window:

Select *Administration* > Map Refresh Rate from the main menu. The Map Refresh Rate window opens.

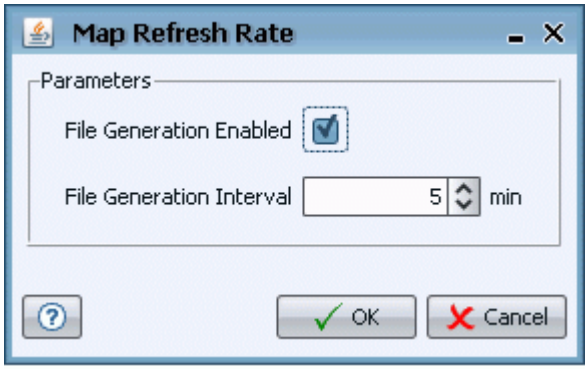

Figure 5-25: Map Refresh Rate

The following parameters can be configured:

Parameter	Description
File Generation Enabled	Check to generate the .kml file, and uncheck if you do not want the file to be generated. The feature is enabled by default. If you don't plan to use Google Earth you may disable it.
File Generation Interval	Enter how often (in minutes) the .kml file is updated. The default value is 5 minutes.

5.8 Export Site Coordinates

The Export Site Coordinates function enables generating a backup file that contains the location details defined in the Network Element Editor for each device that does not support GPS (see Section 2.1.4).

To open the Export Site Coordinates function:

Select *Administration* > *Export Site Coordinates* from the main menu. The Export Site Coordinates window opens.

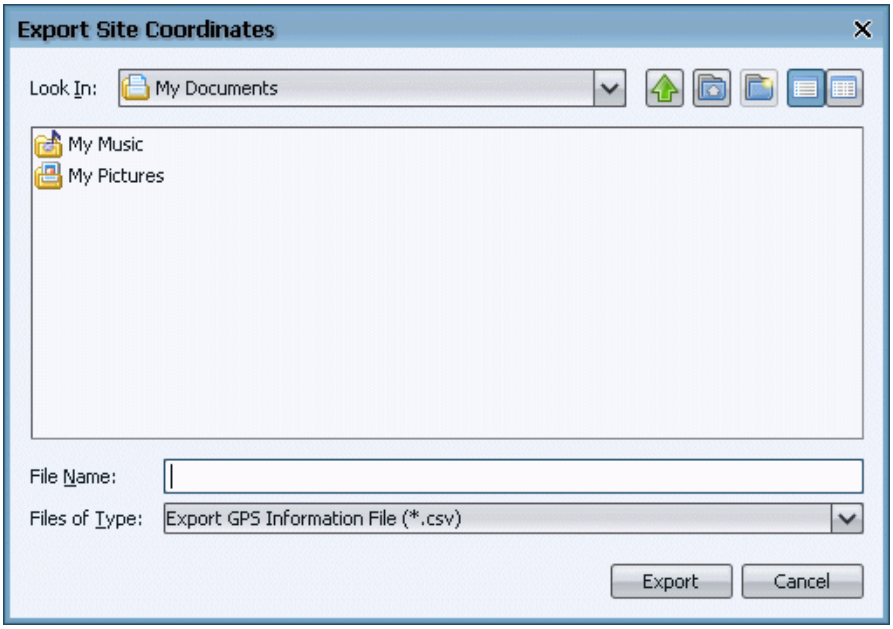

Figure 5-26: Export Site Coordinates

To export a file with the current sites coordinates information, define the file name, select the file's location and click on the **Export** button.

5.9 Import Site Coordinates

The Import Site Coordinates function enables importing a previously generated backup file that contains the location details for devices that do not support GPS (see Section 2.1.4).

To open the Import Site Coordinates function:

Select *Administration* > *Import Site Coordinates* from the main menu. The Import Site Coordinates window opens.

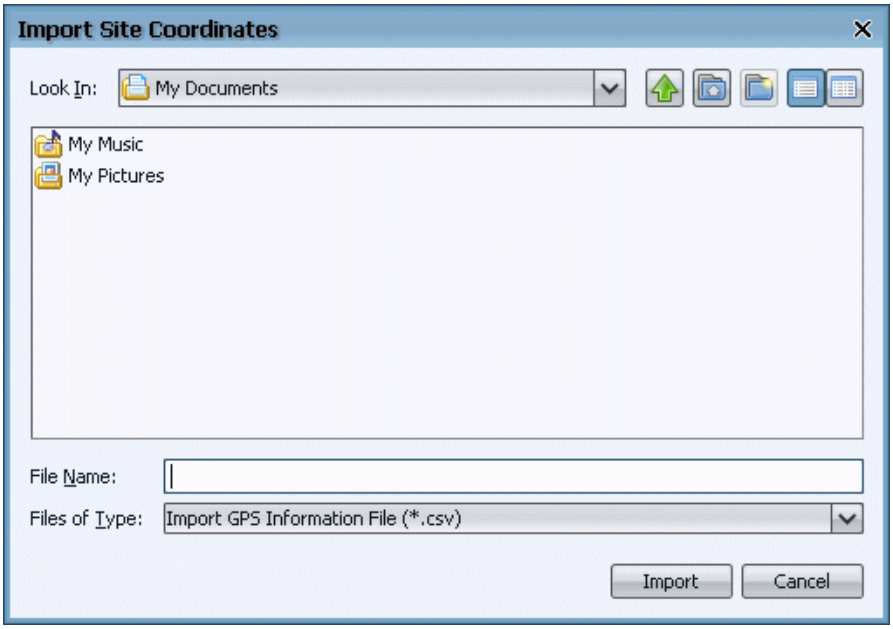

Figure 5-27: Import Site Coordinates

To import a file with sites coordinates information, select the required file and click on the **Import** button. The location details of all discovered devices in the database that do not use GPS and are included in the imported file will be updated (if applicable) with information from the file.

Chapter 6 - Security Management

In This Chapter:

- "Overview" on page 158
- "Audit Log Manager" on page 159
- "User Manager" on page 164
- "User Profile Manager" on page 171
- "User Session Monitor" on page 177 - not applicable to the Local CRAFT Utility
- "Password Policy" on page 179
- "External Entities Mapping" on page 182
- "User Domain Manager" on page 185

6.1 Overview

In the Security Management menu you can define and manage user permissions and access rights for users of the management system. The access level you assign to users determines the management functions that the user can access. The menu provides access to the following windows:

- *Audit Log Manager* - Enables to view recorded events and export the logged data to an external Comma Separated Value (CSV) file. Refer to Section 6.2.
- *User Manager* - Enables to create and manage users, and associate information with each user. Refer to Section 6.3.
- *User Profile Manager* - Enables to create and manage user profiles, which contain the default access right definitions for all users assigned to that user group. Refer to Section 6.4.
- *User Session Monitor* (not applicable to the Local CRAFT Utility) - Enables to display information on the currently logged in users and to send messages to a logged in user. Refer to Section 6.5.
- Password Policy - Enables to set policies for user passwords. These policies govern the security measures applied to user's attempts to log in.

INFORMATION

All security changes will be visible to the user only after logging out and logging back into the system.

6.2 Audit Log Manager

The management system provides a logging service that records messages to the database upon the occurrence of pre-specified events. These messages can include event date and time, event type, error messages and other important information according to the recorded event. The Audit Log Manager enables to view recorded events and export the logged data to an external Comma Separated Value (CSV) file.

To open the Audit Log Manager:

Select *Security Management > Audit Logs* from the main menu or the Navigation Pane. The Audit Log Manager displays a list of all logged records.

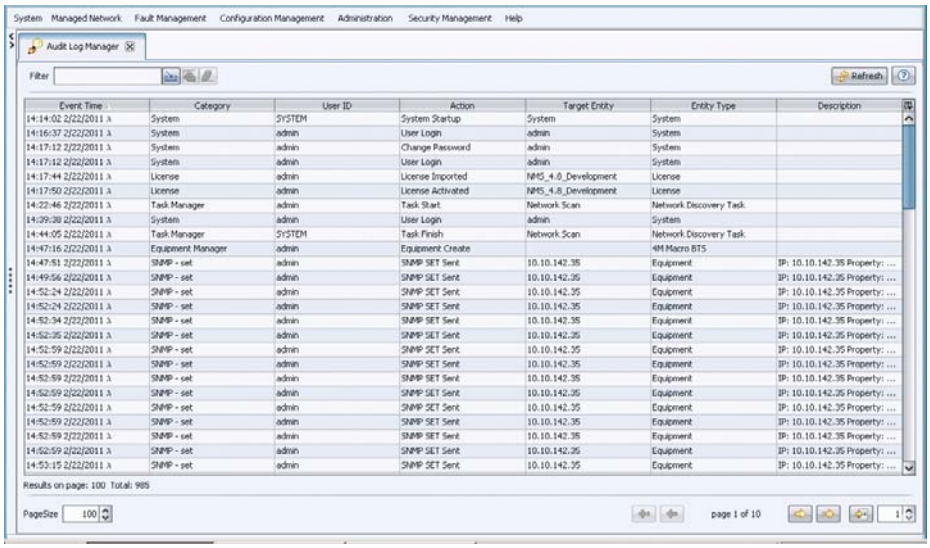

Figure 6-1: Audit Log Manager

For each audit record, the following information is displayed:

- Event Time - The date and time of the event

- Category - The category of the event:
  - Equipment Manager
  - Event Filter Manager
  - Event Template Manager
  - Licence
  - NBI Manager
  - NBI Policy Manager
  - Script Command Manager
  - Security
  - System
  - Task Manager
  - User Manager
  - User Profile Manager
- User ID - The user who initiated the action. System User ID indicates a system initiated action.

- The action performed:
  - Change Password
  - Entity Change
  - Entity Create
  - Entity Delete
  - Equipment Create
  - Equipment Delete
  - Licence Activated
  - License Expired
  - License Imported
  - System Shutdown
  - System Startup
  - Task Abort
  - Task Create
  - Task Delete
  - Task Finish
  - Task Start
  - Task Schedule
  - Task Unschedule
  - Task Update
  - User Login
  - User Logout

- Target Entity - The element which is the target of an action, (for example: the "entity delete" action that for which the target is a user named "aa"):
  - Event History DAP
  - User of any type
  - Audit Log DAP
  - Task Names
  - License Names
  - Filter Names
  - Device Names
- Entity Type - The entity associated with the event.
  - Database Aging Task
  - Event Filter
  - Event Template
  - License
  - NBI
  - NBI Policy
  - Network Discovery Task
  - Performance Collection Task
  - Script Command
  - Security
  - Range Discovery Task
  - System
  - User
  - User Profile
  - Additional entities according to the installed Device Driver(s)

To export the information of selected audit records:

Right click the desired entry and select **Export**. In the window that opens, browse to the desired location, enter a file name and type, and click **Save**.

6.3 User Manager

The User Manager enables to create and manage users, and associate information to them such as passwords, profile membership and contact information. You can filter the display to show a select subset of users.

6.3.1 The User Manager Window

The User Manager displays the User Name, Display name, and status (Active or Suspended, Password Expired and Activation Waiting) for each user.

To access the User Manager window:

Select *Security Management > User Manager.* The User Manager window is displayed.

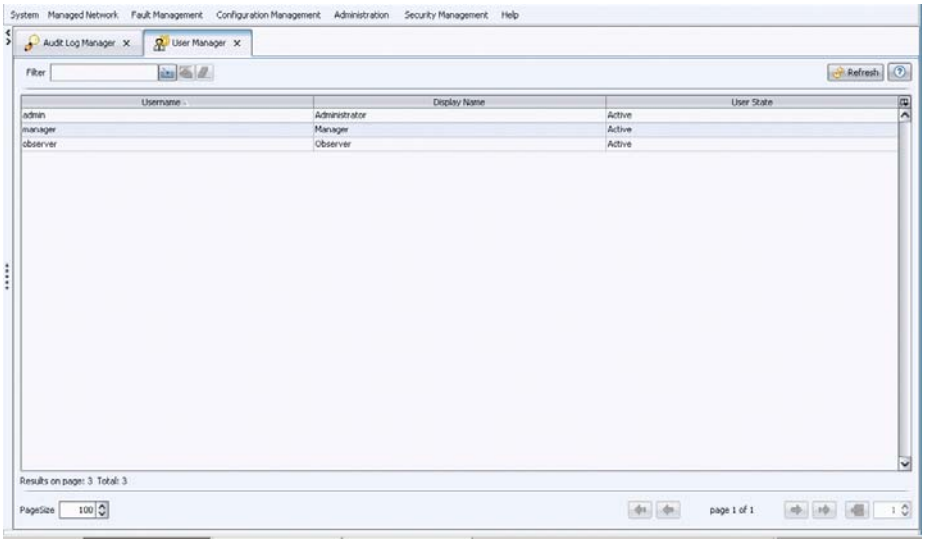

Figure 6-2: User Manager

To reset a user's password:

1. Right click a user entry from the list.
2. From the context menu, select **Reset Password**. The Reset Password window is displayed.

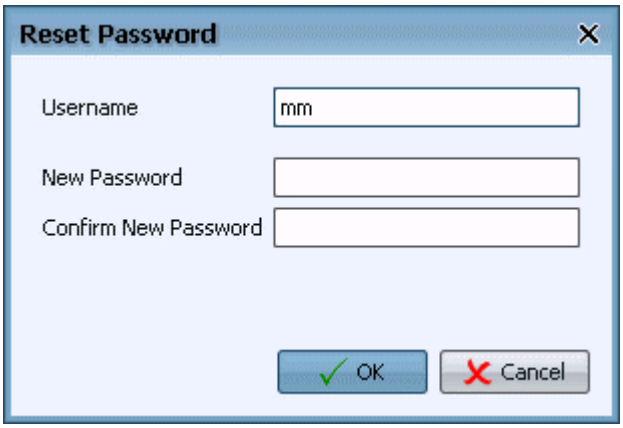

Figure 6-3: Reset Password Window

3 Enter and confirm the new password.

6.3.2 Adding or Modifying a User

You can add new users or edit existing ones by modifying their properties.

You can set the User Profiles to associate with a user (see Section 6.4 for information about how to create the profiles). As you grant permissions to defined profiles, you can grant or deny users access to certain functions based on their profile associations.

To create a new user:

1 From the right click menu, select **New** to display the User Editor.

2 Enter the appropriate information for the *General* section. Most of the information associated with a user is optional. However, the Username entries required.

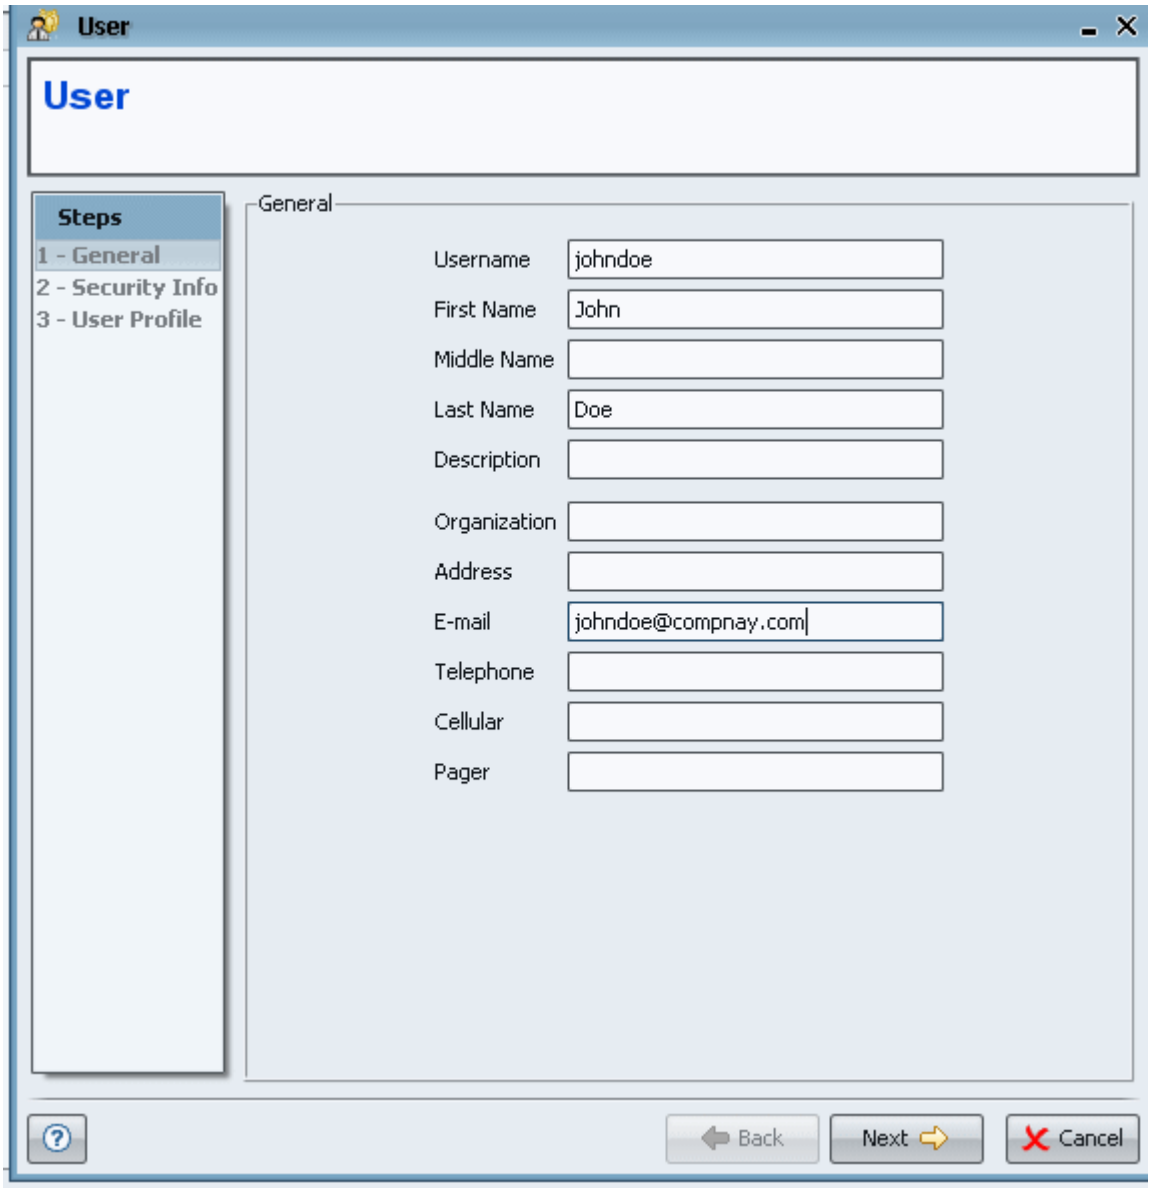

Figure 6-4: User Editor - General

INFORMATION

The Username must be unique; if it matches an existing Username, the application generates an error. The Username you enter here is displayed in the User Manager window and in all relevant reports.

3 Click **Next** and enter the required information for the *Security Info* section:

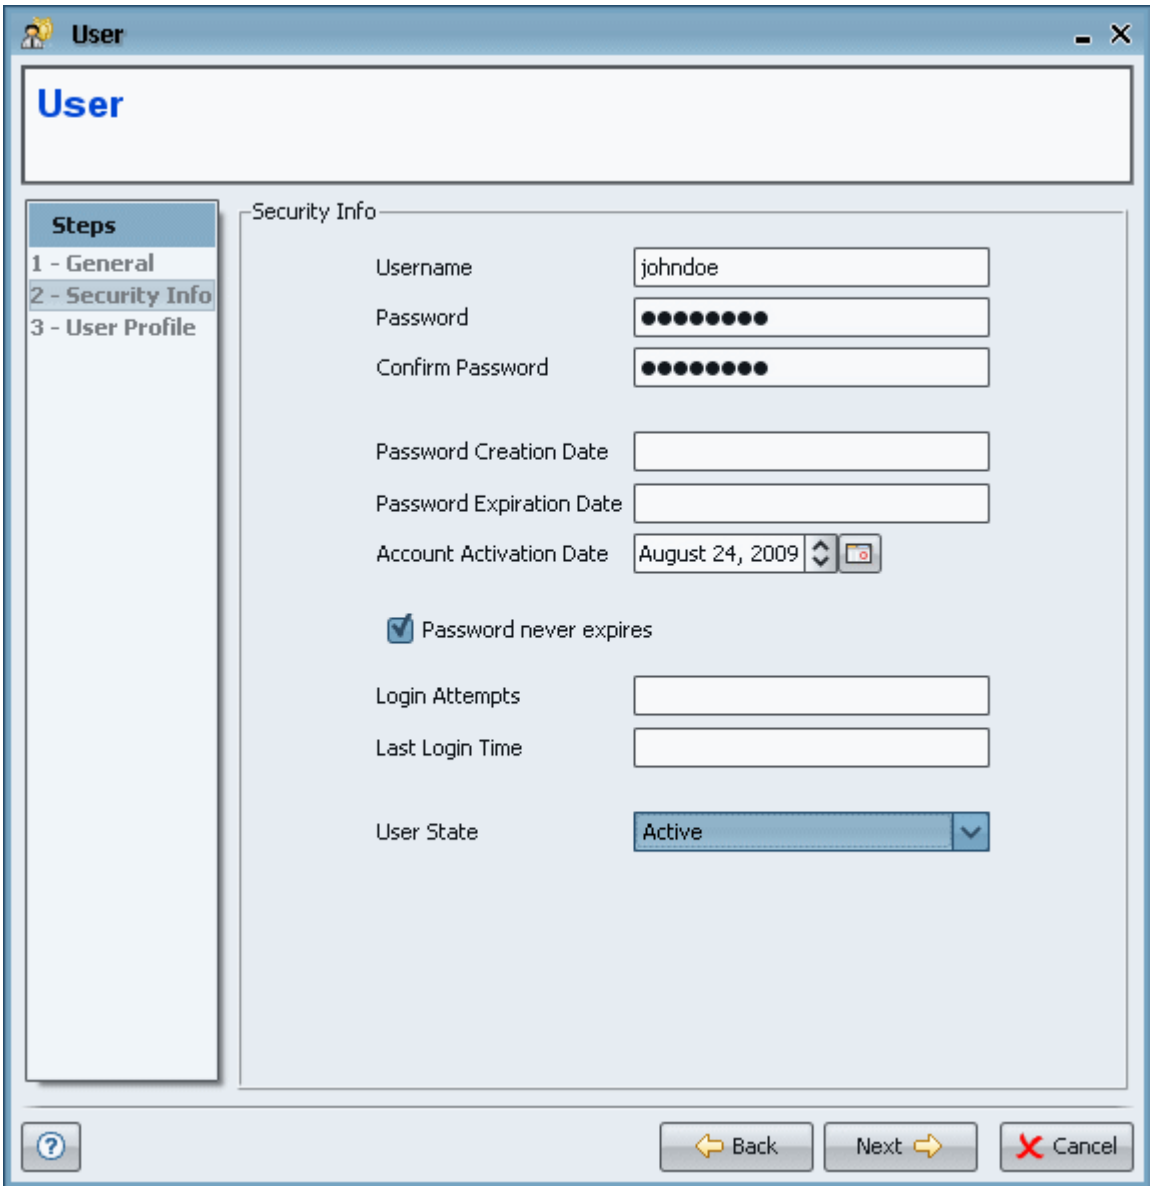

Figure 6-5: User - Security Info

Parameter	Description
User Name	Read-only. Taken from the previous dialog box.
Password	Password is mandatory. The password must adhere to the Password Policy.
Confirm Password	Re-enter the password.
Password Creation Date	Date you created the password. The date is added automatically. The countdown for the password expiration age begins from this date.

Parameter	Description
Password Expiration Date	Specify a date when the password will expire. The default is three months.
Account Activation Date	The date when this account becomes effective. This field lets you create accounts in advance. The accounts remain with Activation Waiting status until the first login of the user after the Effective Date. Specify an Effective Date by entering the date directly in the text field, in the proper format (by default: month/day/year). You can also click the **Calendar** button and select a date from the calendar graphic display.
Password Never Expires	When selected, the user's password will not expire, regardless of the password policy.
Login Attempts	Number of attempts to login until the system is locked
Last Login Time	Time that the user last logged in
User State	Active or Activation Waiting

4 Click **Next** and set the user profile in the *User Profile* section. Use the controls in this section to assign profiles to or remove assignments from the current user:

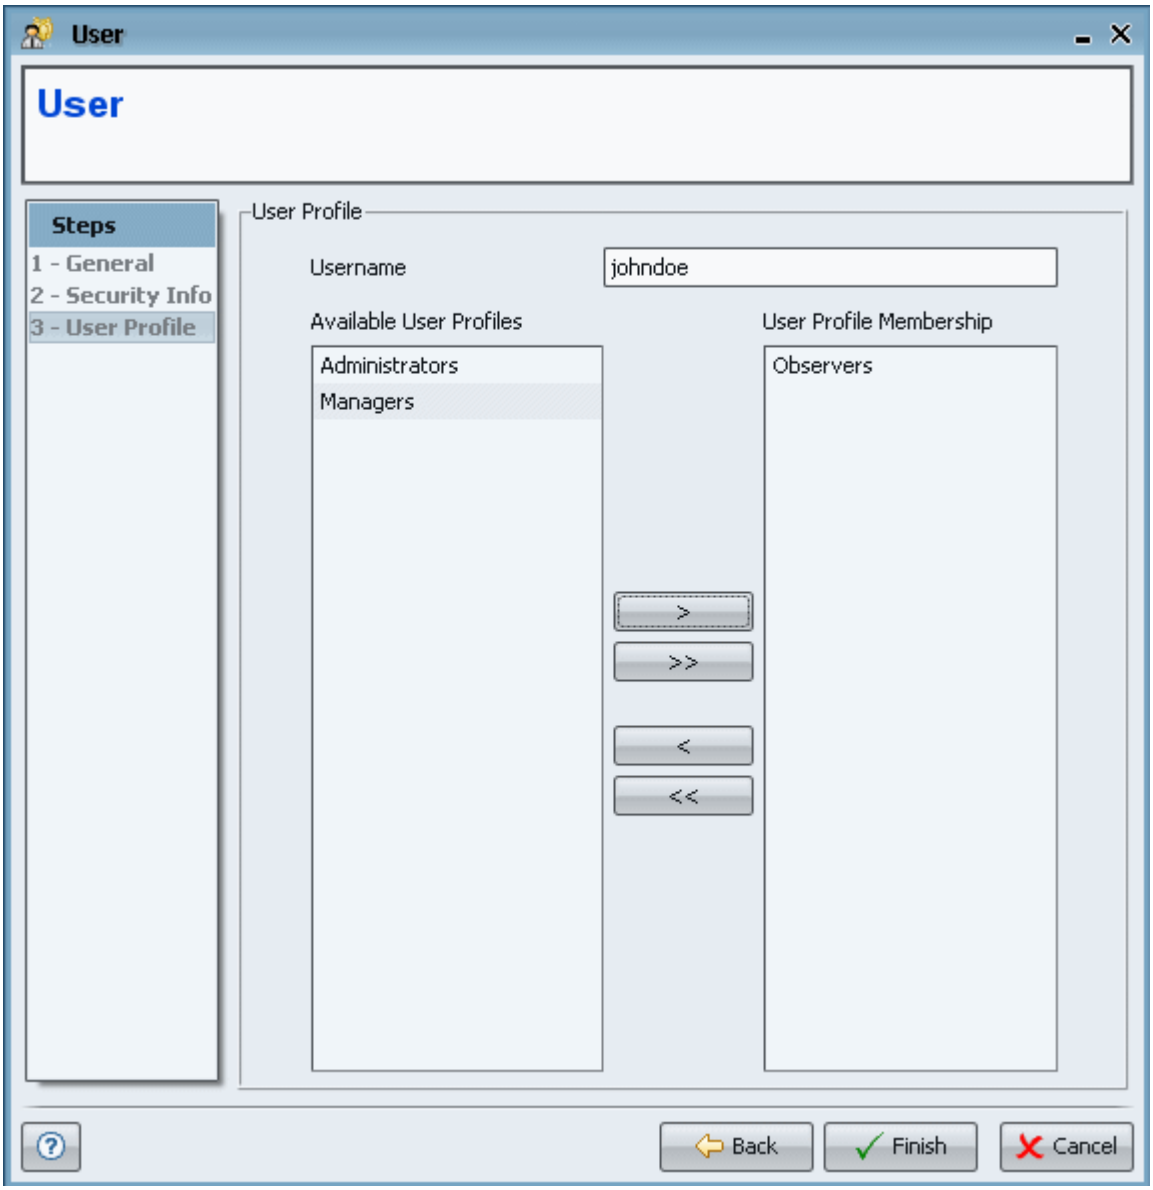

Figure 6-6: User - User Profile

To	Do This:
Assign or remove one profile to the user	1 Select a profile from the left pane (*Available User Profiles*) 2 Click the right-arrow (**>**) button to move the profile into the right pane (Profile Membership), or left-arrow (<) to remove.
Assign or remove multiple profiles	1 Ctrl+click to select multiple items or click on one item and Shift-click on another to select a range of consecutive items 2 Click the right-arrow (**>**) or left-arrow (<).
Assign or remove all profiles to the user	Click the double-right-arrow (>>) or double-left-arrow (<<) button

Click **Finish**. The new user is added to the list.

To edit an existing user entry:

1. Right-click an entry from the list and select Edit. A three-tab User Editor appears, open to the General tab.
2. Modify the information as required in the *General*, *Security Info* and *User Profile* tabs. For more information, see the steps in "To create a new user:".
3. Click **OK** to apply the changes.
4. Click **Delete** to remove the entry.

In addition to these entries, you may want to associate the user with a Profile. This confers a predetermined set of permissions to the user. See Section 6.4 for more information.

6.4 User Profile Manager

The User Profile Manager lets you create user profiles, edit them or delete profiles. You can associate individual users with profiles and grant permissions to users based on their association with a profile.

Only profiles that have no users can be deleted. Default profiles and users cannot be deleted or modified.

By default, several user profiles with one user defined in each profile are provided when you install your application. The following are the defaults:

- Administrators (admin)
- Observers
- Managers

To access the User Profile Manager

Select *Security Management* > *User Profile Manager* from the main menu or the Navigation Pane. The User Manager window is displayed, showing the profile names and how many users share those profiles.

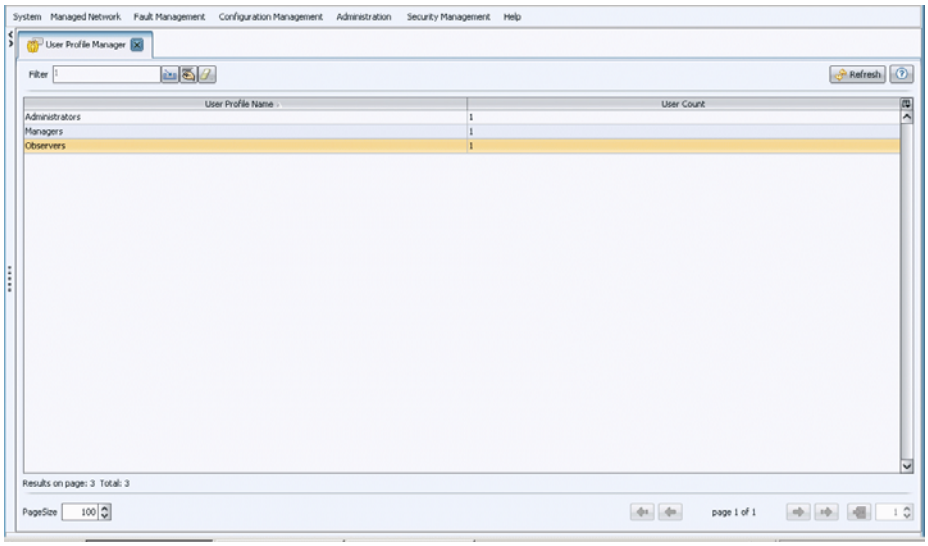

Figure 6-7: User Profile Manager

To add a new profile:

1 In the User Profile Manager, right click and select **New**. A User Profile editor window is displayed.

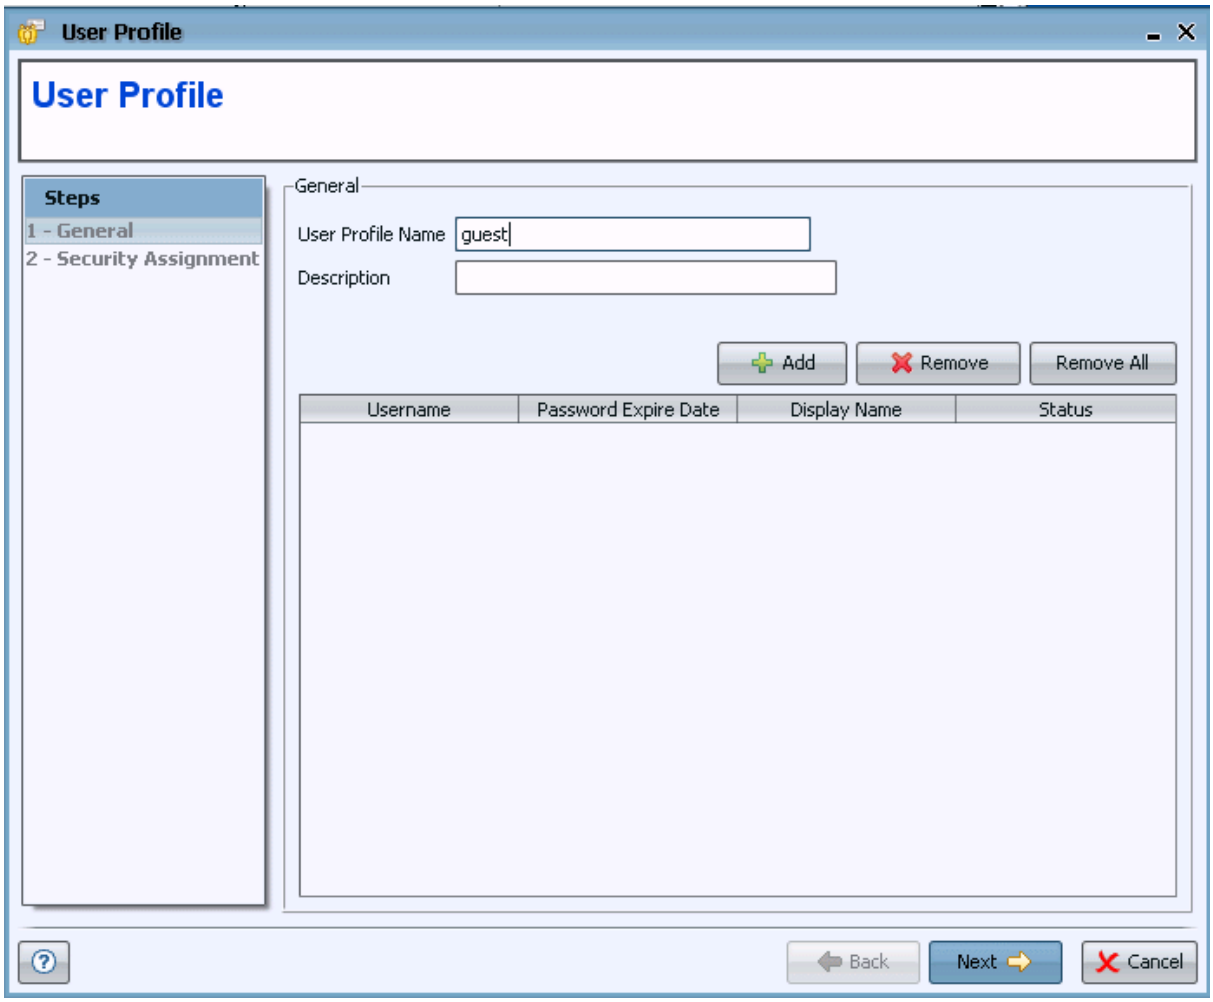

Figure 6-8: User Profile Editor

2 Enter a unique name for the new profile and optionally add a description.

3 If you want to assign that new profile to existing user(s), click **Add**; The User Selector window is displayed. Select the user(s) to which to assign the profile and click **Select**.

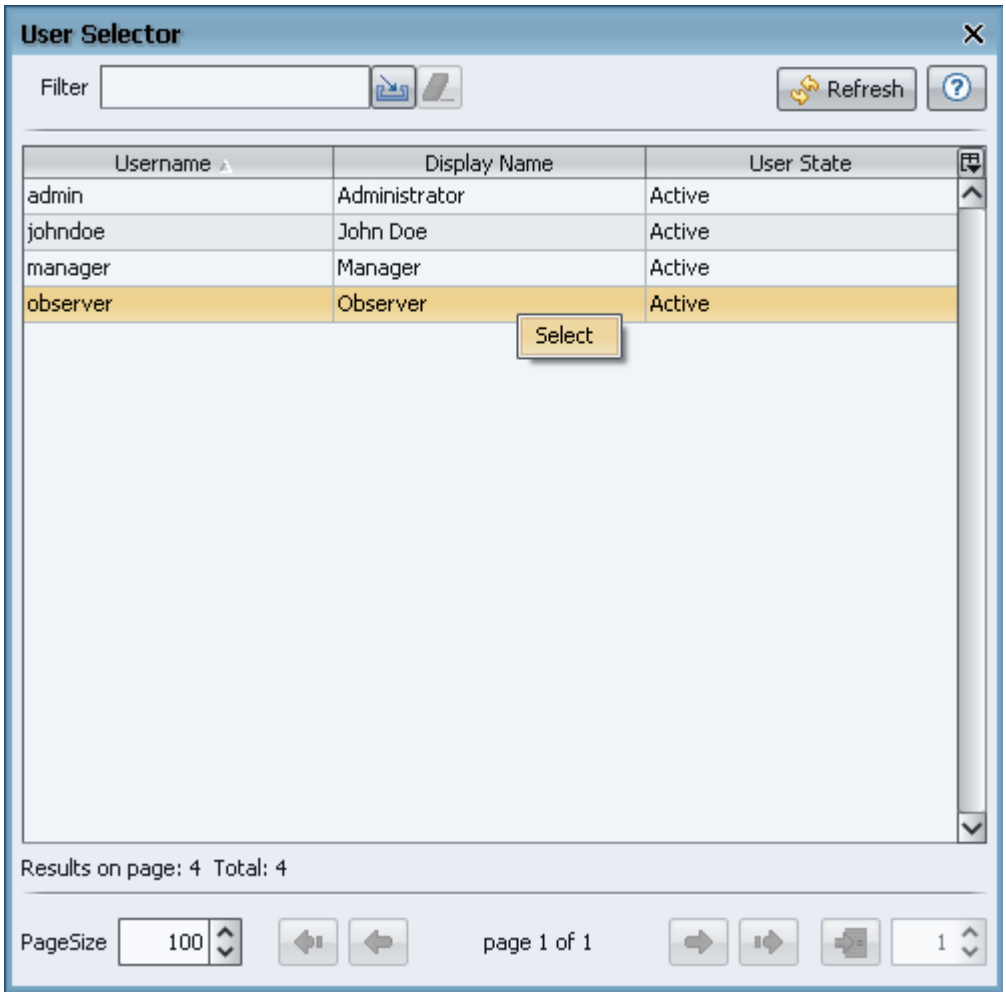

Figure 6-9: User Selector

4 Click **Next;** The Security Assignment window is displayed.

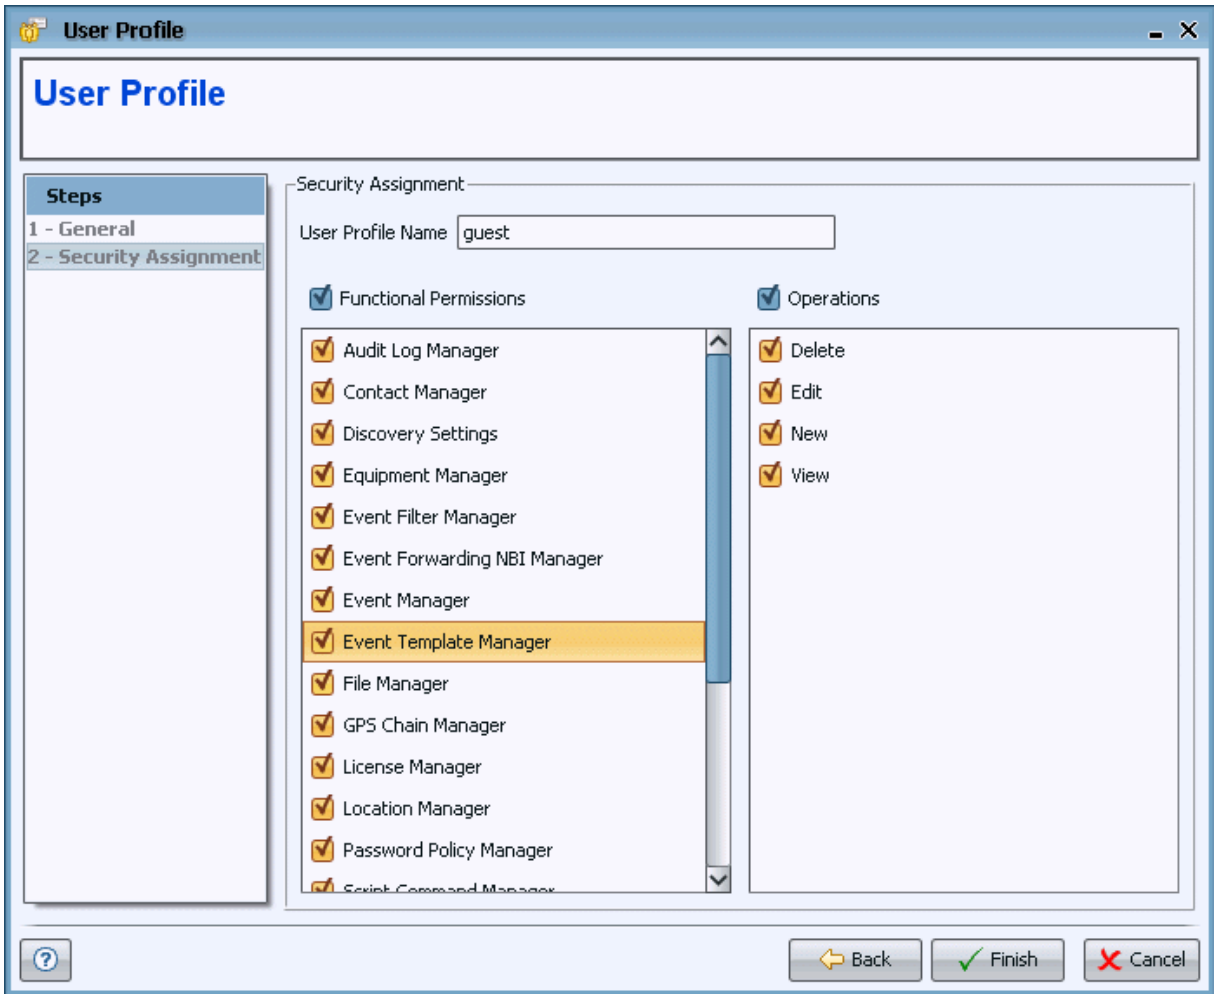

Figure 6-10: User Profile - Security Assignment

5 Grant permissions to the profile by selecting a predefined function check-box and then possible operations (edit, delete, configure, and so on) that each profile or user can perform when exercising the function. To select all, check the Functional Permissions and/or Operations check-boxes.

6 Click **Finish** to save your settings.

To modify an existing profile:

Right click the profile in the Profile Manager, and select **Edit**; An editor window is displayed, with two tabs.

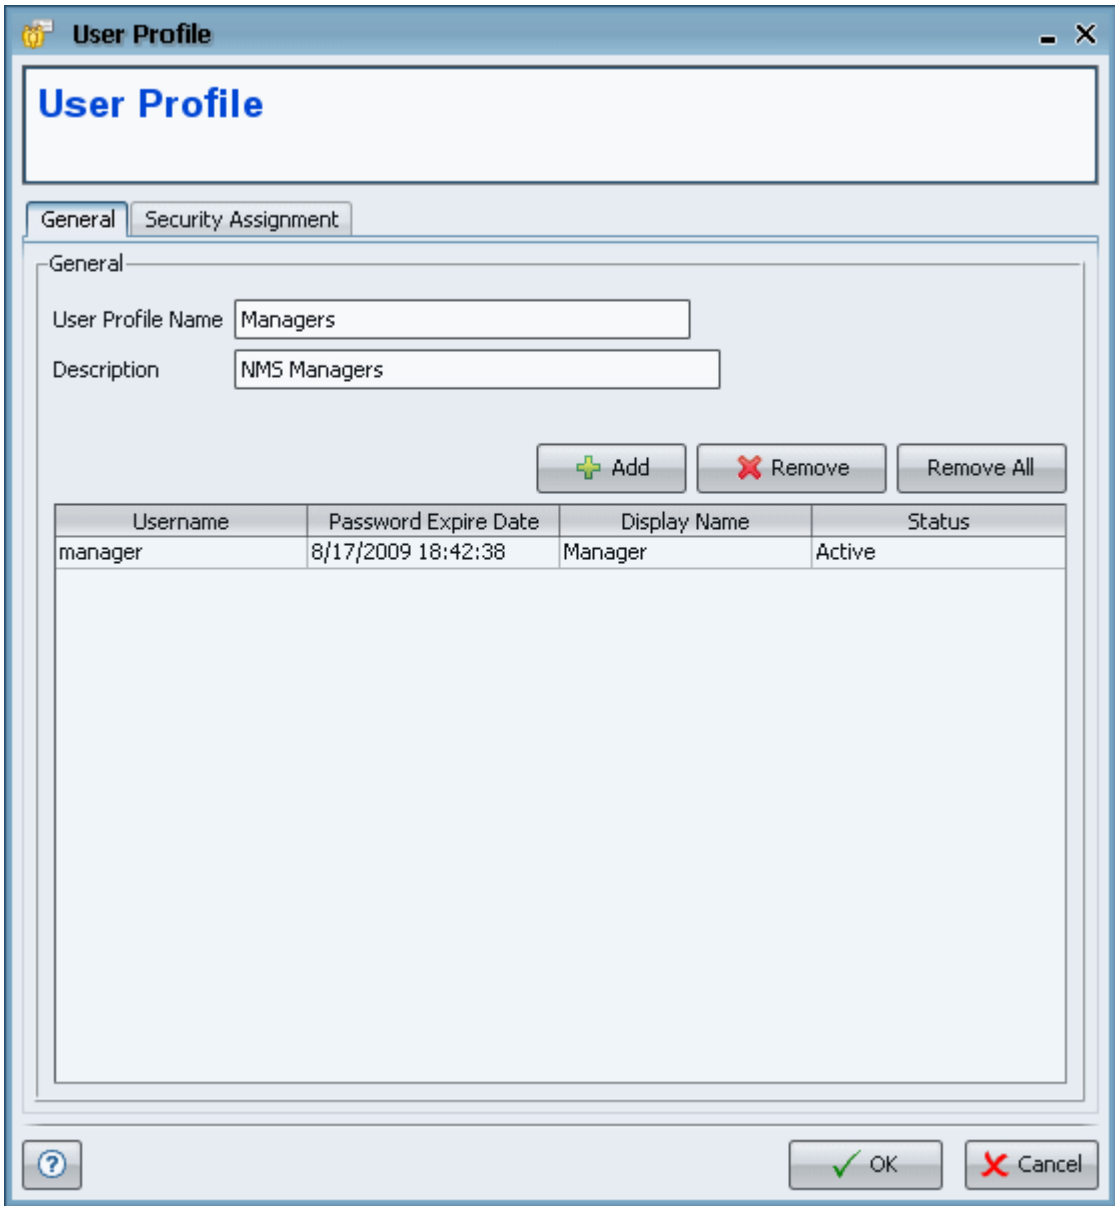

Figure 6-11: User Profile Editor - General Tab

7 In the *General* tab, enter or modify the description of the profile. The name is read-only.

8 If you want to assign that profile to existing user(s), click **Add**; The User Selector window is displayed. Select the user(s) to which to assign the profile and click **Select**. To remove users from the profile click **Remove** or **Remove All**.

9 In the *Security Assignment* tab, set the permissions to the profile: Grant permissions by selecting a predefined function and then possible operations (delete, edit, configure, and so on) that each profile or user can perform when exercising the function. To select all, check the Functional Permissions and/or Operations check-boxes.

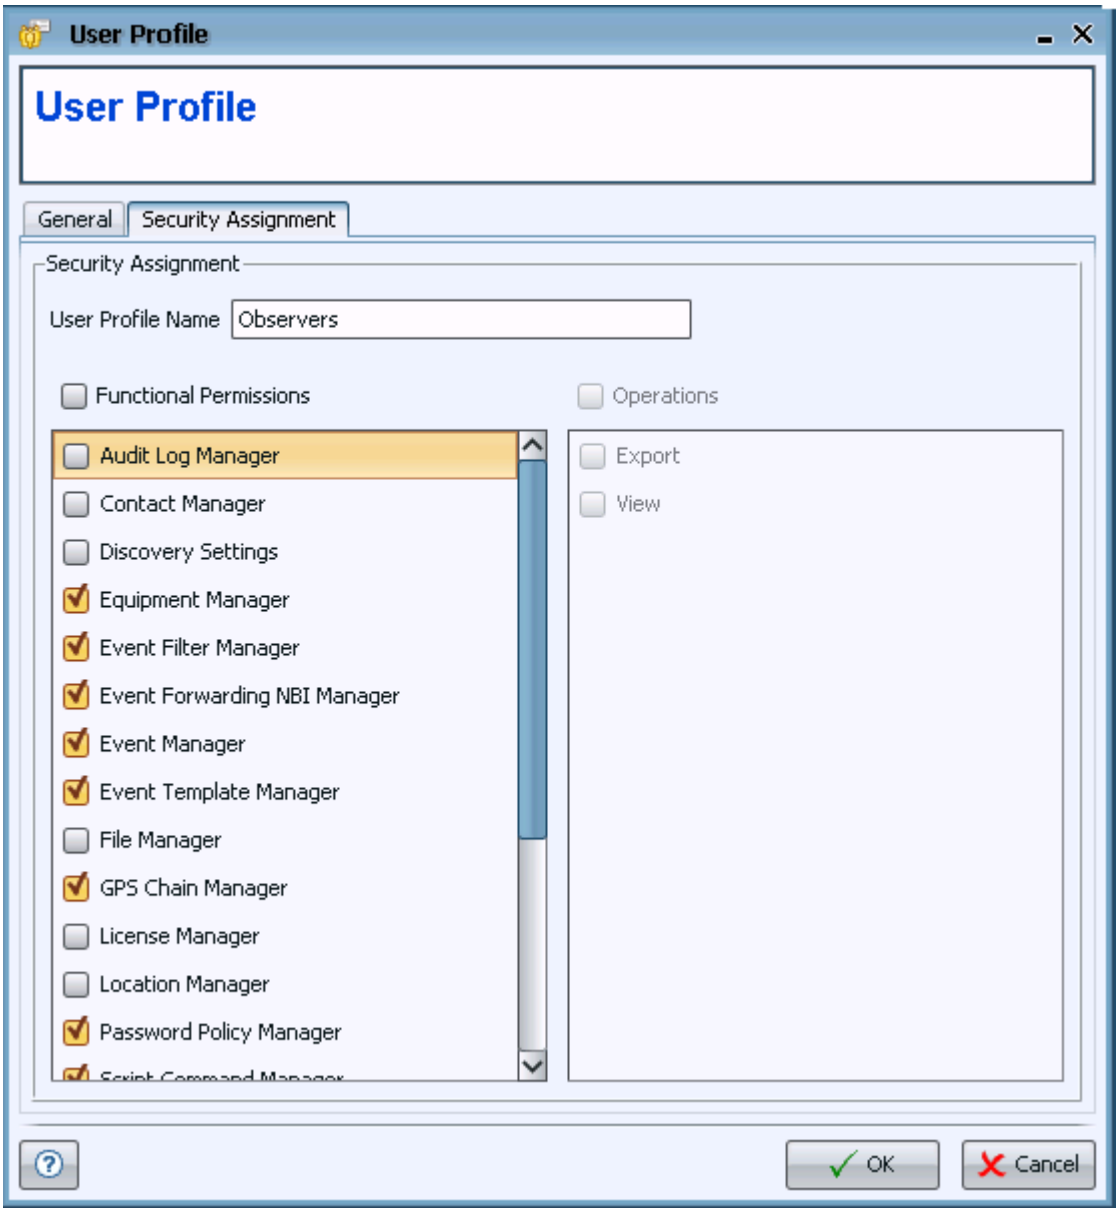

Figure 6-12: User Profile Editor - Security Assignment Tab

10 Click **OK** to save your settings.

To delete a profile:

Right click the profile to remove and select **Delete**. Default profiles cannot be deleted.

6.5 User Session Monitor

Craft The User Session Monitor is not applicable to the Local CRAFT Utility.

The User Session Monitor window displays information on the currently logged in users and enables sending messages to a logged in user. Users with Administrator rights can terminate the application of other users.

To open the User Monitor:

1 Select *Security Management > User Session Monitor* from main menu or the Navigation Pane. The User Session Monitor displays a list the *Current Logged In Users* with the User Name, IP addresses with correlation to server and client IPs, and login time for each of the currently logged in users.

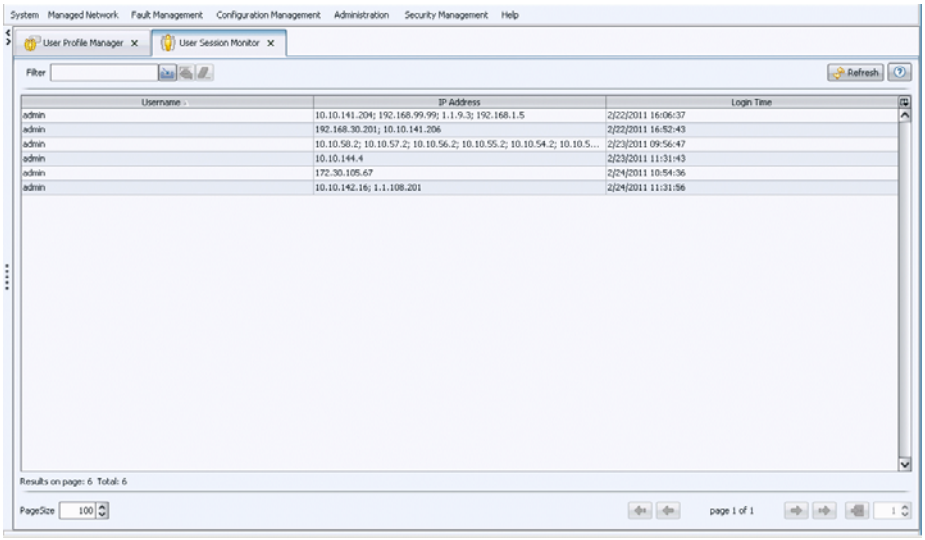

Figure 6-13: User Session Monitor Window

2 Use the following options available in the User Session Monitor right click menu:

Button	Description
Send Message	Select after right clicking one of the logged in users to open the Sending Message window, enabling you to send a text message to the selected user.

Button	Description
Kill	Select to terminate the application of the selected user(s). Only an Administrator can perform this operation to terminate applications of users with lower permission levels.

6.6 Password Policy

The Password Policy editor enables to set policies for user passwords, such as required length, required characters, expiration policy.

To open the Password Policy Editor:

Select *Security Management* > *Password Policy* from the main menu. The Password Policy Editor opens.

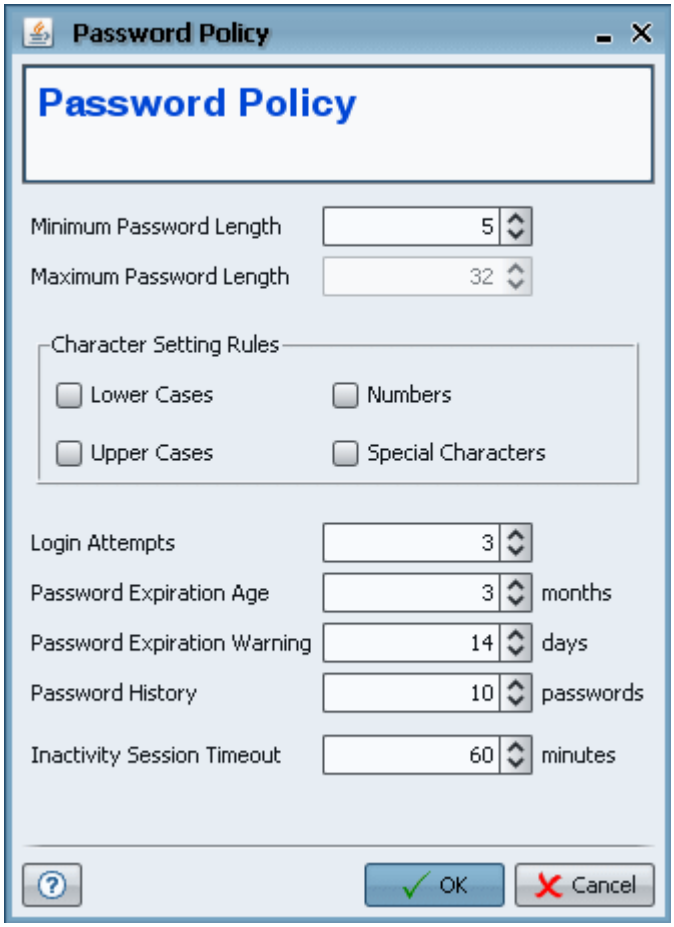

Figure 6-14: Password Policy Editor

The Password Policy Editor includes the following parameters:

Parameter	Description
Minimum Password Length	Sets the minimum length of accepted passwords. Any password with less than the set minimum will be rejected. Value range: 1 - 32.
Maximum Password Length	The maximum length allowed for a password. The maximum length is pre-set to 32 characters and cannot be changed.
Character Setting Rules	
Lower Cases	When checked, a new password will be required to include at least one lower case character.
Upper Cases	When checked, a new password will be required to include at least one upper case character.
Numbers	When checked, a new password will be required to include at least one digit.
Special Characters	When checked, a new password will be required to include at least one special character, e.g. <, >, /, *, &, ^, $, #, !.
Login and Expiration	
Login Attempts	The number of allowed erroneous login attempts before the application is closed and the user is blocked. This parameter can be configured for a selected user from the User Manager. In case of contradiction, the parameter set in the User Manager overrides the general policy for the specific user. Value range: 3 - 20
Password Expiration Age	The time in months before the user is required to change the password. This parameter can be configured for a selected user from the User Manager. In case of contradiction, the parameter set in the User Manager overrides the general policy for the specific user. From the User Manager you can set the password expiration policy for a selected user to never expire. Value range: 1 - 12

Parameter	Description
Password Expiration Warning	The number of days before a user password expires during which a message requiring to change the password is displayed. The message is displayed at every login until the password expiration age is reached. Value range: 1 - 14
Password History	The number of old passwords for the system to keep a record. The user will not be able to repeat a used password if it was used in a cycle within the set range. Value range: 0 - 10
Inactivity Session Timeout Not applicable to the Local CRAFT Utility	The number of minutes with no user activity, after which the user is logged out. The user will be required to log in again to continue working. Value range: 0 - 100

INFORMATION

All password policy parameters except *Inactivity Session Timeout* do not apply to external users.

6.7 External Entities Mapping

If you are using an LDAP server for user account management, you can map existing LDAP entities to specific user profiles defined in the NMS. For this purpose, you must set up a connection between the NMS server and the external LDAP server. See Appendix C for details on how to do this.

INFORMATION

The external LDAP connection is disabled by default. If you want to enable it, follow these steps:

1 Go to *<NMS_Installation_Path>\jboss\server\nms\deploy\bwanms.sar\conf*

2 Edit the *appserver.properties* file

3 Look for the *com.bwanms.backend.security.externalLDAPEnabled* entry

4 Change its value from *false* to *true*

Restart the NMS server

To open External Entities Mapping:

Select *Security Management* > *External Entities Mapping* from the main menu. The External Entities Mapping window opens.

INFORMATION

The External Entities Mapping is available only if external LDAP connection is enabled, and only to users with "New" operations enabled for the "User Manager" functional permission. For more information about setting functional permissions, see "User Profile Manager" on page 171.

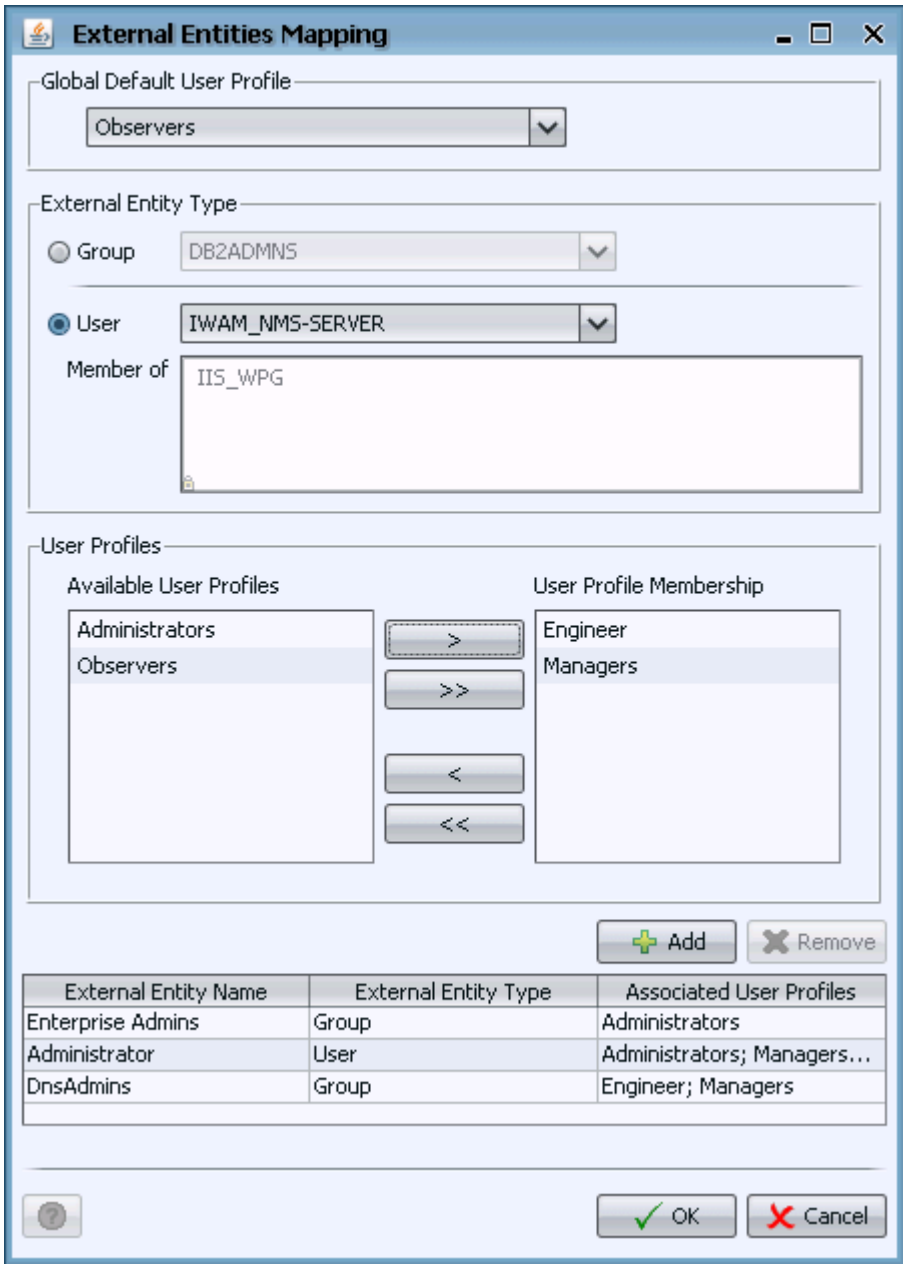

Figure 6-15: External Entities Mapping

Parameter	Description
Global Default User Profile	Use this drop box to allocate a default user profile to entities defined in the LDAP server that are not explicitly mapped to any user profile.

Parameter	Description
External Entity Type	Select an entity from the LDAP server that you wish to map to one or multiple user profiles. You can either choose: ■ A group of users, or ■ A specific user (in which case the group(s) it belongs to will be displayed below, in the *Member of* text box).
User Profiles	Select one or more user profiles you wish to map to the external entity. ■ Use the > button to map individual user profiles that are available ■ Use the >> button to map all the user profiles that are available ■ Use the < button to unmap individual user profiles that have been previously mapped ■ Use the << button to unmap all the user profiles that have been previously mapped

When you are done defining a mapping rule, click **Add** to confirm it. The rule will be visible in the mapping table.

To remove an active rule, select it from the mapping table and click **Remove**.

6.8 User Domain Manager

The User Domain Manager is used to allocate location visibility domains to each user that is not an administrator (administrators are always able to see all network elements in every location). A domain is a group of Network Elements that are located in one or multiple areas. Therefore, domains are defined by selecting specific locations that have been previously defined in the Location Manager.

INFORMATION

The User Domain Manager is enabled by default. If you want to disable it, follow these steps:

1 Go to *<NMS_Installation_Path>\jboss\server\nms\deploy\bwanms.sar\conf*

2 Edit the *appserver.properties* file

3 Look for the *com.bwanms.backend.domainmanagement.disable* entry

4 Change its value from *false* to *true*

Restart the NMS server

By default, users are not assigned to any domain, thus being able to see all network elements. A user who is assigned to a domain, can only view and manage the network elements and related objects inside that domain or the ones that have no domain associated. The following features are impacted:

- Equipment Manager
  - » Only equipment in the current users's domain and equipment not associated to any domain is visible
  - » All counters are computed according to the visible equipment
  - » Equipment selectors implement domain based filtering
- File Manager
  - » Only files pertaining to equipment in the current user's domain are visible
  - » Backup/restore tasks are limited to the applicable domain
  - » Imported files are visible to all users
- Active Events/Event History
  - » Only events pertaining to equipment in the current user's domain are visible
  - » All counters are computed according to the visible equipment
- Task Manager
  - » All tasks are displayed, but edit and run operations only work for equipment in the current user's domain

- Location Manager
  - » All locations are displayed, but only locations associated to the current user's domain can be edited

To open the User Domain Manager:

Select *Security Management* > *User Domain Manager* from the main menu. The User Domain Manager opens.

INFORMATION

The User Domain Manager is available only to users with administrator privileges.

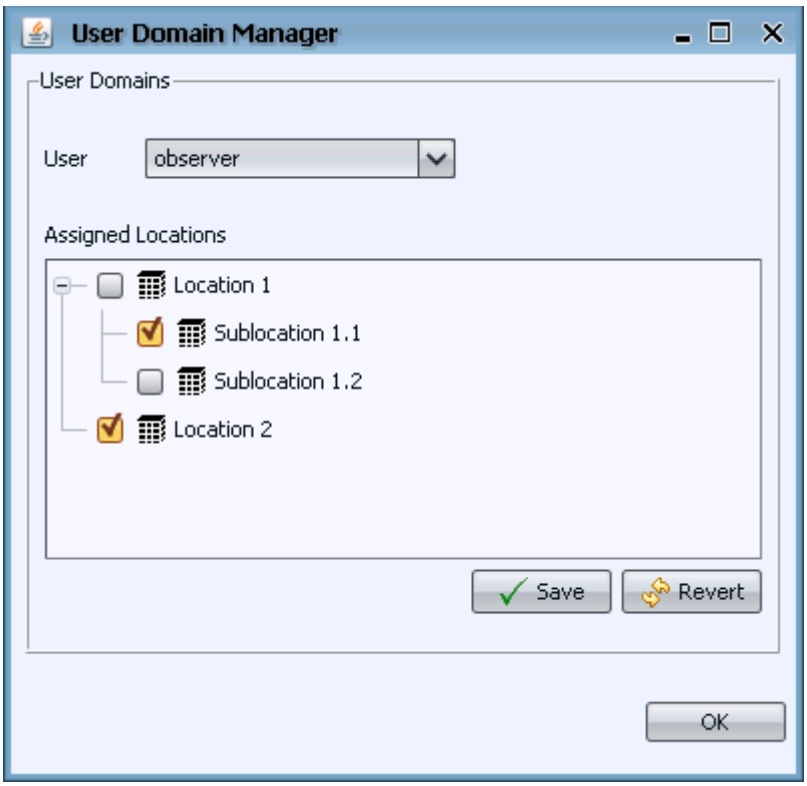

Figure 6-16: User Domain Manager

The User Domain Manager includes the following parameters:

Parameter	Description
User	Use the drop box to select a user you want to assign a domain. Administrators are not available.
Assigned Locations	Use the location tree to check the locations you want to be assigned to the user's domain.

Once you have defined a domain for a specific user, click the **Save** button to enable it. You can then switch to another user and start another domain definition process.

Clicking the **Revert** button resets the currently selected user's domain to the previously saved setting.

Appendix A - Watchdog

In This Chapter:

- "The Watchdog Application" on page 189

A.1 The Watchdog Application

Watchdog is an external application for monitoring the NMS server, LDAP and database servers (providing they reside on the same machine as the NMS). The NMS watchdog service is started when the NMS server is started.

In case the server or LDAP are down, Watchdog will try to restart them. The monitoring information and the actions involved in restarting the NMS server or LDAP are written in the *watchdog.log* file. The log is saved daily to
*<Management System Root>**<NMS installation folder>**watchdog**watchdog.log.YYYY-MM-DD*

Watchdog can be configured from the *watchdog.properties* file located in *<Management System Root>**<NMS installation folder>**watchdog*.

Watchdog logs can be automatically deleted by configuring the following two parameters (in red text) in the *log4j.xml* file located in
*<Management System Root>**<NMS installation folder>**watchdog*.

```
<?xml version="1.0" encoding="UTF-8" ?>
<!DOCTYPE log4j:configuration SYSTEM "log4j.dtd">

<log4j:configuration xmlns:log4j="http://jakarta.apache.org/log4j/">

  <appender name="LOG_SHRINK" class="com.bwanms.watchdogcommon.SizeShrinkAppender">
     <param name="File" value="${nms.root}/watchdog/log/dummy.log"/>
     <param name="MaxFileSize" value="10KB"/>
    <param name="MaxBackupIndex" value="1"/>
    <param name="RetainsDays" value="10"/>
    <!-- max log files size (ex.: 10KB, 20MB, 3GB, 100) -->
    <param name="MaxFilesSize" value="10MB"/>
    <layout class="org.apache.log4j.PatternLayout">
      <param name="ConversionPattern" value="%d %-5r %-5p [%c{2}] (%t:%x) %m%n"/>
    </layout>
  </appender>
      <appender name="FILE" class="org.apache.log4j.DailyRollingFileAppender">
   <param name="File" value="${nms.root}/watchdog/log/watchdog.log" />

     <!-- Rollover at midnight each day -->
       <param name="DatePattern" value="'.'yyyy-MM-dd"/>
```

```
    <layout class="org.apache.log4j.PatternLayout">
      <param name="ConversionPattern" value="%d{ABSOLUTE} %5p %c{1} - %m%n"/>
    </layout>
  </appender>

  <appender name="stdout" class="org.apache.log4j.ConsoleAppender">
      <layout class="org.apache.log4j.PatternLayout">
          <param name="ConversionPattern" value="%d{ABSOLUTE} %5p %c{1} - %m%n"/>
      </layout>
      <filter class="org.apache.log4j.varia.LevelRangeFilter">
          <param name="LevelMin" value="INFO" />
          <param name="LevelMax" value="INFO" />
      </filter>
  </appender>

  <root>
    <priority value="INFO" />
    <appender-ref ref="FILE"/>
    <appender-ref ref="LOG_SHRINK"/>
    <appender-ref ref="stdout"/>
  </root>

</log4j:configuration>
```

Appendix B - Remote Access

In This Chapter:

This appendix describes the alternative of accessing the NMS server via the Java Web Start software framework, without using the NMS client:

■ "WebStart" on page 192

B.1 WebStart

You can access the NMS directly using Java Web Start, by employing the following procedure:

1. Open a browser and type the following URL:

   ```
   http://<NMS IP address>:8080/webstart
   ```

2. The Download NMS Client page opens, allowing you to download a .jnlp file.

3. Once the download is complete, run it to start your application remotely.

INFORMATION

The Java Network Launching Protocol (JNLP) is part of the Java Runtime Environment (JRE). You need JRE 1.6 or higher in order to run the .jnlp file.

Appendix C - Connecting to an External LDAP Server

In This Chapter:

This appendix describes how to set up a connection to a typical LDAP server:

- "The LDAP Server Configuration File" on page 194
- "Open LDAP Configuration" on page 195
- "Active Directory Configuration" on page 196

C.1 The LDAP Server Configuration File

To set up the parameters for connecting to an external LDAP server:

1. Go to *<NMS path>\jboss\server\nms\deploy\bwanms.sar\conf*
2. Open the *external-ldap.properties* file.
3. Edit the LDIF entries in this file, so that they apply to the corresponding LDAP server.

See "Open LDAP Configuration" on page 195 and "Active Directory Configuration" on page 196 for examples on how to configure the external-ldap.properties file.

C.2 Open LDAP Configuration

The example below illustrates a typical configuration for connecting to an Open LDAP server (installed by default from the Solaris CD).

```
java.naming.factory.initial = com.sun.jndi.ldap.LdapCtxFactory
java.naming.provider.url = ldap://192.168.10.171:10389
java.naming.security.authentication = simple

rootDN = cn=Directory Manager
rootPW = nssecret

ldapSuffix = dc=testing,dc=ldap
principalCNPrefix = ou=
principalCN = People
principalDNPrefix = cn=
groupCNPrefix = ou=
groupCN = Groups
groupDNPrefix = cn=

userObjectClass = inetOrgPerson
groupObjectClass = groupofUniqueNames

usernameAttribute = cn
#accountNameAttribute = sAMAccountName
groupNameAttribute = cn
groupDescriptionAttribute = description
groupMembersAttribute = uniquemember
```

C.3 Active Directory Configuration

The example below illustrates a typical configuration for connecting to an Active Directory server.

```
java.naming.factory.initial = com.sun.jndi.ldap.LdapCtxFactory
java.naming.provider.url = ldap://192.168.10.120:389
java.naming.security.authentication = simple

rootDN = cn=Administrator,cn=Users,dc=nms,dc=local
rootPW = alpha

ldapSuffix = dc=nms,dc=local
principalCNPrefix = cn=
principalCN = Users
principalDNPrefix = cn=
groupCNPrefix = cn=
groupCN = Users
groupDNPrefix = cn=

userObjectClass = organizationalPerson
groupObjectClass = group

usernameAttribute = cn
accountNameAttribute = sAMAccountName
groupNameAttribute = cn
groupDescriptionAttribute = description
groupMembersAttribute = member
```

Appendix D - Google Earth Management

In This Chapter:

The following sections describe how you can visualize your network elements in Google Earth:

- "Connecting Google Earth to the NMS" on page 198
- "Viewing the Network Elements in Google Earth" on page 199

D.1 Connecting Google Earth to the NMS

The NMS server maintains information regarding the network elements' locations in a Keyhole Markup Language based (.kml) file. By linking to this file, Google Earth can use the information within to display your network's topography. For this purpose you need a computer with:

- Google Earth installed
- Access to the Internet
- Access to the NMS server

INFORMATION

It is not required for the NMS server itself to run on a computer with Internet access.

To populate Google Earth with the network elements defined in the NMS:

1. Open Google Earth
2. Go to Add > Network Link.
3. In the New Network Link window that opens, type the following path in the Link field:

   `http://<NMS path>:8080/bwanmsws/load.kml`

4. Fill in the remaining Google Earth options according to your preferences and click OK when done.

D.2 Viewing the Network Elements in Google Earth

Once Google Earth is synchronized with the NMS server, all viewable network elements will be displayed in the My Places section. The following network elements are visible in Google Earth:

- Network elements supporting GPS cards or the Chain Manager feature
- Network elements with latitude/longitude coordinates defined in Network Element Editor

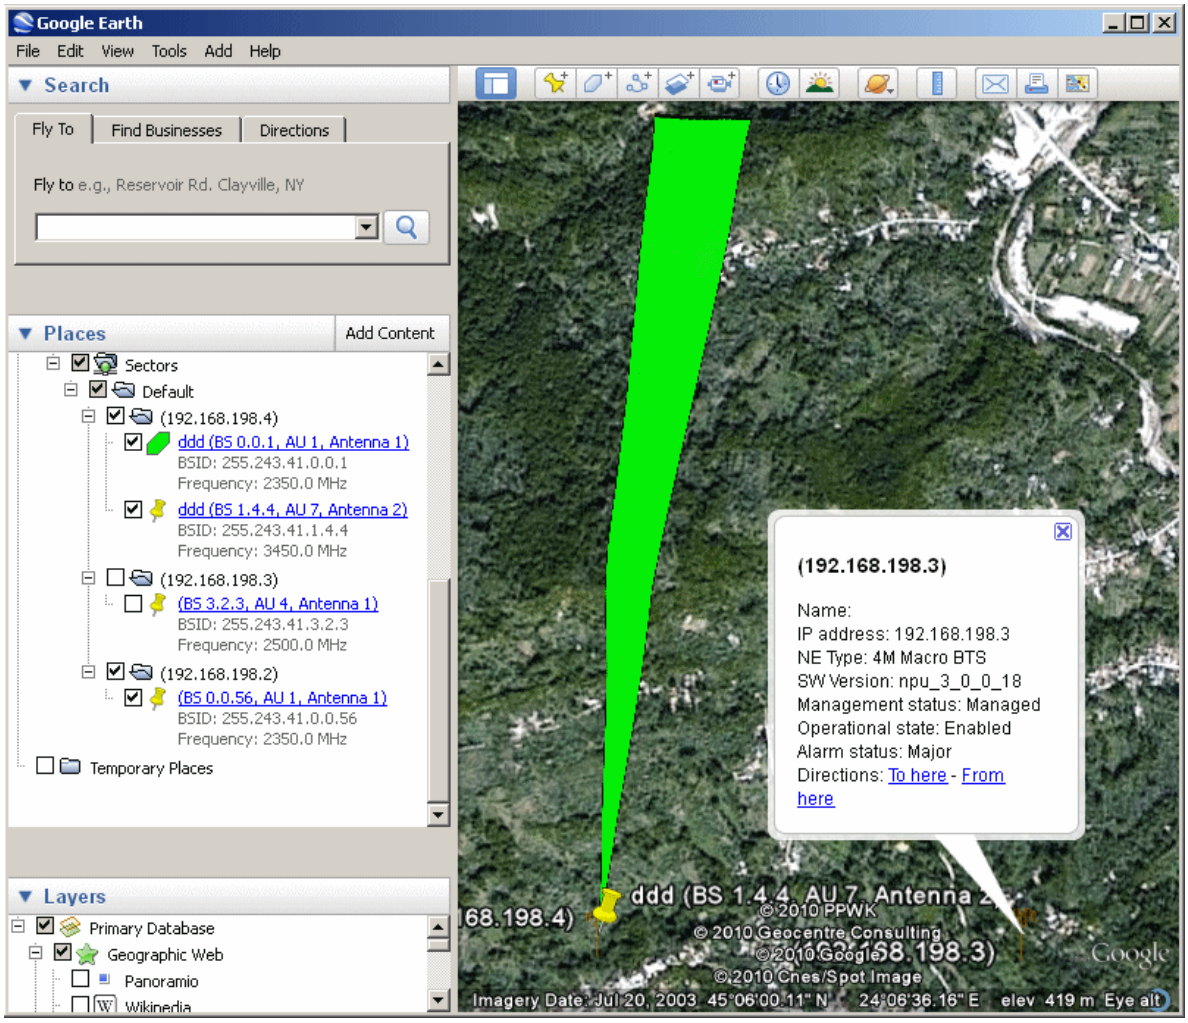

Figure D-1: Network Elements Displayed in Google Earth

When clicking on a network element, either in My Places or on the map, a callout containing information on the network element is displayed. The displayed information includes:

- Name, IP address, Type, Software version, Management status, Operational state - As displayed in Equipment Manager
- Alarm status - The network element's highest order alarm currently displayed in the Active Events manager. This alarm's color code will also determine the network element's icon color.

Where applicable, sector coverage information is also displayed by highlighting the covered area on the map.

Appendix E - SNMP Compatibility

In This Chapter:

This appendix lists the SNMP versions supported by each device

E.1 SNMP Version Compatibility

Each device managed by AlvariSTAR may supports one or more SNMP versions:

Device Driver	SNMP v1	SNMP v2C	SNMP v3
4Motion	-	X	-
BreezeMAX FDD/TDD	X	-	-
BreezeMAX DM	X	-	-
BreezeACCESS Family	X	-	-
BreezeMAX Extreme	-	X	-
BNB 300	X (only read)	-	X
Outdoor Cabinet	X	-	-
AAA Server	X	X	X